


SIMPA

嵌入式平面爐
Built-in Hob

使用及安裝說明書
User and Installation Instructions

型號 Model
UZB62GT

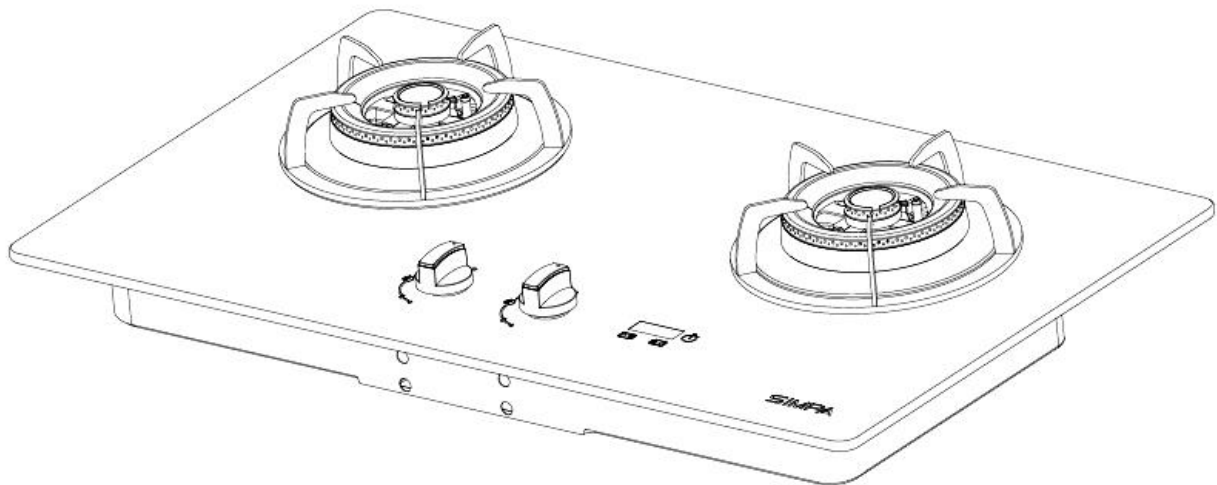

香港煤氣適用
For Hong Kong Town Gas

目錄

重要安全指示	第 1 頁
安裝指示	第 3 頁
操作指示	第 5 頁
清潔及保養	第 9 頁
故障處理.....	第 10 頁
規格	第 12 頁

注意!

根據香港氣體安全條例，任何氣體裝置工程，包括爐具和接駁喉管的安裝，必須由註冊氣體裝置技工執行，而該技工已於相關的氣體工程類別註冊及受聘於註冊氣體工程承辦商。

重要安全指示

以下指示對爐具的安全操作十分重要，請詳細閱讀，如有查詢或需要維修服務，請致電 24 小時客戶服務熱線 2880 6988。

安裝

1. 使用認可印有機電工程署批准標記(例如：機電工程署批准 EMSD APPROVAL GTXXXX) 的氣體接駁喉管連接爐具，或使用機電工程署接納的其他恰當方法。
2. 必須安裝穩壓器 (MDG ELITRE, EL-125)，並確定壓力設定為 1.0 千帕。
3. 當在櫥櫃面安裝嵌入式氣體煮食爐時，檢查面板進風口(如適用)沒有阻塞，以確保煮食爐在使用時操作正常。
4. 爐具必須安裝在空氣流通之房間內。
5. 不要將易燃物品、噴霧及壓縮容器置於爐具周圍及下方的廚櫃內。
6. 爐具與周圍可燃燒物料應保持 150 毫米以上的距離。

使用

1. 當懷疑洩漏氣體時，將窗戶打開，以及關閉煤氣錶閥。切勿操作任何電器或電掣開關。切勿在現場使用任何電話。在現場以外的地方，致電煤氣公司緊急事故熱線，電話：2880 6999。
2. 請參照說明書內指引正確使用爐具。
3. 爐具只供家用，切勿用於工商業用途。
4. 除了煮食外，切勿使用爐具作其他用途，例如烘乾衣物。
5. 使用爐具前，請開啟窗戶和排氣系統。
6. 不可讓兒童使用爐具。
7. 切勿讓爐具在無人看管下運作。
8. 切勿在爐頭加上錫紙碟，這會引致燃燒問題。
9. 只可使用原廠認可的配件，避免導致潛在的健康風險或財物損失，如一氧化碳中毒或火警。
10. 請確保爐頭蓋及爐頭身沒有變形，如有異常，請聯絡客戶服務安排更換。
11. 使用前，請確保爐頭蓋、爐頭身和爐架擺放正確，沒有傾斜。
12. 請確保爐頭火孔沒有被水或污漬堵塞。
13. 在一個爐架上，切勿放置超過10公斤的重量。
14. 爐架很重的，切勿掉下。
15. 不應按下點火旋鈕超過 10 秒。如爐頭於10 秒後仍未燃點，等待最少 1分鐘後，才再試燃點。
16. 請確保使用時火焰平均。
17. 注意爐面、爐頭及爐架的高溫。
18. 切勿使用直徑過大的平底煮食鍋具，避免溫度過高而造成燙傷及影響爐具的使用壽命。使用細小鍋具時，請將火力調低，避免火焰超出器皿鍋具底部。

		爐頭	最大平底煮食鍋具直徑 (毫米)
左爐頭			280
右爐頭			280

重要安全指示

19. 請確保鍋具穩定地放在爐架上，如器皿容易滑動，必須緊握它。
20. 面板是固定的，切勿移動。
21. 燒開水或煮湯時，注入的水量連湯料不可超過鍋具容量三分之二，溢出液體會影響燃燒和損壞爐具。
22. 使用小火時，不應急速打開爐具下方的廚櫃門，以免氣流弄熄爐火。
23. 烹調時，請盡量蓋上鍋具。而鍋具的手柄亦應轉向適當位置，避免受熱或碰撞。
24. 請勿在爐具附近使用噴霧產品。
25. 使用後，應將所有旋鈕設於關閉位置。
26. 此煮食爐的面板是用強化玻璃製造，較一般玻璃安全，但仍須注意以下事項，避免玻璃面板爆裂：
 - 經常清潔爐頭以保持火孔暢通，如滾瀉食物及汁液，應在爐具冷卻後儘快清潔爐頭。
 - 切勿以硬物撞擊或刮傷玻璃面板。
 - 切勿將重物或鍋具放置於玻璃面板上。
27. 儘管使用「定時煮食功能」煮食，亦切勿在無人看管的情況下使用氣體煮食爐。

保養

1. 定期檢查氣體喉管狀況，確保沒有扭結或裂縫，若發現損壞，請聯絡客戶服務更換喉管。
2. 讓爐具完全冷卻後，才可進行清潔。
3. 進行清潔時，應穿上保護手套避免割傷。避免接觸爐具的內部位置。
4. 清洗爐頭蓋及爐頭身後，用乾布將爐頭蓋完全抹乾，爐頭火孔不可留水份，以免影響燃燒。
5. 使用前和使用後，注意爐頭的狀況和清潔。以下不正常狀況會產生燃燒不良，進而引致爐具損壞。請確保採取相應措施，糾正有關問題。
6. 待爐具完全冷卻後，才可進行任何保養及清潔。請徹底清潔爐架或爐頭的水漬、湯汁及食物殘渣。風乾的殘留物可能會變成頑固污漬及導致爐架或爐頭變色。

不正常情況	處理措施
爐頭蓋和爐頭身變形	聯絡客戶服務更換零件。
爐頭蓋和爐頭身傾斜	將爐頭蓋和爐頭身重新放好，不可傾斜。
爐頭火孔被水堵塞	用布將爐頭蓋及爐頭身抹乾後，重新放好。
爐頭火孔被污積或溢出物堵塞	用溫和清潔劑和刷子清潔爐頭蓋及爐頭身，用布抹乾後，重新放好。

安裝位置

爐具須安裝在空氣流通之房間內，但切勿置於強風直接吹入的位置。附近不可放置易燃物料（如紙張、塑膠、油類）、可燃物料、噴霧及壓縮容器。爐具與周圍可燃物料應保持 150 毫米以上的距離。爐具上方須保留最少 650 毫米空間。安裝於爐具上方的抽油煙機，必須與爐架面保留最少 650 毫米的距離。如抽油煙機要求不同的安裝距離，則採用較大間距。爐具於煮食時的煙氣應經由抽油煙機排走。

此爐具適合安裝的開孔尺寸。

- **開孔尺寸：寬 670 x 深 350 毫米**

依照圖 1 在枱面預留開孔，枱面深度不少於 600 毫米。

若在嵌入式氣體爐具下安裝其他器具（如洗碗碟機、洗衣機）。請保留最少 10 毫米的距離。若下方器具的安裝指引要求不同的間距，應採用較大者。若在嵌入式氣體爐具下方設有會產生氣流的爐具或設備（例如：焗爐、乾衣機），必須加裝隔層板並以矽膠密封所有縫隙，避免氣流影響爐具運作。

安裝爐具

放置爐具於枱面的開孔後，用螺絲將底盤固定。將面板正確安裝於櫃面上，確保面板底部邊緣的膠條緊貼於櫃面上。面板裝妥後，再裝上旋鈕在正確位置。

氣體接駁

根據現行指定的標準，將氣體爐具連接供氣設施上，接駁前確保爐具符合所供應之氣體類型。此外，檢查煤氣供氣壓力是否在 1.5 千帕及穩壓器的壓力設定在 1.0 千帕。




注意

爐具的氣體接頭為 1/2 吋英制陽螺紋，使用已批准的氣體喉管接駁爐具。氣體軟喉長度不超過 2000 毫米。確保喉管沒有接觸任何活動部件或被扭曲和擠壓。

安裝完成後，檢查接駁後的氣密性。切勿使用明火作檢查。

安裝電池

使用前，必須正確裝上電池。若電池擺放錯誤，爐具便不能操作。

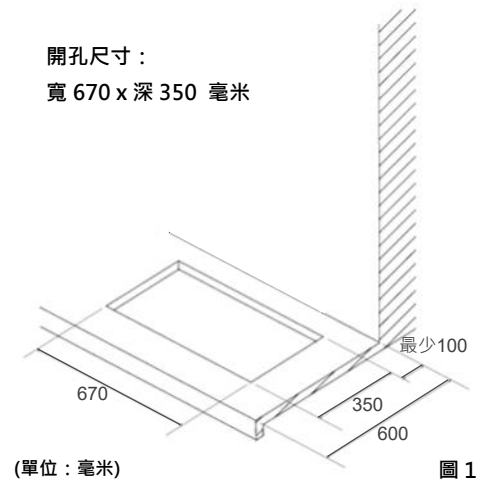



注意

正確接駁玻璃面板底部及爐內的接頭！


玻璃面板必須穩固安裝在爐具底盤上！

- 將玻璃面板孔對準爐頭，然後固定。
- 將爐碟孔對準爐頭座、點火電極及熄火安全裝置。
- 使用螺絲上緊爐碟。

爐頭放置

使用前，確定以下配件已置於正確位置：


- 爐頭由外環爐頭蓋、芯火爐頭蓋及爐頭身組成。
- 將爐頭蓋及身放置在爐頭座上，放置時請勿傾斜。
- 將外環爐頭蓋的定位針應對準爐頭身的定位槽。

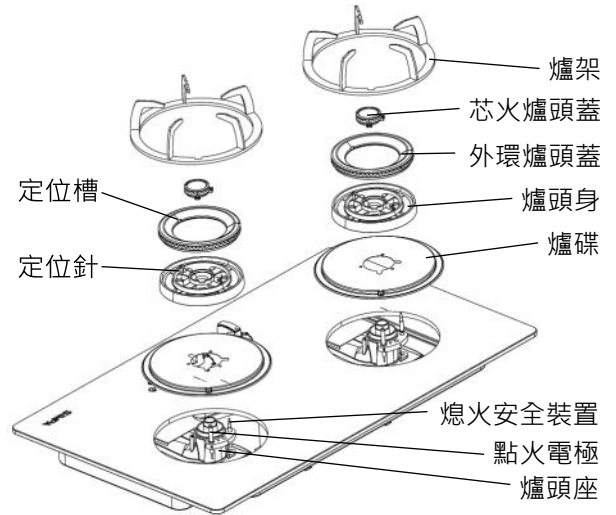


不要在爐頭錯誤放置的情況下使用爐具。

- 若爐頭未放置正確，會導致無法點火。
- 火焰不均和回火會導致不完全燃燒、一氧化碳中毒或爐頭變形。
- 火焰進入爐具內，會導致損毀。


芯火爐頭蓋傾斜

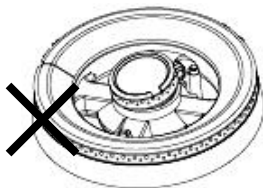

外環爐頭蓋傾斜

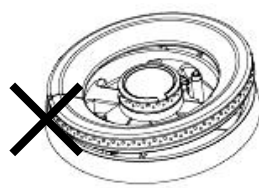

爐頭身傾斜

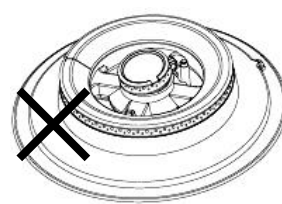

爐架放置



使用前，確定以下配件已置於正確位置。

- 將爐架定位槽對準爐碟的定位針後，平放爐架。





不要在爐架錯誤放置的情況下使用爐具。錯誤放置爐架有機會導致鍋子不穩，並引致危險。


爐架錯誤放置

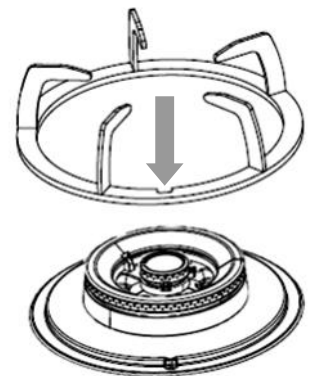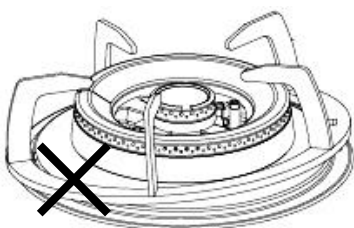

爐具介紹

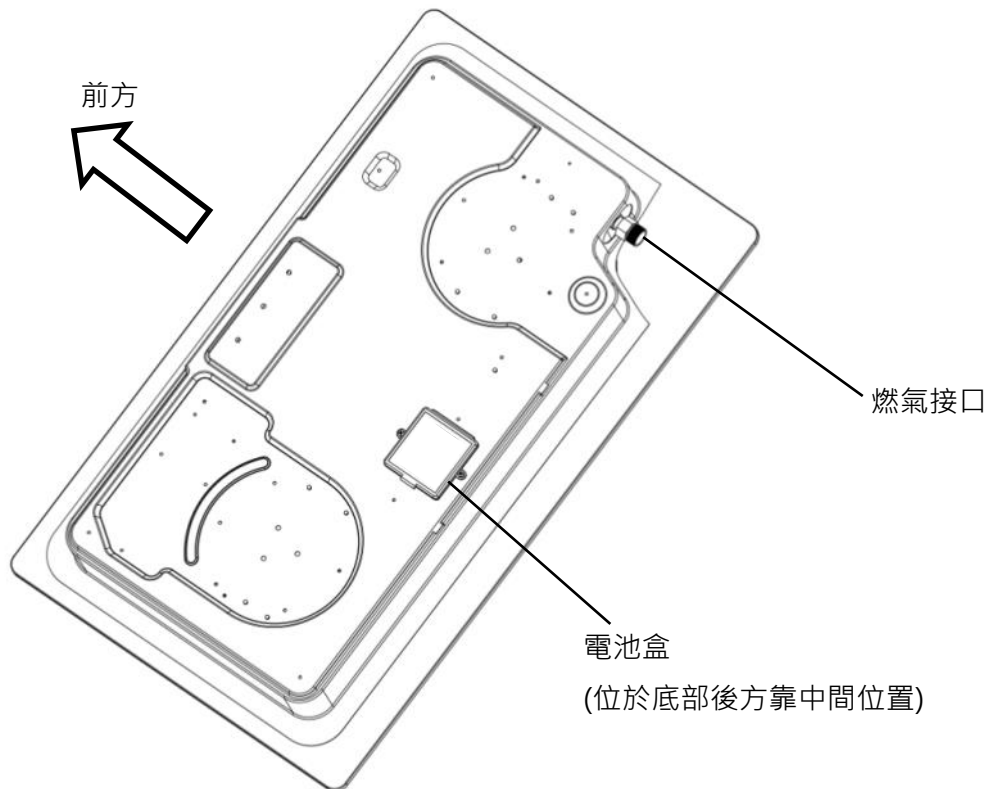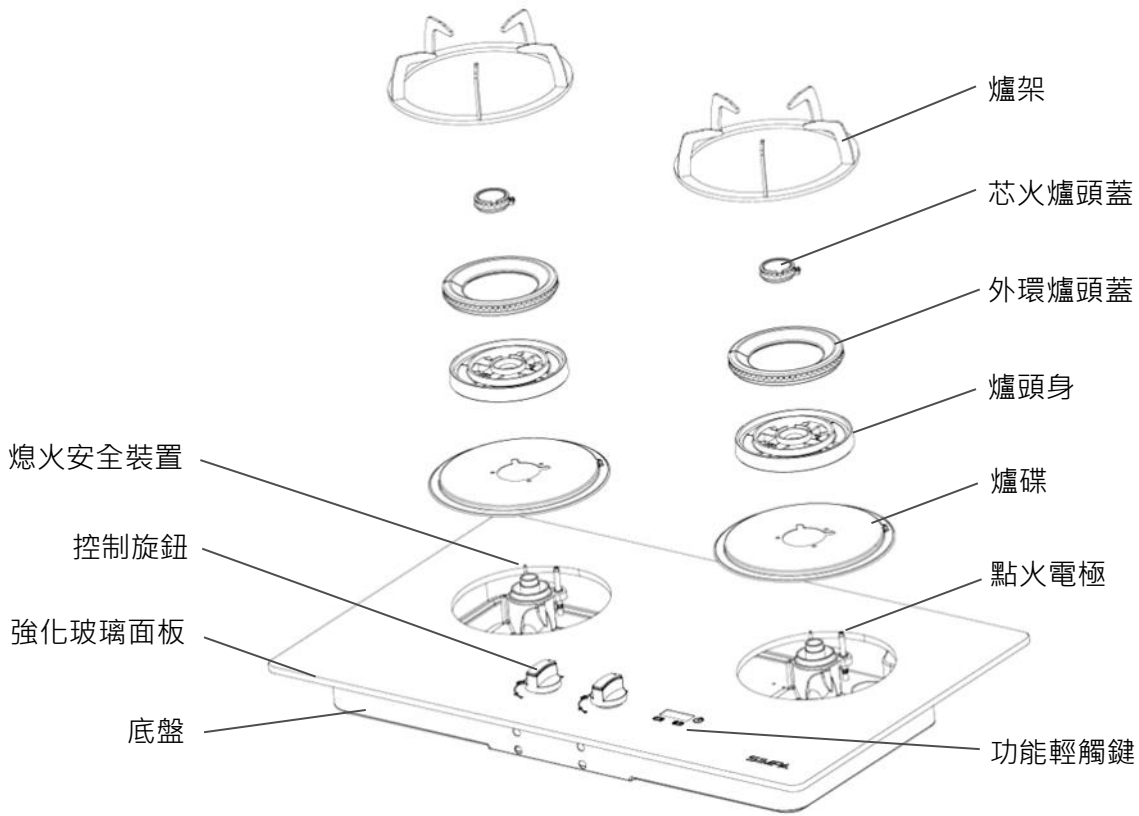

顯示器

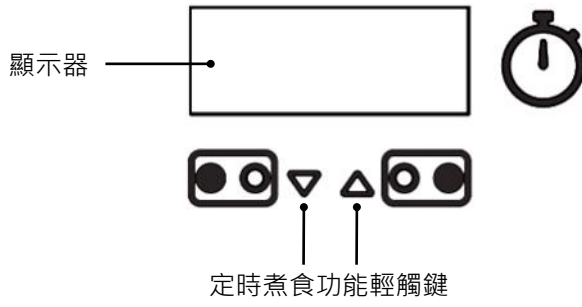

旋鈕及標示

點燃位置 / 最大火力位置	中火位置	中火位置	最小火力位置	關閉位置

The table illustrates five positions of a circular control knob. Each diagram shows the knob's dial with a horizontal line indicating the current setting. The positions are: 1. Ignition/Maximum power (horizontal line at the top), 2. Medium power (diagonal line from top-left to bottom-right), 3. Medium power (diagonal line from top-right to bottom-left), 4. Minimum power (diagonal line from top-left to bottom-right, lower angle), and 5. Off position (vertical line at the top).



注意

- 於爐具運作約 30 分鐘後，爐具玻璃面板、輕觸鍵及旋鈕部分有機會因爐火熱力而變熱。如需使用旋鈕，可以濕布降溫後使用。

點燃爐頭

完全按下旋鈕同時逆時針方向轉動旋鈕至點燃位置，點火電極會發出火花點燃爐頭。放開旋鈕後，確定火焰維持。



注意

- 如爐具長時間未有使用，於首次點燃時，有機會因喉管內含有空氣而未能令爐頭點燃成功。
- 如爐頭未能燃點，將旋鈕轉至關閉位置。等待最少 1 分鐘後，重複上述點燃步驟至成功點燃爐頭。請勿維持按下旋鈕超過 10 秒。

火力調節

爐頭點燃後，可按烹調所需轉動旋鈕調節火力。請緩慢調節火力。最小火力位置在逆時針轉動方向的盡頭。



注意

- 使用小火時，不應急速打開爐具下方的廚櫃門，以免氣流弄熄爐火。
- 在調較最大火力至接近中火時，若發現外環火焰不穩定(微弱或熄滅)，請立即調大火力，直至外環火焰穩定，才繼續使用；或調小火力，使用芯火。
- 在調較火力時，有機會因火力的轉變令爐頭內的氣體瞬間燃燒而出現「撲」聲，此屬正常現象。

關閉爐頭

將旋鈕轉動至關閉位置。



注意

- 關閉爐頭時，有機會因殘留在爐頭內的氣體瞬間燃燒而出現「撲」聲，此屬正常現象。

操作指示

功能

● 連續煮食自動熄火功能 (沒有使用定時煮食功能)

為避免忘記關火，連續使用約 3 小時後，爐火會自動熄滅，蜂鳴器亦會響起通知。請將旋鈕轉至關閉位置。若要繼續使用，須重新點燃爐頭。

● 定時煮食功能




注意

- 儘管使用定時煮食功能煮食，但切勿在無人看管的情況下使用氣體爐具。

功能設置

1. 點燃爐頭及啟動功能


- 按下及逆時針轉動旋鈕點燃爐頭，顯示器中會顯示電池電量。
- 輕觸左邊爐頭標誌來啟動「左爐頭」定時煮食功能，維持 3 秒，時間顯示為「01」；或
- 輕觸右邊爐頭標誌來啟動「右爐頭」定時煮食功能，維持 3 秒，時間顯示為「01」。
- 若顯示時間後未有其他操作，定時煮食功能開始。
- 如電池餘量低，電池圖案只剩下邊框及閃爍，請更換電池。

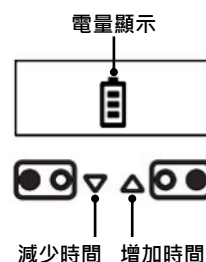


2. 時間設定

- 顯示為「01」後，輕觸三角形功能鍵設置時間。
- 右邊三角形功能輕觸鍵 (上升功能鍵) 為增加設定時間。
- 左邊三角形功能輕觸鍵 (下降功能鍵) 則為縮減設定時間。

選擇「左爐頭」定時煮食功能

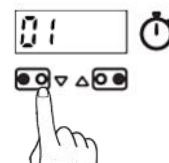


選擇「右爐頭」定時煮食功能

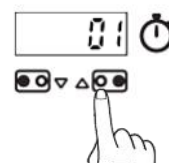

最長時間設置	3 小時	
最短時間設置	1 分鐘	
時間設置間距 (長按)	於 0 - 30 分鐘內	設置間距 1 分鐘
	於 30 - 80 分鐘內	設置間距 5 分鐘
	於 80 - 180 分鐘內	設置間距 10 分鐘

- 設置完成後，顯示器上的時間會閃爍 5 次，倒數計時將自動開始。


定時煮食功能進行中

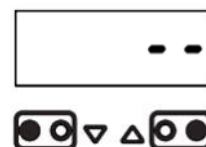

3. 時間倒數及結束

- 定時煮食功能啟動時，顯示器將轉換為節能模式。於節能模式下，顯示器會熄滅，每相隔 10 秒顯示「--」，表示定時煮食功能進行中。
- 剩餘時間為 10 秒時，顯示器會出現倒數。
- 設定時間結束時，蜂鳴器每秒會發出 5 次嗶響聲，爐火隨即熄滅，顯示器顯示「En」作提示。
- 請將旋鈕轉至關閉位置。

定時煮食功能結束

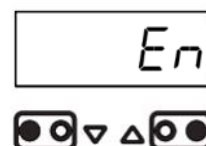

4. 取消設置

- 輕觸相關爐頭標誌啟動定時煮食功能，將時間改為「00」，定時煮食功能會被取消。



注意

- 待爐具完全冷卻後，才可進行任何保養及清潔。
- 清潔時，應配帶手套保護雙手。

為妥善保養爐具，遵照以下指示定期清潔爐具：

一般

- 請勿使用蒸氣清潔爐具。
- 使用適當的非研磨及非腐蝕性清潔劑清潔金屬及搪瓷部份，避免使用含氯清潔劑（如漂白劑）。
- 避免酸性或鹼性物質（如醋、鹽水、檸檬汁等）殘留在爐具。
- 煮食時如有液體溢出，應待爐具冷卻後儘快清理。
- 定期檢查熄火安全裝置及點火電極，如有污物黏附，可使用軟刷將污物去除。
- 不應接觸爐具內部零件。
- 經常檢查氣體喉管情況，如發現有損壞，請致電客戶服務更換。

清潔爐具

- 定期使用暖水及清潔劑清洗爐頭蓋及爐頭身，將污漬去除，並保持爐頭火孔暢通。
- 清潔後須完全抹乾爐頭蓋及爐頭身，並檢查爐頭火孔沒有被堵塞。
- 將爐頭蓋及爐頭身放回正確位置，不可傾斜或反轉。
- 煮食時滾瀉的食物或液體，必須以乾布清潔。



注意

- 於重新點火前，請將旋鈕轉回關閉位置。

如爐具出現異常或故障，應先關火。請先確保爐具完全冷卻後，才進行任何故障處理。如採取以下處理方法後仍然無效，請致電 24小時客戶服務熱線2880 6988 安排維修。

故障	原因	處理方法
1.沒有點燃火花	電池已耗盡。	更換電池。
	電池擺放錯誤。	正確裝上電池。
	點火電極上有污垢或沾濕。	清理及抹乾點火電極。
2.沒有爐火	未開啟煤氣錶閥及 / 或爐具供氣閥。	完全開啟煤氣錶閥及 / 或爐具供氣閥。
	喉管內含有空氣。	重複點火至喉管內空氣完全排出。
	錫紙碟阻塞爐頭。	除去錫紙碟。
	點火電極上有污垢或沾濕。	清理及抹乾點火電極。
3.不能保持爐火	熄火安全裝置上有污垢。	清理熄火安全裝置。
	未完全按下旋鈕或旋鈕沒有轉至點燃位置。	按下旋鈕及轉至點燃位置。
4.使用中熄火	熄火安全裝置上有污垢。	清理熄火安全裝置。
	爐火過弱被風吹熄，熄火安全裝置啟動。	旋鈕轉至關閉位置。等待 1 分鐘，重新點火。
	連續煮食自動熄火安全裝置啟動。	旋鈕轉至關閉位置。若要繼續使用，重新點火。
	防高溫保護裝置啟動。	旋鈕轉至關閉位置。等待 1 分鐘，重新點火。
	使用小火時，急速打開爐具下方的廚櫃門。	旋鈕轉至關閉位置。等待 1 分鐘，重新點火。
5.黃火	爐頭蓋及爐頭身有污垢。	使用暖水及清潔劑清洗爐頭蓋及爐頭身。抹乾後放好，重新點火。
6.火焰不穩定	爐頭蓋及爐頭身變形。	聯繫客戶服務更換零件。
	爐頭蓋及爐頭身擺放不正確。	旋鈕轉至關閉位置。待爐具冷卻後，重新放好爐頭蓋及爐頭身，並重新點火。
7.鬆開旋鈕後，點燃火花仍然持續	為方便點燃爐頭，點燃火花會維持最多 5 秒。	屬正常，不需處理。
8.使用中出現異常聲響	爐頭蓋及爐頭身擺放不正確。	旋鈕轉至關閉位置。待爐具冷卻後，重新放好爐頭蓋及爐頭身，並重新點火。
9.調較火力或關火時出現「撲」聲	殘留在爐頭內的氣體瞬間燃燒。	屬正常，不需處理。

故障處理



注意

- 自動關火後，請將旋鈕轉回關閉位置。
- 如旋鈕未有轉回關閉位置，電池壽命亦會縮短。

故障代碼	原因	處理方法
E1	連續煮食自動熄火安全裝置啟動	請將旋鈕轉回關閉位置。 如需繼續使用，請確保房間通風良好後，等待最少 1 分鐘，再次點燃爐頭。
E2	防高溫保護裝置啟動	
E3	防高溫保護裝置異常	
E4	電池耗盡通知	更換兩枚新的 D 型鹼性電池。

規格

型號		UZH62GT	
基本規格	爐具類別	氣體煮食爐	
	安裝方式	嵌入式	
	氣體種類	香港煤氣	
	供氣壓力 (千帕)	1.5	
	穩壓器出口壓力 (千帕)	1.0	
	氣體接駁	1/2 吋英制陽螺紋	
	點火裝置	快易電子點火	
	爐頭數目	2	
	額定熱負荷 (千瓦)	左爐頭	5.0
		右爐頭	5.0
		總	10.0
	面板物料	強化玻璃	
	面板厚度 (毫米)	8.0	
	爐具尺寸 - 高 x 闊 x 深 (毫米)	底盤至廚檯面	66 x 750 x 450
		底盤至爐面	74 x 750 x 450
		底盤至爐架	133 x 750 x 450
	開孔尺寸 - 闊 x 深 (毫米)	670 x 350	
	面板尺寸 - 闊 x 深 (毫米)	750 x 450	
	重量 (千克)	14.2	
電源供應	1.5 伏特 D 型鹼性電池 (2 枚)		
耗電量 (瓦)	-		
安全裝置	熄火安全裝置	熱電偶式	
	防高溫保護裝置	熱敏電阻式	
	連續煮食自動熄火安全裝置	3 小時	
功能	定時煮食功能	最長 3 小時	

Contents

Important Safety Instructions	P.	1
Installation Instructions	P.	3
Operation Instructions	P.	5
Cleaning and Maintenance	P.	9
Troubleshooting	P.	10
Specifications	P.	12

Attention!

According to the Gas Safety Ordinance of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors.

Important Safety Instructions


The following instructions are very important to safe operation of gas appliance. Please read through them carefully. Please contact 24-Hour Customer Service Hotline on 2880 6988 for enquiry and services.

Installation

1. Use approved gas tubing bearing EMSD approval marking (such as: 機電工程署批准 EMSD APPROVAL GTXXXX) for connection to appliance or other appropriate methods accepted by EMSD.
2. Fix the accompanied gas governor (MDG Elitre EL-125). Ensure that the pressure setting is 1.0kPa.
3. When installing gas appliance on top of kitchen cabinet, check that the air-intake opening at top plate (if applicable) is not blocked in order to ensure proper operation of the gas appliance.
4. Install the gas appliance in a well-ventilated room.
5. Do not store any flammable materials, sprays or pressurized containers near and inside the kitchen cabinet below appliance.
6. The appliance should be installed with a distance of more than 150mm away from surrounding combustible materials.

Operation

1. In case of suspected gas leak, open windows and shut off gas meter valve. Do not operate any electric appliances or switches. Do not use any phones on site. Contact Towngas Emergency Hotline on 2880 6999 with a phone outside the premises.
2. Please use the appliance properly according to the operating instructions.
3. This appliance is designed for domestic use only. Do not use it for commercial purposes.
4. Do not use appliance for any purposes other than cooking, e.g. drying clothes.
5. Open windows and turn on ventilation system before operating the appliance.
6. Do not allow kids to use appliance.
7. Do not leave operating appliance unattended.
8. Do not add aluminum discs to burners. This will incur combustion problem.
9. Use the original manufacturer approved accessories only to avoid possible risks to health or property, such as carbon monoxide poisoning or fire.
10. Ensure that burner cap and burner body are not deformed. Contact Customer Service to replace the parts if deformation is found.
11. Before use, ensure the burner cap, burner body and pan supports are in correct position and are not tilted.
12. Ensure that flame holes of burners are free from water and dirt.
13. Do not put weight exceeding 10kg on each pan support.
14. Pan support is heavy. Do not drop it.
15. Do not press the rotary knob for more than 10 seconds. If the burner is not ignited after 10 seconds, wait at least 1 minute before making further attempt.
16. Make sure that flame condition is uniform during operation.
17. Heed high temperature of top plate, burners and pan supports.
18. Do not use flat bottom utensil with too large diameter to avoid the risk of scald by high temperature and reduce the service life of the appliance. When using small utensil, reduce flame power that flame does not escape from utensil bottom.

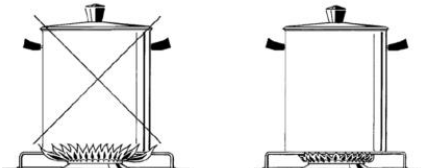	Burner	Maximum Diameter of Flat Bottom Utensil (mm)
	Left Burner	280
	Right Burner	280

Important Safety Instructions

19. Ensure stability of utensil resting on pan support. Hold utensil firmly if it slips easily.
20. Top plate is fixed. Do not remove it.
21. Do not fill water including soup ingredients over two-thirds of utensil volume when boiling water or soup. Spilled liquid of boiling will affect combustion and damage the appliance.
22. When the appliance is operating at low flame, do not open underneath cabinet door rapidly; otherwise, flame may be extinguished by air draught.
23. Always use pots with covers and make sure that the handles of the pots are correctly positioned to avoid heating and collision of handles.
24. Do not use sprays near the appliance.
25. All knobs should be turned to off position after use.
26. The top panel of appliance is made of tempered glass which is safer than normal glass for this application. However, the following safety precautions should be noted in order to prevent the glass top panel from breaking:
 - Clean the burner frequently to maintain a clear gas passage of flame holes. Clean and tidy up the burner after spillage of food and liquid once the appliance cools down.
 - Do not scratch or impact the glass top plate with hard objects.
 - Do not place heavy objects or place cooking utensils on the glass surface.
27. Do not leave operating hob unattended even using the “Timer Cooking Function”.

Maintenance


1. Check condition of gas hose regularly. Ensure that it is free from kink or crack. Contact Customer Service to replace it if damage is found.
2. Allow the appliance to cool down completely before cleaning.
3. Wear glove to protect the hands from cut injury when cleaning the appliance. Do not touch any internal parts of the appliance.
4. Dry burner cap and burner body completely with dry cloth after washing. Flame holes of burner must be free from water lest combustion is affected.
5. Before and after use, notice the condition and cleanliness of burner. The following abnormal conditions will incur abnormal combustion and thus damage of the appliance. Ensure undertaking measures to rectify the problem accordingly.
6. Allow the appliance to cool down before performing any maintenance and cleaning. Please thoroughly clean water stains, soup and food residues on pan supports or burners. Dried residues may become tough stains and cause discoloration on the pan supports or burners.

Abnormal Condition	Handling Measure
Burner cap and burner body are deformed	Contact Customer Service to replace the parts.
Burner cap and burner body are tilted	Replace burner cap and burner body properly. Burner cap and burner body must not be tilted.
Burner flame holes are blocked by water	Dry burner cap and burner body with cloth and replace them properly.
Burner flame holes are blocked by dirt or cooking spillage	Clean burner cap and burner body with mild detergent and brush. Ensure that they are wiped dry before replacing them.

Installation Instructions

Installation Position

Install the appliance in a well-ventilated room, but do not install at the position of strong wind. Keep it away from any flammable objects (such as paper, plastic, oil), combustible, sprays or pressurized containers. The appliance should be installed with a distance of more than 150mm away from surrounding combustible materials. Allow 650mm or more clearance above appliance. Install a range-hood at a distance of not less than 650mm from the surface of pan support of appliance. If the range-hood requires a different installation distance, adopt the larger value. The combustion products of appliance shall be evacuated by means of range-hood.

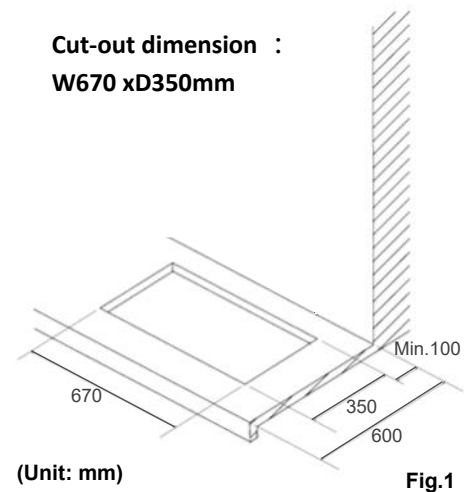

The appliance can be installed in below dimensions.

- **Cut-out dimension: W670 x D350 mm**
Reserve cut hole on bench-top according to Fig.1.
Depth of bench-top should be 600mm or more.

If another appliance (e.g. dishwasher, washer) is installed under the gas appliance, keep a clearance of at least 10mm from the bottom of the appliance. If the installation instructions of the appliance underneath require a different distance, adopt the larger value. If an airflow generating appliance or device (such as oven, clothes dryer) is to be installed under the built-in gas appliance, a partition shelf must be added and sealed with silicone gel. This prevents air draught affecting the appliance operation.

Appliance Installation

Position the appliance onto the bench-top opening. Secure the base tray with screw. Sealing gasket should be affixed around the entire periphery of top plate bottom. Position the top plate properly onto the bench-top. Then put the rotary knobs in correct position.

Gas Connection

Connect the gas appliance to the gas supply according to the prescribed standards in force and ensure that the appliance matches with the type of gas supply. Furthermore, check that the Town Gas supply pressure is 1.5 kPa and governor pressure is 1.0 kPa.



Attention

- **The gas connection of the appliance is 1/2" threaded male end. Use approved gas tubing for connecting to appliance. Flexible tubing must not be longer than 2000 mm. Make sure that the tubing does not touch any moving parts and is not kinked or compressed.**
- **After installation, check gas soundness of piping. Never use naked flame for checking.**

Installation of Battery

Before use, the battery must be installed correctly. Appliance does not operate if batteries are places wrongly.

Installation Instructions



Attention


**Connect cable connectors at bottom of glass top plate and base tray correctly!
Fix glass top plate securely to base tray of appliance!**

- Position glass top plate hole with burner and fix properly.
- Position burner discs hole with burner base, ignition electrode and flame failure safety device.
- Fix the drip pan with screws.

Placement of Burner

Make sure that the following parts are fitted properly before use.


- Burner is composed of outer ring burner cap, simmer burner cap and burner body.
- Place the burner caps and body onto the burner base without tilting.
- Locating pin of outer ring burner cap should be matched with the locating notch of burner body.

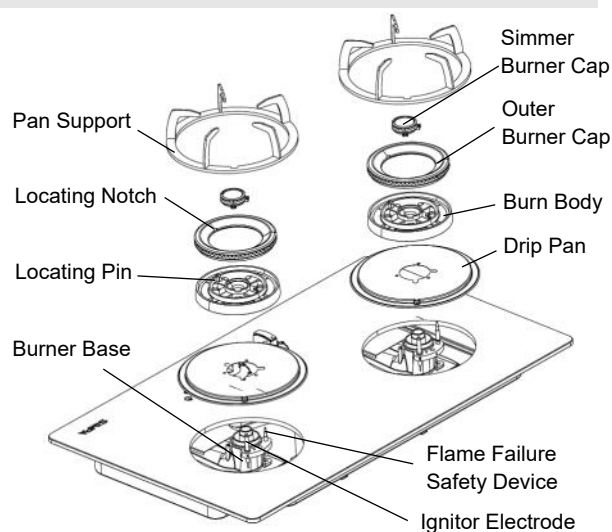


Do not use appliance with burner cap and burner body positioned improperly.

- It may not be ignited if burner cap and burner body are not fixed properly.
- It may cause incomplete combustion, risk of carbon monoxide poisoning and burner deformation, due to uneven flame shape and lighting back.
- It may cause flame getting into the appliance and damage it.


Tilted simmer burner cap body

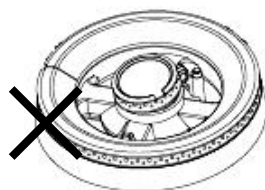

Tilted outer ring burner cap

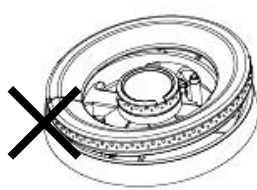

Titled burner body

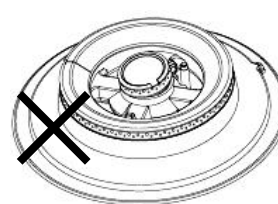

Placement of Pan Support



Make sure that the following parts are fitted properly before use.

- Place the pan support in line with drip pan.





Do not use appliance with pan support positioned improperly. Due to improper fixing of pan support, cooking utensil may become unstable and cause hazard.

Improper placement of pan support

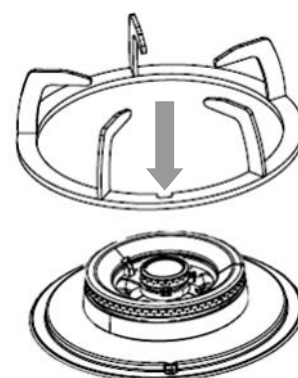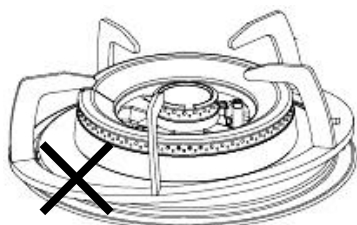


Operation Instructions

Appliance Descriptions

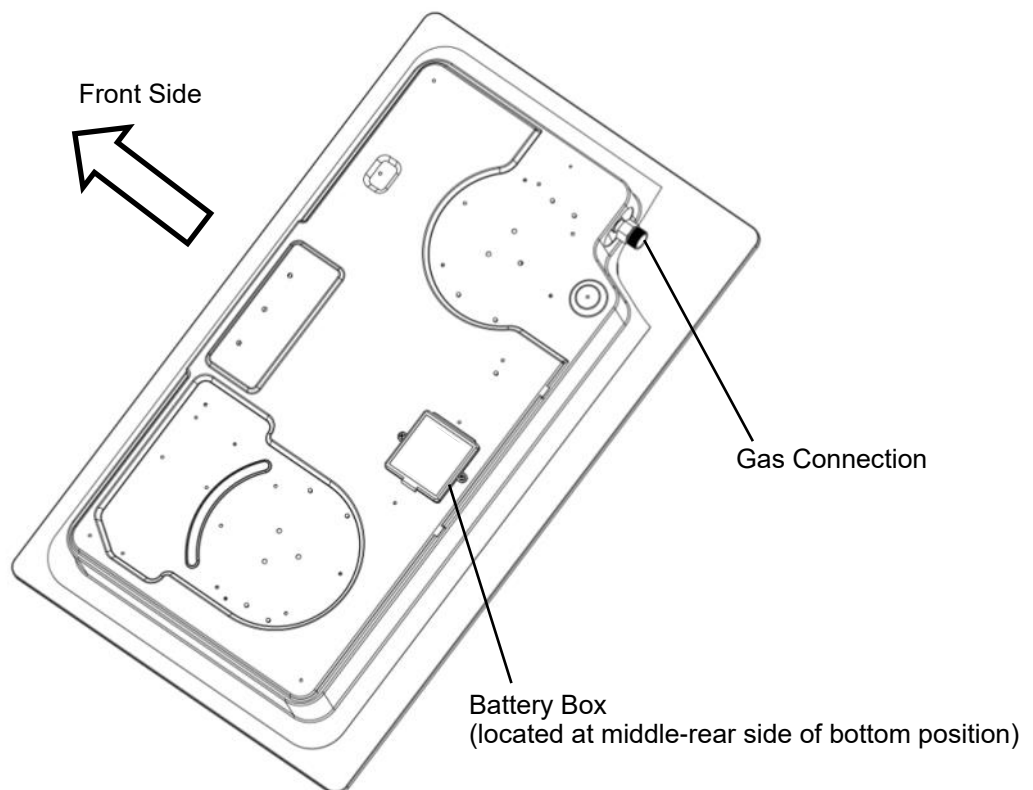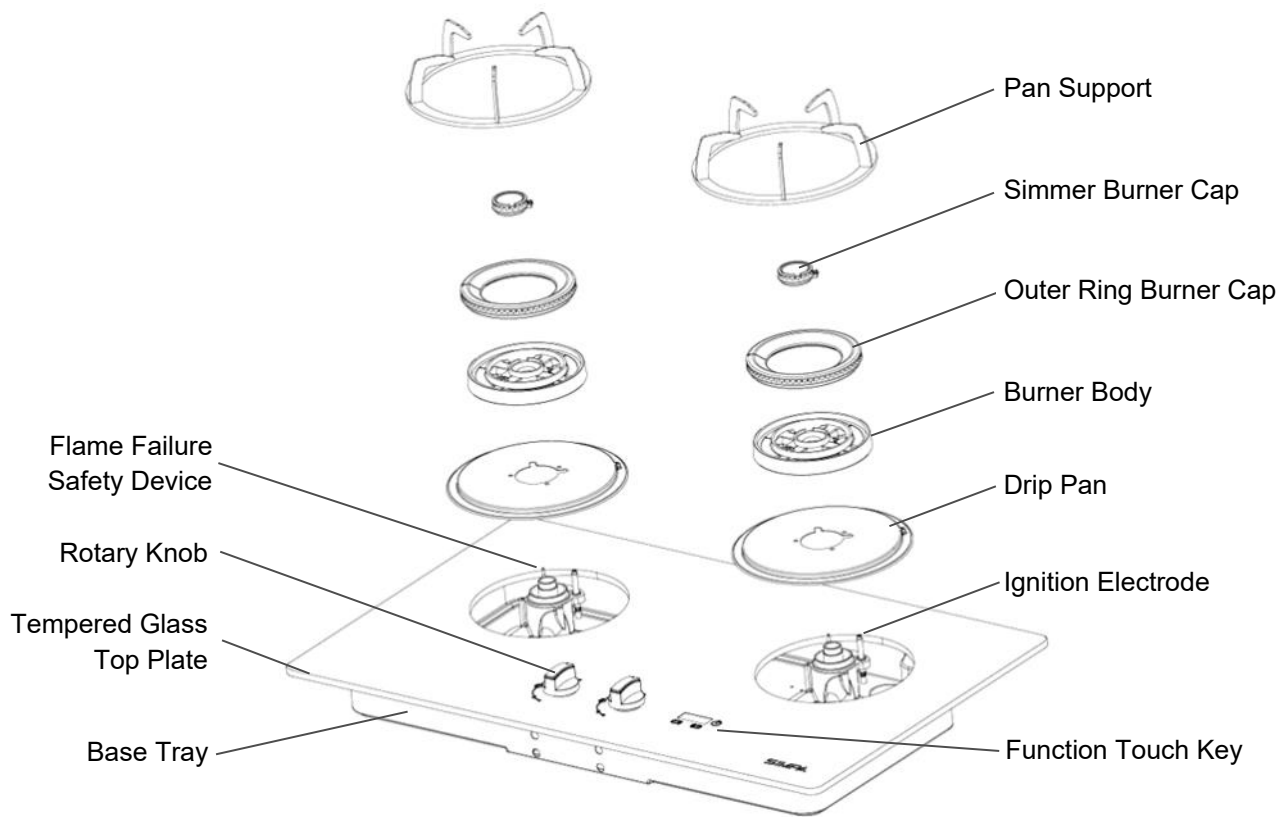

Operation Instructions

Display

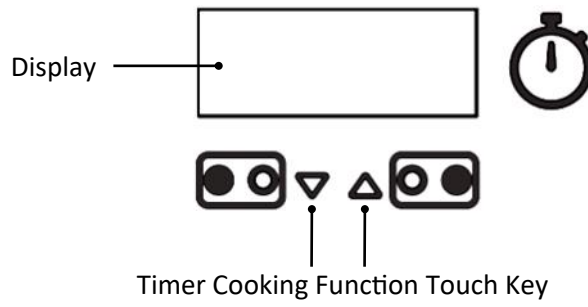

Rotary Knob and Indication

Ignition Position/ Maximum Flame Position	Medium Flame position	Medium Flame position	Minimum Flame position	Off position

Operation Instructions



Attention

- When the appliance has been operated for 30 minutes, the glass top plate, touch key and rotary knobs of the appliance might become hot due to the heat from flame. In case of using the rotary knobs, please use a moisten towel to cool down before usage.

Ignition of Burner

Fully press and turn the rotary knob in anti-clockwise direction to ignition position. Electric sparks from ignition electrode ignite the burner. After releasing the rotary knob, make sure the flame persists.



Attention

- If the appliance has not been used for a long time, the first ignition may not succeed due to the trapped air in gas pipe.
- If the burner fails to ignite, turn the rotary knob to off position. Wait for at least 1 minute, repeat the above ignition procedures until success of burner ignition. Do not keep the pressing the rotary knob over 10 seconds.

Flame Control

After ignition, turn the rotary knob to adjust flame power according to cooking needs. Please adjust slowly. Minimum flame power is located at the end of anti-clockwise direction.



Attention

- When operating at low flame, do not open underneath cabinet door rapidly; otherwise flame may be extinguished by air draught.
- When adjust flame power from maximum close to medium, if flame of outer ring burner is found unstable (weak or extinguished), please adjust the flame power to maximum until flame of outer ring burner is stable, or reduce flame power and use flame of simmer burner.
- Pop sound might be generated during flame power adjusting due to instant combustion of gas remained in burner. This is a normal phenomenon.

Turning Off Burner

Turn the rotary knob to the off position.



Attention

- Pop sound might be generated during flame extinguishing due to instant combustion of gas remained in burner. This is a normal phenomenon.

Operation Instructions

Functions

- Continuous Cooking Automatic Flame Off Function (Not Using Timer Cooking Function)**
 To avoid forgetting to turn off the flame, flame will be off automatically after around 3 hours of continuous use. Buzzer will give beep sounds for notification.
 Please turn the rotary knob to off position. For continuous use, please ignite the burner again.
- Timer Cooking Function**




Attention

- Do not leave operating gas appliance unattended even using Timer Cooking Function to cook.**

Function Setting



1. Igniting Burner and Activating Function

- Press and turn the rotary knob to ignite burner. Battery power level will be shown on display.
- Touch the left burner icon and hold for 3 seconds to activate Timer Cooking Function. "01" will be shown as time; Or
- Touch the right burner icon and hold for 3 seconds to activate Timer Cooking Function. "01" will be shown as time.
- When there is no further action after showing the time. Timer cooking function will be started.
- When the battery power is low, battery logo display remains the battery frame only. Please replace with new batteries.

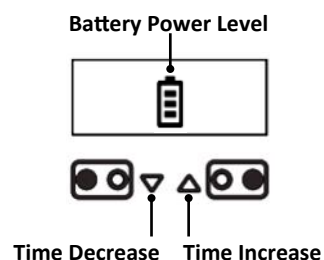

2. Time Setting

- When "01" is displayed, touch the triangle icon to set timer.
- Right triangle function touch key (Upward function key) to increase setting time.
- Left triangle function touch key (Downward function key) to decrease setting time.

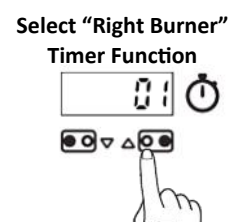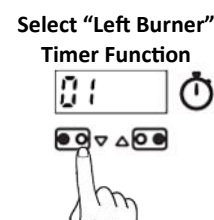


Maximum time setting	3 Hours	
Minimum time setting	1 Minute	
Time setting interval (Touch and hold)	Within 0 - 30 minutes	Set with 1 minute interval
	Within 30 - 80 minutes	Set with 5 minutes interval
	Within 80 - 180 minutes	Set with 10 minutes interval

- After setting, setting time will flash for 5 times, and count down will be started automatically.


3. Time Countdown & Time Up

- When Timer Cooking Function is activated, the display will be switched to Energy Saving Mode. Under energy saving mode, the display turns off, "--" will be shown in every 10 seconds, represents the working of the timer function.
- When remaining time becomes 10 seconds, display will show the count down.
- When the set time is up, buzzer gives 5 times beep sounds per second and flame goes out. "En" is displayed for notification.
- Turn the rotary knob to off position.

Timer function is working

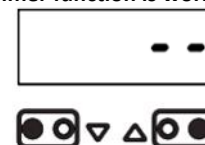

Timer function is ended

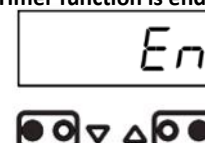

4. Cancel Setting

- Touch the corresponding burner icon, change the time to "00", timer function will be cancelled.

Cleaning and Maintenance



Attention

- **Allow the appliance to cool down before performing any maintenance and cleaning.**
- **Wear gloves to protect the hands while cleaning.**

To maintain the appliance properly, follow the below instructions to clean it regularly:

General

- Do not use steam cleaners for cleaning.
- The metal and enamelled parts must be cleaned with suitable non-abrasive and non-corrosive detergents.. Avoid using chlorine-based detergents (e.g. bleach) for cleaning.
- Avoid leaving acidic or alkaline substances on the appliance (vinegar, brine, lemon juice, etc).
- Clean and tidy up the burner after spillage of food and liquid once it cools down.
- Regularly check the flame failure safety device and ignition electrode. If stains get stuck at the devices, clean them with soft brush.
- Do not touch any internal parts of the appliance.
- Check the condition of gas tubing regularly. If damage is observed, contact Customer Service for replacement.

Cleaning Appliance

- Burner cap and body must be washed frequently with warm water and detergent, taking care to remove any grime and keep the flame holes of burner away from blockage.
- Dry the burner cap and body completely after wash and check all flame holes of burner are not clogged.
- Refix the burner cap and body at correct position. Ensure that they are not tilted or reversed.
- Any spilled food or liquid during cooking must always be removed by a dry rag.

Troubleshooting



Attention

Before restarting ignition, return the rotary knob to off position.

If abnormality or fault is observed, turn off flame. Ensure that the appliance cools down completely before undertaking remedial measures. If not effective after undertaking the following remedial actions, please contact 24-Hour Customer Service Hotline on 2880 6988 for services.

Fault	Cause	Remedy
1. No ignition spark	Batteries are consumed.	Replace batteries.
	Batteries are wrongly placed.	Place batteries correctly.
	Ignition electrode is dirty or wet.	Clean and dry ignition electrode.
2. No flame	Gas meter valve and/or appliance gas supply valve is turned off.	Open gas meter valve and/or appliance gas supply valve completely.
	Air is trapped inside gas pipe.	Repeat ignition until trapped air is removed.
	Burner is blocked by aluminium disc.	Remove aluminium disc.
	Ignition electrode is dirty or wet.	Clean and dry ignition electrode.
3. Flame does not persist	Flame failure safety device is dirty.	Clean flame failure safety device.
	Rotary knob is not fully pressed or not turned to ignition position.	Fully press and turn rotary knob to ignition position.
4. Flame off when using	Flame failure safety device is dirty.	Clean flame failure safety device.
	Small flame is blown off by wind. This activates the flame failure safety device.	Turn rotary knob to off position. Wait for 1 minute and restart ignition.
	Continuous cooking automatic flame off safety device is activated.	Turn rotary knob to off position. If further cooking is required, restart ignition.
	Overheat protection device of burner is activated.	Turn rotary knob to off position. Wait for 1 minute and restart ignition.
	When operating at low flame, open underneath cabinet door rapidly.	Turn rotary knob to off position. Wait for 1 minute and restart ignition.
5. Yellow flame	Burner cap and burner body have dirt.	Wash burner cap and burner body in warm water with detergent. Dry and replace them at correct position. Restart ignition.
6. Unstable flame	Deformation of burner cap and burner body.	Contact customer service to replace the parts.
	Incorrect placement of burner cap and burner body.	Turn rotary knob to off position. Replace burner cap and burner body correctly after appliance cools down and restart ignition.
7. Ignition sparks persist even after releasing rotary knob	Maintaining maximum 5 seconds of sparks to facilitate ignition.	Normal and no action required.
8. Abnormal noise when using	Incorrect placement of burner cap and burner body.	Turn rotary knob to off position. Replace burner cap and burner body correctly after appliance cools down and restart ignition.
9. Pop sound when flame adjusting or extinguishing	Instant combustion of gas remained in burner.	Normal and no action required.

Troubleshooting



Attention

- When the flame is extinguished automatically, make sure to turn the rotary knob to off position.
- If it is not turned to off position, battery life will be shortened.

Error Codes	Cause	Remedy
E1	Continuous cooking automatic flame off safety device activated	Turn rotary knob to off position. For continuous use, well ventilate the room and ignite the burner again after 1 minute.
E2	Overheat protection device activated	
E3	Overheat protection device abnormal	
E4	Batteries are consumed	Replace 2 new D-size alkaline batteries.

Specifications

Model		UZH62GT	
Basic Specifications	Appliance Type		Gas Cooking Hob
	Installation Type		Built-in Hob
	Gas Type		Hong Kong Town Gas
	Gas Supply Pressure (kPa)		1.5
	Governor Outlet Pressure (kPa)		1.0
	Gas Connection		1/2" BSP Male Thread
	Ignition Device		Fast-easy Electronic Ignition
	Number of Burner		2
	Rated Heat Input (kW)	Left Burner	5.0
		Right Burner	5.0
		Total	10.0
	Top Plate Material		Tempered Glass
	Top Plate Thickness (mm)		8.0
	Appliance Dimensions - H x W x D (mm)	Leg to Bench Top	66 x 750 x 450
		Leg to Top Plate	74 x 750 x 450
		Leg to Pan Support	133 x 750 x 450
	Cut-out Dimensions - W x D (mm)		670 x 350
	Top Plate Dimensions - W x D (mm)		750 x 450
	Weight (kg)		14.2
Power Supply Connection		1.5V D-size Alkaline Battery (2pcs)	
Power Consumption (W)		-	
Safety Device	Flame Failure Safety Device		Thermocouple Type
	Overheat Protection Device		Thermistor
	Continuous Cooking Automatic Flame Off Safety Device		3 hours
Functions	Timer Cooking Function		Max. 3 Hours

