


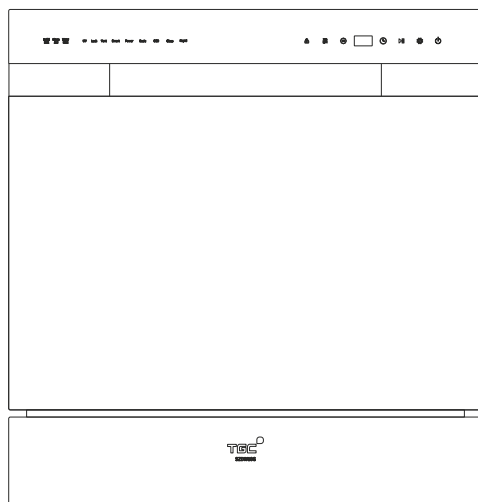

嵌入式洗碗碟機
Built-in Dishwasher

型號 : SZDW10G
Model

使用說明書
User Instructions



目錄

注意事項	第 2 頁
部件名稱	第 3 頁
安裝指引	第 5 頁
操作指引	第 9 頁
維修和保養	第17頁
故障處理	第18頁
技術規格	第20頁

注意事項

感謝閣下選用TGC產品!如有查詢或需要維修服務,請聯絡煤氣公司24小時客戶服務熱線2880 6988。

安裝附件

● 洗碗碟機隨機配置如下,安裝前請確認。

配置名稱	數量	配置名稱	數量	配置名稱	數量	配置名稱	數量	配置名稱	數量
水管	1條	安裝螺絲	2粒	裝飾蓋	4個	漏斗	1個	U型掛鉤	1個

為了防止人身傷害及財產損失,特別作出如下區分及標誌,根據危害,損害程度進行區分。



警告 表示如不注意,則有可能導致死亡或嚴重傷害的某種潛在危害情況。



注意 表示如不注意,則有可能導致輕微或中度傷害的某種潛在危害情況。

安裝注意事項



警告





- 安裝請與本公司聯絡,如果自行安裝,可能會因安裝不當而造成漏水,引發觸電或火災。
- 洗碗碟機周圍和下方切勿放置可燃物品,如紙張、塑膠等,與可燃物料距離須保留150毫米以上。
- 電源插座必須為有效接地的220V/50Hz三腳插座。
- 洗碗碟機電源插頭要完全插入至插座中。
- 嚴禁將洗碗碟機及電源插座安裝在可能受潮濕或被水淋濕的地方。
- 不得使用有破損的電源線,電源插頭或鬆動的電源插座。
- 不得損壞,彎曲,拉扯,纏繞電源線。電源線不得承載重物。
- 洗碗碟機應使用新的軟喉組件連接到水源,舊的軟喉組件不應重複使用。
- 裁剪扎線帶時,需用平口剪刀剪斷,以防將排水管及電源線戳破,導致漏水及漏電。
- 試行運作結束後,關閉水制,切斷電源。
- 包裝膠袋和包裝箱應放在兒童接觸不到的地方保存或棄置,防止兒童玩耍時導致意外窒息或傷害。



注意

- 請勿安裝在有可能結冰的場所(室溫0°C以下),否則會造成漏水。
- 洗碗碟機應平穩安裝在操作及保養方便的位置,且底板必須牢固,至少能承受90kg的重量,不得傾斜裝置。
- 搬運放置時應對應洗碗碟機側邊手把孔或從底部抬起,輕搬輕放,不可將櫃門拉把手位作搬運承重之用。
- 排水管請勿纏繞連接,以免影響排水效果。
- 安裝在硬水質的地區後,請調整水硬度,以免影響洗淨效果。


部件名稱

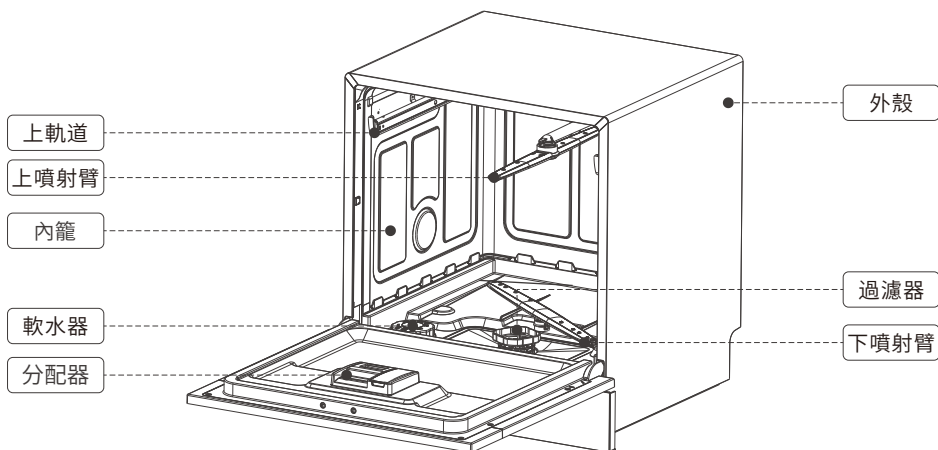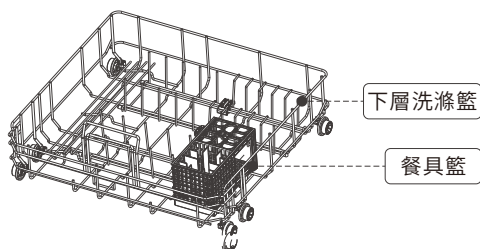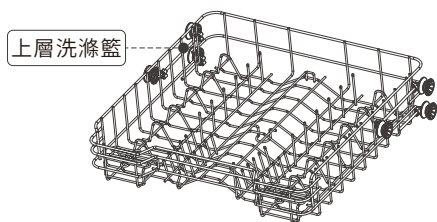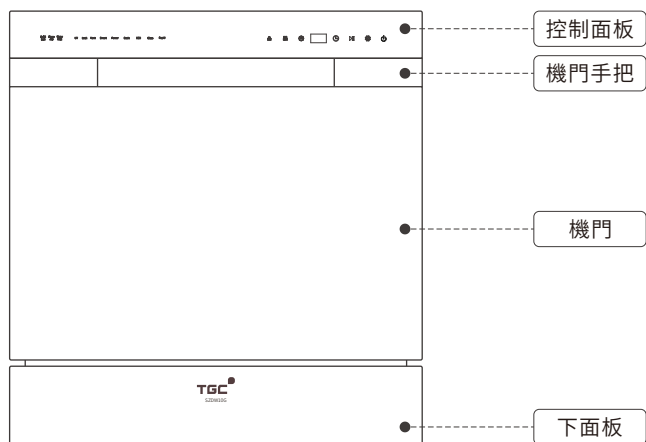


部件名稱

控制面板

● 控制面板左方顯示區

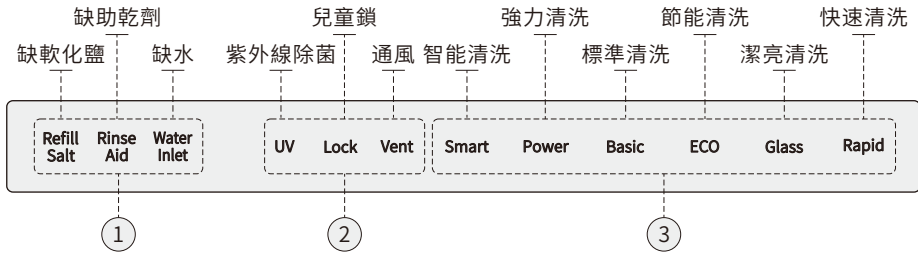

● 控制面板右方顯示區

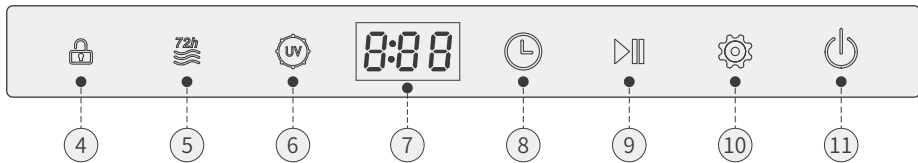

①	缺軟化鹽、缺助乾劑、缺水提示燈	當洗碗碟機缺軟化鹽、缺助乾劑或缺水時，提示燈會亮起
②	功能顯示區	顯示選取的附加功能
③	清潔模式顯示區	顯示選取的清潔模式
④	兒童鎖制	兒童鎖功能開啟或解除
⑤	通風功能制	通風功能開啟或解除
⑥	紫外線除菌功能制	紫外線除菌功能開啟或解除
⑦	時間顯示區/故障碼顯示區	清潔模式運作或延遲啟動時間/故障碼顯示
⑧	延遲啟動功能制	延遲啟動功能開啟或解除
⑨	開始/暫停制	開始或暫停當前模式或功能
⑩	模式切換制	選擇要使用的清潔模式
⑪	電源開關制	開機或關機


溫馨提示：洗碗碟機在插電狀態下，電源開關制“”指示燈微亮，屬正常狀態。

安裝指引

開孔尺寸及安裝位置

單位:毫米


開孔尺寸

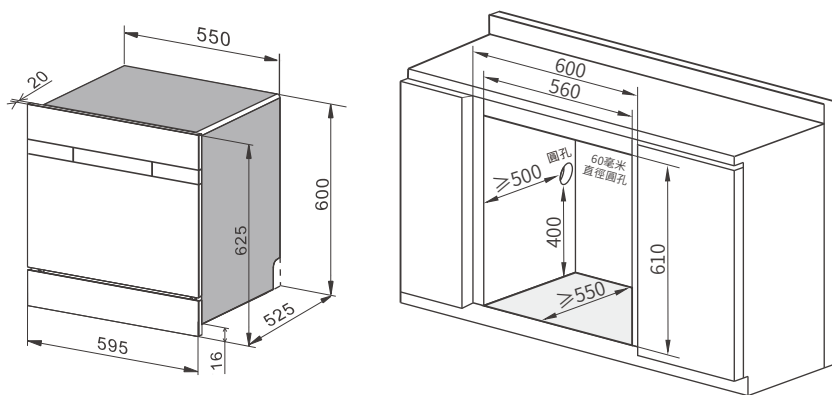

- 櫥櫃物料必須耐溫及耐濕。
- 請務必按圖示尺寸設置櫥櫃的開孔位,不可自行改變安裝方式和開孔尺寸,以免洗碗碟機與櫥櫃之間配合不當。
- 櫥櫃側牆標示圓孔為進水管、排水管、電源線穿孔,建議開孔尺寸:60毫米直徑圓孔。

安裝位置

單位:毫米

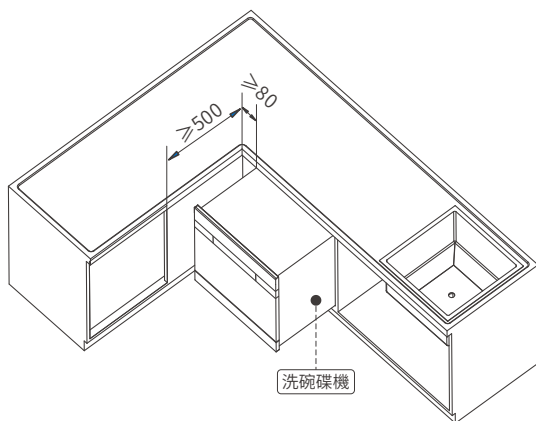

- 安裝位置要確保有足夠的空間,使洗碗碟機打開、關閉時不會碰到其他設備。


安裝指引

入水、排水及安裝工程



注意


- 洗碗碟機適用自來水水壓範圍:0.04-1.0MPa, 供水水壓高時, 必須安裝減壓閥, 供水水壓低於0.04MPa時, 必須安裝增壓泵, 以免洗碗碟機供水不足。
- 電源線長約1.8米, 入水喉管長約1.5米, 排水喉管長約2.0米, 請考慮佈置入水排水接口和電源插座的位置。
- 排水喉管請使用耐熱材料。
- 入水喉管與排水喉管駁口要處理碎口, 並完全清除掉殘留在管內的碎屑等異物。
- 電源插座必須為獨立而且有效接地的220V/50Hz三腳插座。
- 獨立出水喉管須裝設氣隔。

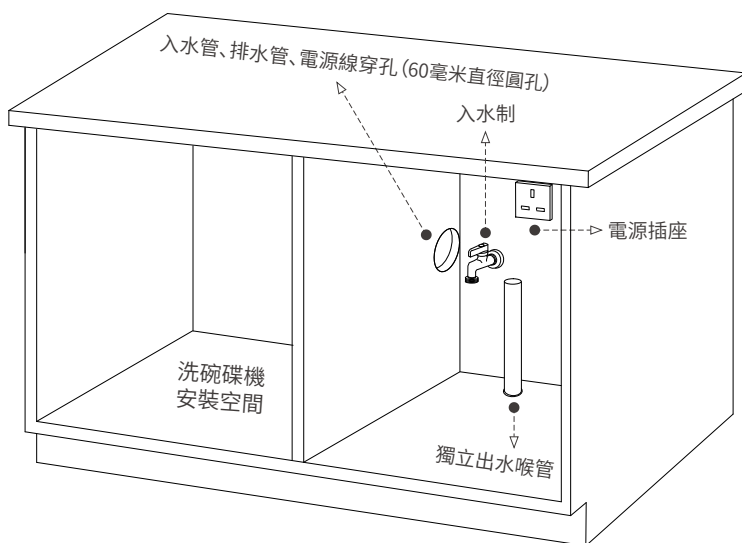

安裝指引

安裝機身


1. 將入水管(隨機配送附件)手擰螺絲母端(6分頭)連接到洗碗碟機背部入水駁口並用力擰緊。

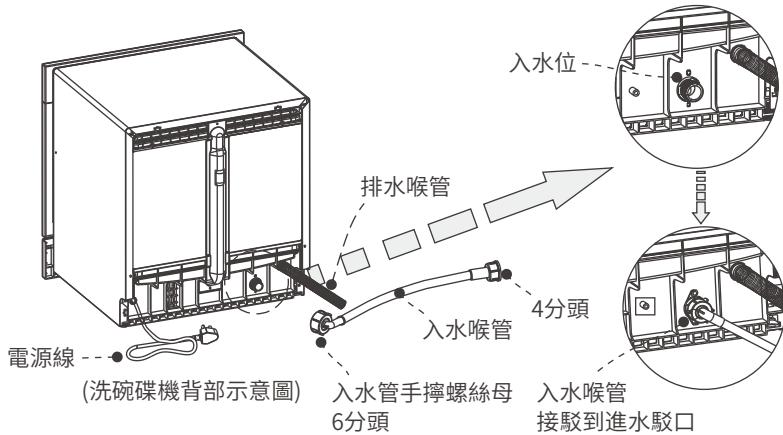


⚠ 注意:

- ① 進水水源不能使用過熱的熱水或沸水。
- ② 應使用新的進水喉管與水龍頭或駁口連接, 舊的水管不能重複使用。嚴禁使用老化或破損的進水喉管。

2. 將洗碗碟機移至櫥櫃安裝位置前, 將入水喉管、排水喉管與電源線從櫥櫃側面60毫米直徑圓孔中拉出一點, 再將洗碗碟機緩緩嵌入到櫥櫃安裝位內, 同時再從側面慢慢拉出入水喉管、排水喉管和電源線。
3. 確認洗碗碟機嵌入到櫥櫃內是否水平放置, 否則, 會導致洗碗碟機漏水。若洗碗碟機未達到水平放置狀態, 可以通過洗碗碟機底部四個可調節腳調節進行調校至水平位置。(圖示A)
4. 洗碗碟機確認為水平位置後, 打開洗碗碟機拉門, 將隨機附帶的2顆安裝螺絲穿過器具門框兩側的方孔內, 擰入到櫥櫃的木板內, 注意螺絲釘擰入的深度, 不要導致變形; 再將隨機附帶的4個塑料裝飾蓋扣在方孔上。(圖示B)

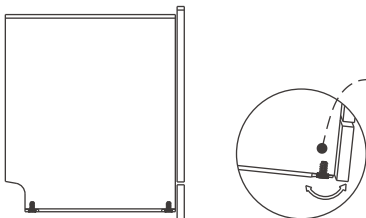

圖示A 可調節腳調節示意圖

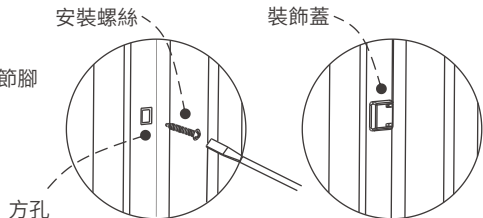


圖示B 洗碗碟機螺絲擰入櫥櫃並固定

5. 取出洗碗碟機內部包裝材料並清理乾淨。

安裝指引




連接入水喉管、排水喉管

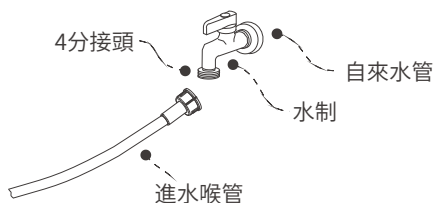- 確認進水喉管的自來水端的駁口(4分頭)中密封墊完好無損，再將進水喉管自來水端駁口(4分頭)連接到自來水水制(4分頭)上並扭緊。



- 將排水喉管的另一端接駁到水槽出水位駁口或連接到獨立出水喉管中，並固定好，排水管最高點至少要高於出水口的高度或獨立出水喉管，排水喉管不得彎折。
註：排水管若延長，請勿延長超過5米，否則可能會影響排水效果。

運作確認

1. 關上洗碗碟機門，接入電源，打開入水制。
2. 長按電源開關制“”，進入開機介面，再按模式切換制“”選擇“Rapid”快速洗模式，最後按開始/暫停制“”啟動洗滌工作，快速洗約25分鐘完成。
3. 確認以下事項：
 - A. 洗滌程序中是否能正常聽到洗滌水聲。
 - B. 洗滌程序中入水喉管、排水喉管的連接部位及其它部位沒有漏水。
 - C. 洗滌程序結束後，打開洗碗碟機門，確認機器內部污水已經排出。
4. 洗滌程序結束後，關閉入水制，關閉電源。

溫馨提示：

- ① 安裝完成後，請妥善保管本使用說明書和其它附件，以便下次使用。
- ② 首次入水時，洗碗碟機內的水偏黃色，屬於正常現象，這是由於軟水器內的殘留水因長期浸泡軟水物質的結果，不影響正常使用。
- ③ 由於洗碗碟機出廠前已經通過進水測試，打開包裝及機器內部如果發現有水殘留，屬於正常現象，請放心使用。

操作指引

標準餐具規格及數量

● 上層洗滌籃擺放餐具

餐具名稱	飯碗	有耳杯	飯勺	湯匙	醬油碟	小湯匙
餐具數量	10個	5件	1枝	1枝	5件	5枝
尺寸(毫米)	Φ117X53	Φ85X94	200X75	217X63	Φ96X23	135

● 下層洗滌籃擺放餐具

餐具名稱	深碟	淺碟	蒸魚碟	玻璃杯	湯碗	小湯匙
餐具數量	5件	5件	1件	5個	5個	5枝
尺寸(毫米)	Φ208X38	Φ208X28	320X214X34	Φ60X120	Φ156X58	135
餐具名稱	大湯碗	筷子				
餐具數量	1個	20枝				
尺寸(毫米)	Φ202X98	230				



注意

- 以下種類的餐具請勿放入洗碗碟機內洗滌：
 1. 貴金屬及彩釉餐具、鋁製品；
 2. 竹木、塑膠、發泡膠等不耐熱材料餐具；
 3. 容易生鏽的金屬製品；
 4. 容易變色或塗層容易剝落的餐具；
 5. 開口較小、內部難以清洗的餐具；
 6. 海綿、抹布等。
- 使用洗碗碟機前，燒焦、燒糊的頑固污漬請事先浸泡、清理。
- 使用洗碗碟機前，餐具上較大的殘留物比如大骨頭、大青菜葉請事先清除乾淨。




警告


- 洗碗碟機門不應一直打開，因為這可能會導致器具翻倒的危險。
- 刀和其它鋒利的用具必須裝在籃子里，並且尖端朝下或水平放置。

操作指引


上層洗滌籃餐具的擺放

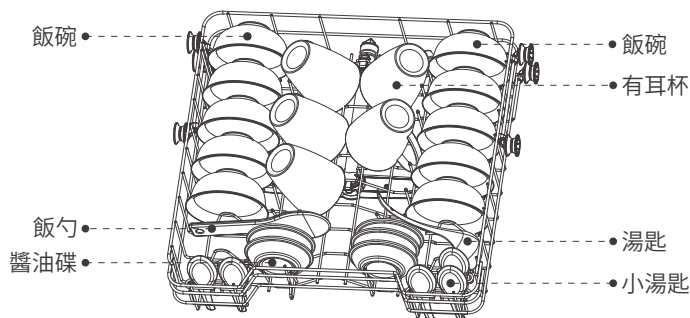

下層洗滌籃餐具的擺放

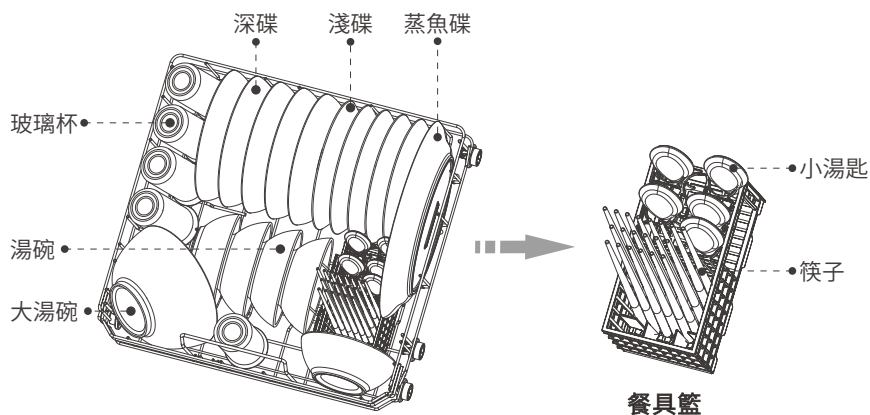

下層洗滌籃油網洗滌的擺放

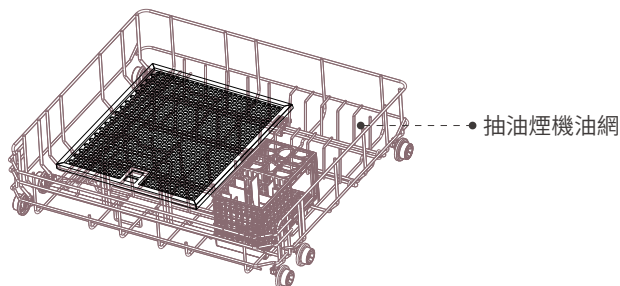

溫馨提醒：

建議每週清洗油網，如油網未定期清洗，則長時間會有一層難以分解的油垢積累，而造成洗淨效果不佳。

操作指引



注意

- 各餐具應按圖示擺放於各自規定的位置。
- 碗、盤、碟的正面略向下傾斜擺放，以利於清洗和烘乾。
- 杯口朝下擺放、湯匙正面朝下擺放。
- 筷子長度不應超過23厘米且筷子頭朝下擺放。
- 筷子、小湯匙均分開擺放在餐具籃的網格中，切勿重疊擺放，以便於烘乾。



注意

- 細小的餐具請放在餐具籃內，以免清潔時掉落。
- 請按要求擺放餐具，勿重疊放置，否則會清洗不乾淨。
- 底部呈凹狀的餐具容易殘留積水，請傾斜一定角度擺放。
- 餐具污漬面朝下，沖洗時水流能完全沖刷。
- 擺放的餐具不能伸出洗滌籃底部，也不能過高，以免妨礙上、下噴射臂轉動。
- 清潔結束後，機內還有大量高溫水蒸氣，打開拉門時請注意，避免燙傷。
- 取出餐具時，先取下洗滌籃餐具，再取上洗滌籃餐具。
- 洗滌籃推回機內時，不要讓鋒利的器具刮到內壁位置。
- 洗滌籃表面不能用鋒利物體刮碰，洗滌籃表面塗層刮破後會生鏽。
- 洗滌籃推入後，拉動一下噴射臂，檢查噴射臂是否能夠自由旋轉。
- 特別細小的器具可能會從洗滌籃掉出，並隨污水排出機器外，請不要清洗該類物件。

軟水器的使用

軟水器作用為軟化水質，減少水垢產生，使餐具的表面光亮如新。水硬度較高的地區尤其適用。

● 水硬度與水硬度設置等級參照表

水硬度(ppm)	0-90	100-200	210-300	310-400	410-600	610-800
水硬度等級	H1	H2	H3	H4	H5	H6

註：(1).洗碗碟機出廠設置默認H4檔。





(2).H1檔位預設為不軟化水，“Refill Salt”指示燈會處於一直熄滅狀態。

(3).香港地區水硬度等級為H1。

操作指引

● 軟化鹽的添加

洗碗碟機需要添加軟水專用鹽(水硬度等級H1地區除外),才具有軟水能力。軟水專用鹽屬一次添加,多次使用的消耗品。

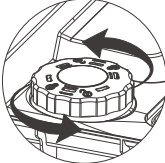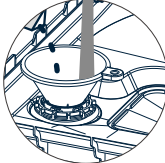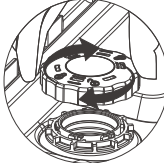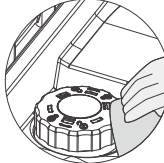			
步驟1	步驟2	步驟3	步驟4


步驟1: 打開機門,取出下層洗滌籃,軟水器位於內膽底部左前側,逆時針旋轉擰開並取出軟水器蓋;
步驟2: 將隨機附送的漏斗放穩到軟水器的加鹽入口,加入500克左右軟化鹽並加入清水,注意加鹽盡量不要外灑,加滿水但不要有水流出;
步驟3: 再將軟水器蓋對準軟水器加鹽口,順時針方向擰緊;
步驟4: 若有鹽外灑或流出鹽水,請用毛巾擦掉,否則鹽水會腐蝕金屬內膽及過濾網,加完軟化鹽後,請運行1次“Rapid”模式進行內膽清洗。



注意

- 當軟水器中的鹽不足時,顯示屏會顯示“Refill Salt”,提醒您添加專用鹽。
- 當加完鹽和水之後,可能“Refill salt”指示燈不會立即熄滅,需待鹽水溶解至飽和狀態。
- 必須使用洗碗碟機專用鹽,否則會損壞洗碗機內膽。
- 每次添加鹽後建議洗碗碟機空載運行1次“Rapid”快速洗模式,沖刷1次內膽。


● 軟水器等級設置

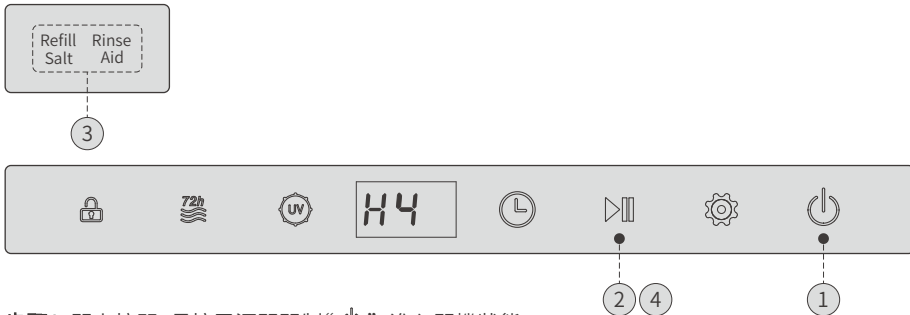

步驟1: 關上拉門,長按電源開關制“”,進入開機狀態;

步驟2: 開機60秒內,按下開始/暫停制“”5秒不放,進入設定模式;

步驟3: 控制面板左側顯示區“Refill Salt”和“Rinse Aid”循環亮著,表示已經進入設定模式;

步驟4: 再按開始/暫停制“”進行等級調節,調節範圍“H1-H6(預設H4)”,螢幕顯示當前等級。


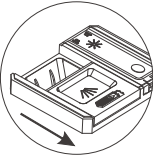
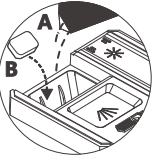
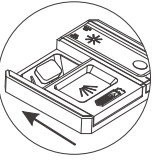
選擇合適等級,5秒內若無按觸開始/暫停制,則退出該設定模式,進入待機狀態,設定等級確認並保存。

操作指引



清潔粉/清潔片與助乾劑的使用

洗碗碟機專用的清潔粉/清潔片，能夠分解餐具上的油污、去除食物殘渣。清潔粉用量參考“清潔模式程序表”中對應清潔模式推薦使用量。

● 清潔粉/清潔片的添加：

			
步驟1	步驟2	步驟3	步驟4
<p>步驟1:打開機門，分配器位於機門內側，按箭頭方向按壓分配器的粉盒蓋開關；</p> <p>步驟2:按壓開關後分配器的粉盒蓋開關自動滑開；</p> <p>步驟3:放入適量清潔粉或清潔片；</p> <p>步驟4:按箭頭方向推動粉盒蓋，閉合後按壓粉盒蓋，直至聽到“咔”一聲為止。</p>			

● 助乾劑的添加：

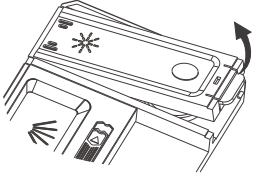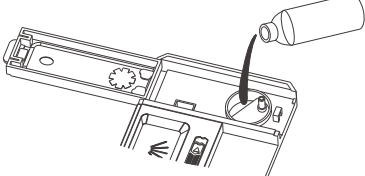	
步驟1	步驟2
<p>步驟1:打開機門，分配器位於機門內側，拉開分配器助乾劑盒蓋；</p> <p>步驟2:將助乾劑緩緩倒入分配器助乾劑入口，加到滿口位置，如有不小心灑出時，請用布擦拭乾淨；加入完成後，按壓蓋上分配器助乾劑盒蓋，直至聽到“咔”一聲為止。</p>	

註：(1).顯示區“Rinse Aid”指示燈亮時，表示需要添加助乾劑；



(2).助乾劑有利於餐具乾燥，使餐具晶亮如新，使用洗碗碟機時，需添加助乾劑，首次添加量約100毫升，助乾劑屬於一次添加，多次使用的消耗品。

操作指引

● 分配器助乾劑用量等級設定



步驟1: 關上洗碗碟機機門，長按電源開關制“”，進入開機狀態；

步驟2: 開機60秒內，同時按觸電源開關制“”和模式切換制“”5秒不放，進入助乾劑等級設定狀態，螢幕顯示當前助乾劑等級；

步驟3: 按下模式切換制“”進行等級切換選擇，5秒內若無任何操作則保存當前等級，退出到開機狀態。

註：(1).助乾劑等級共6個，最低等級為d1，最高等級為d6，預設等級為d4。

(2).如餐具清潔後表面摸起來有滑膩感覺，請調低等級，並運行機器再清潔餐具一遍。



注意

- 請使用洗碗碟機專用的清潔粉、助乾劑、軟化鹽，不能使用洗潔精等非專用洗滌用品。
- 若使用普通洗潔精，洗碗碟機內會產生大量泡沫，可能會導致洗碗碟機出現漏水報警。
- 清潔專用的清潔粉、助乾劑、軟化鹽請放置在小孩接觸不到的位置，以免發生誤食危險。
- 平時不使用洗碗碟機時，請勿向器具中放入清潔粉，以免清潔粉受潮後影響清潔效果。


功能操作

● 清潔模式操作


控制面板右邊操作區域




控制面板左邊操作區域

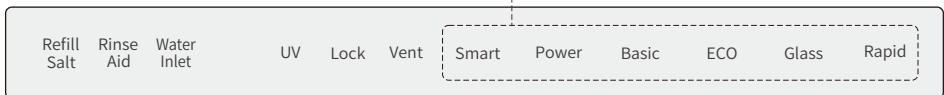

步驟1: 餐具擺放，分配器內投放清潔粉，關上洗碗碟機機門，長按電源開關制“”，進入開機狀態；

步驟2: 按下模式切換制“”，選擇需要的清潔模式，控制面板右邊顯示區域靜態點亮顯示選擇的清潔模式，螢幕對應顯示清潔運作時間；

步驟3: 選定清潔模式後，按下開始 / 暫停“”啟動工作，清潔模式閃爍顯示，螢幕的清潔運行時間開始倒數計時。

操作指引

● 清潔模式程序

模式	適用範圍	清潔粉(克)	預計運作時間
智能清洗(Smart)	智能分析選擇最佳清潔程序	27.5	1:30 - 3:00
強力清洗(Power)	適用於嚴重髒污的餐具	27.5	2:55
標準清洗(Basic)	適用於普通髒污的餐具	27.5	1:00
節能清洗(ECO)	適用於比較髒污的餐具	2.5+25	3:55
潔亮清洗(Glass)	適用於一般髒污的餐具及表面較光亮的餐具,如玻璃製品等	27.5	1:30
快速清洗(Rapid)	適用於輕度髒污的餐具,或已經乾淨,但存放了時間較長的餐具	不添加	0:25

註:選擇“ECO”模式,為了達到更佳的清潔效果,建議清潔粉的添加方式:在分配器外加入2.5克清潔粉,在分配器內加入25克清潔粉。

⚠ 注意:

- ① 洗碗碟機在運作時,若需要手動強制停止清潔模式,請長按開始/暫停“▶||”制3秒,機器會停止清潔工作,排水泵啟動排水,排水結束後進入待機狀態,無操作15秒後會進入關機狀態。
- ② 洗碗碟機在運作時,若需要更換清潔模式,請長按電源開關制“⏻”關閉洗碗碟機,然後重新開機,選擇並啟動新的清潔模式。
- ③ 清潔模式結束後螢幕會顯示“FAN”,表示洗碗碟機正在處於PTC熱風乾燥。

註:“Smart、Power、Basic、Glass”具有PTC熱風乾燥功能,會在清潔結束後自動開啟。

● 兒童鎖功能操作

洗碗碟機在運作時,為防止小孩誤操作,影響洗碗碟機正常運行,請開啟兒童鎖功能。



步驟:控制面板右方顯示區長按兒童鎖制“🔒”3秒,控制面板左方顯示區“Lock”指示燈點亮,除兒童鎖制外,其它控制無效。鎖屏狀態下長按童鎖鍵“🔒”3秒,退出鎖屏狀態。



注意

- 不允許兒童玩耍且不要讓兒童和行動不便者操作洗碗碟機,以免發生觸電、燙傷等意外傷害。
- 清潔期間,請勿打開拉門,以免高溫蒸汽燙傷和水濺出。
- 長期不使用時,應關閉水源、拔掉電源插頭。
- 清潔期間,請勿移動或傾斜洗碗碟機,會導致洗碗碟機漏水、漏電的危險。
- 使用過程中,請勿手動向洗碗碟機內添加水,可能導致洗碗碟機漏水危險。


操作指引

● 通風功能操作




“Smart、Power、Basic、Glass、Rapid”預設具有通風功能，清潔程式結束後自動開啟72小時通風功能及新風換氣功能，去除異味。

如有需要關掉通風功能：

步驟1: 關上洗碗碟機門，長按電源開關制“”，進入開機狀態；

步驟2: 按下模式切換制“”，選擇需要的清潔模式；


步驟3: 按下通風功能制“”，關閉通風功能，“Vent”燈會熄滅；

步驟4: 按下開始 / 暫停制“”啟動清潔工作。


註：“通風”功能為每隔2小時啟動15分鐘熱風、2分鐘冷風；“新風換氣”為每隔4小時啟動15分鐘冷風。

● 紫外線除菌功能操作



步驟1: 關上洗碗碟機門，長按電源開關制“”，進入開機狀態；


步驟2: 按下模式切換制“”，選擇需要的清潔模式；

步驟3: 按下紫外線除菌功能制“”，開啟紫外線除菌功能，洗碗碟機清潔結束後自動開啟紫外線UV燈輔助除菌功能；

步驟4: 按下開始 / 暫停制“”啟動清潔工作。


註：“Power、Basic、Glass”具有紫外線除菌功能。


● 延遲啟動功能操作

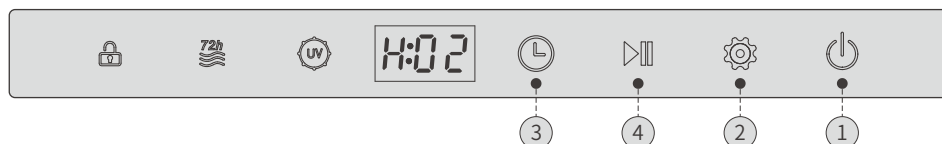


步驟1: 關上洗碗碟機門，長按電源開關制“”，進入開機狀態；

步驟2: 按下模式切換制“”，選擇需要的清潔模式；

步驟3: 按下延遲啟動功能制“”，選擇需要的延遲啟動時間(H:00-H:24)，洗碗碟機將在預設時間後啟動清潔工作；

步驟4: 按開始 / 暫停制“”進入啟動倒計時，顯示預設的時間且對應的清潔模式閃爍顯示。

註：預設過程中，長按延遲啟動功能“”3秒，螢幕顯示為H:00，H:00表示無預設延遲啟動功能。

維護和保養

維護和保養

為了使洗碗碟機長期保持良好的洗滌性能，請定期清洗過濾器，並檢查過濾器和噴臂是否有殘渣堵塞。



注意

- 請勿使用漂白劑、清潔劑、稀釋劑等腐蝕性清潔劑擦拭及清洗。
- 用擰乾的軟布擦拭機體，使用化纖抹布時，請遵守其使用說明書要求。
- 對於洗碗碟機內籠存在污漬、異味時，可加入洗滌塊或市售的洗碗碟機專用機體清潔劑，不加入任何餐具情況下運作“Basic”模式，可保持洗碗碟機內籠清潔。
- 如果噴射臂安裝不正確，會導致無法清洗餐具。



注意


- 請勿手動注水、噴水和使用鋒利的金屬物。
- 非專業技術人員嚴禁拆卸、修理或改造洗碗碟機。
- 若電源線損壞，為了避免危險，必須由製造商、其維修部或有關部門的專業人員更換。

●清洗過濾器

打開洗碗碟機門，拉出下層洗滌籃。



步驟1

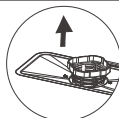

步驟2



步驟3



步驟4



步驟5

步驟1:逆時針轉動擰蓋並取出過濾器。

步驟2:向上提起同時取出不銹鋼過濾器。

步驟3:用流動水沖洗不銹鋼過濾器，也可以用軟毛刷清洗，但不可用鐵刷或不銹鋼絲球刷，這樣會讓不銹鋼過濾器生銹。

步驟4:用流動水沖洗擰蓋及過濾網。

步驟5:清洗乾淨後，再裝回洗碗碟機內，擰蓋需要順時針旋轉，當擰蓋小三角形與不銹鋼過濾器的小三角正對時，表示擰蓋已擰緊。確認安裝到位後，將下層洗滌籃推回內籠原位。



注意

- 過濾器如果堵塞，可能會導致洗滌效果變差或導致發霉、產生異味、漏水等不良後果。
- 建議每次使用後清洗一次過濾器，清洗時請勿弄壞過濾器。

●清洗上噴射臂/下噴射臂

打開洗碗碟機門，分別拉出上層洗滌籃及下層洗滌籃。




卡環



清洗上噴射臂

- 拆卸:用手固定上噴射臂卡環，按開鎖箭頭(逆時針)方向旋轉上噴射臂，鬆動後向下拉動噴臂。
- 安裝:上噴射臂管道部位對準卡環管口，再按反方向旋轉即為安裝位置。
- 檢查噴射臂出水孔是否堵塞，若有堵塞需要用細尖鐵絲挑出，或用大量流動水對準堵塞孔沖洗堵塞物。

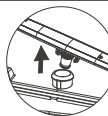

清洗下噴射臂

- 拆卸:用手握住下噴射臂中間，垂直向上拉出。
- 安裝:將下噴射臂的管道部位插入機體底座對應管道部位，直到聽到“咔”的一聲為止，確認噴射臂可輕鬆旋轉。
- 檢查噴射臂出水孔是否堵塞，若有堵塞需要用細尖鐵絲挑出，或用大量流動水對準堵塞孔沖洗堵塞物。

故障處理

故障代碼及常見問題

如在正常使用時發現洗碗碟機異常，請按下列內容進行檢查和處理，如果不能排除故障，請立即停止使用，並拔出電源插頭，關閉進水制，請與本公司聯繫。

故障代碼

顯示代碼	可能故障原因	處理方法
E01	溫度傳感器短路	請聯繫本公司安排維修。
E02	溫度傳感器開路	請聯繫本公司安排維修。
E03	洗碗碟機不加熱	請檢查餐具是否正面向上平放，正放會盛水，導致機器內部水太少，而不加熱。
E04	進水制故障	請聯繫本公司安排維修。
E05	漏水	1.檢查排水管是否懸掛太高。 2.檢查排水管是否打結、堵塞、折壓。 3.檢查排水泵是否有故障。
E06	洗碗碟機加熱異常	請聯繫本公司安排維修。
E10	入水異常	檢查入水水源是否正常。
E11	分水制故障	拔掉電源插頭重新插電運作。

常見問題

故障現象	可能故障原因	處理方法
餐具未乾	1.助乾劑缺少或分配器助乾劑等級偏低。	A.添加洗碗碟機專用助乾劑。 B.將分配器助乾劑等級調高。
	2.餐具擺放不整齊，出現餐具相互堆疊。	參考說明書中餐具擺放要求。
	3.清潔模式未運行結束。	清潔模式需按正常程序運行結束。
	4.清潔模式為快速洗(Rapid)。	快速洗(Rapid)模式沒有烘乾程序。
按制操作沒有反應	1.操控面板或手有油污、水。	清潔玻璃和手，使玻璃和手乾爽。
	2.兒童鎖功能已開啟。	解除兒童鎖。
	3.門控電路板發生故障。	請聯繫本公司安排維修。

故障處理

故障現象	可能故障原因	處理方法
清潔粉或清潔片殘留	1.下層洗滌餐具擺放過滿無縫隙，水流無法沖到分配器。	參考說明書中洗滌籃擺放要求。
	2.噴射臂出水口堵塞，噴淋沖洗水流過小。	清理乾淨噴射臂出水口，再運行1次快速洗(Rapid)模式將餐具清洗一遍。
	3.清潔粉投放量過多。	A.運行1次快速洗(Rapid)模式將餐具清洗一遍。 B.對應清潔模式，添加對應用量清潔粉。
	4.使用劣質清潔粉或清潔片。	A.運行1次快速洗(Rapid)將餐具清洗一遍。 B.使用正規專用清潔粉或清潔片。
內籠中有泡沫	沒有使用專用清潔粉或投放過多清潔粉。	先手動清除內籠泡沫，再啟動任意清潔模式3分鐘左右。結束程序後，如此反復運行，直到泡沫消失。
清潔過程中有撞擊聲	餐具碰觸到噴射臂。	重新擺放餐具。
餐具未清洗乾淨	1.餐具擺放時相互堆疊。	參考說明書中洗滌籃擺放要求。
	2.清潔模式選擇不正確。	依餐具髒污程度及數量選擇對應模式。
	3.沒有使用專用清潔粉或投放量不足夠。	投放專用清潔粉，投放與清潔模式對應用量清潔粉。
	4.過濾器未及時清理。	定期清理過濾器。
	5.噴射臂出水口有堵塞。	檢查並清理乾淨噴射臂出水口。
	6.噴射臂卡住餐具。	檢查噴射臂是否卡住餐具。
	7.餐具表面殘渣乾結嚴重。	餐具浸泡一段時間再洗滌。
	8.洗滌過程中出現異常。	重新運行洗滌程序。
	9.某些類型污垢難以清洗。	建議難清洗污垢先用鋼絲刷球洗刷。
洗碗碟機不使用時，內部積存大量的積水	1.排水管懸掛太高。	參照說明中調整排水管安裝位置。
	2.排水管打結、堵塞、折壓。	檢查並整理排水管。
	3.排水泵故障。	請聯繫本公司安排維修。
	4.進水制故障。	請聯繫本公司安排維修。
洗碗碟機通電狀態下產生“呼呼”的聲音，顯示屏顯示“FAN”	程序定期通風及換氣系統運行。	正常現象，無需處理。



注意

- 當遇到停止供水時，關機終止運作，關閉進水制。恢復供水後，請先從其他水龍頭放掉自來水管路中的渾濁水後，再打開進水制，重新開機運作。
- 當遇到停電或跳制時，請在供電恢復正常後，重新開機運行。

技術規格

產品規格參數

產品名稱	洗碗碟機
產品型號	SZDW10G
產品編號	SZDW10G
額定電壓	220伏特
額定頻率	50赫茲
額定輸入功率	1270瓦
額定水壓	0.04-1.0兆帕（入水制入水）
控制方式	全自動
防水等級	IPX1
額定容量	中式餐具10套
洗滌方式	噴淋式
烘乾方式	PTC熱風
除菌率	≥99.9%
水效等級	1級
能效等級	1級
清潔模式	智能 / 強力 / 標準 / 節能 / 潔亮 / 快速
清潔劑種類	清潔粉 / 清潔片
洗滌籃	上下2層洗滌籃（附餐具籃）
延遲開機	0-24小時
提示功能	缺軟化鹽 / 缺助乾劑 / 缺水提示燈
嘈音	55分貝
用水量(升)	7.8（節能清潔模式）
耗電量(千瓦小時)	0.71（節能清潔模式）
產品淨重	27.5公斤
外形尺寸	寬595 毫米 x 高625毫米 x 深525毫米
櫥櫃開孔尺寸	寬560 毫米 x 高610毫米 x 深550毫米

註1:殺菌測試標準:QB/T 5133-2017、水效等級和能效等級測試標準:GB 38383-2019、嘈音測試標準:IEC 60704-1。

註2:因產品改進和技術更新,規格參數如更改,請以產品實物為準,恕不另行通知。

Contents

Precautions	Page 2
Appliance Parts	Page 3
Installation Instruction.....	Page 5
Operation Instruction.....	Page 9
Maintenance	Page 17
Troubleshooting	Page 19
Product Specifications	Page 21

Precautions

Thank you for choosing TGC products! For enquiries or maintenance services, please contact the 24-hour customer service hotline 2880 6988.

Installation Accessories

● The dishwasher is configured as follows, please check before installation.

Accessories	Quantity	Accessories	Quantity	Accessories	Quantity	Accessories	Quantity	Accessories	Quantity
Water pipe	1 tube	Screws	2 pieces	Decorative cover	4 Pieces	Funnel	1 piece	Hose Holder	1 piece

In order to prevent personal injury and property damage, the following distinctions and signs are specially made to distinguish according to the degree of harm and damage.



Warning: Indicates a potentially hazardous situation that could lead to death or serious injury if not taken care.



Caution: Indicates a potentially hazardous situation that could result in minor or moderate injury if not taken care.

Precautions



Warning




- Please contact our company for installation, if you install by yourself, it may cause water leakage, electric shock or fire due to improper installation.
- Do not place combustible items, such as paper, plastic, etc., around and under the dishwasher, and keep a distance of more than 150 mm from combustible materials.
- The electric socket must be a 220V/50Hz three-pin socket with grounding.
- The dishwasher power plug should be fully inserted into the socket.
- It is forbidden to install the dishwasher and electrical socket in places that may be wet.
- Do not use broken electrical cable, plug, or loosed socket.
- Do not damage, bend, pull, wrap the electrical cable. The electrical cable must not carry heavy objects.
- The dishwasher should be connected to the water source using a new hose, and the aged hose should not be reused.
- When cutting the cable tie, cut it with scissors to prevent puncture of the drain pipe and electrical cable, resulting in water leakage and electricity leakage.
- After the trial operation, turn off the hose and power supply.
- Plastic bags and boxes should be kept out of the reach of children or disposed of to prevent accidental suffocation or injury when children play.



Caution

- Do not install in a place where water will freeze (room temperature below 0°C), otherwise it will cause water leakage.
- The dishwasher should be installed in a position convenient for operation or maintenance, and the bottom plate must be secured which can withstand at least 90kg of weight, and the device must not be tilted.
- When handling and placing it, the dishwasher should be lifted up by the side handle hole or lifted from the bottom. Do not use the handle of the door for lifting.
- Do not twist the connection of the drain pipe, so as not to affect the drainage effect.
- After installing in areas with hard water, please adjust the water hardness so as not to affect the cleaning effect.


Appliance Parts

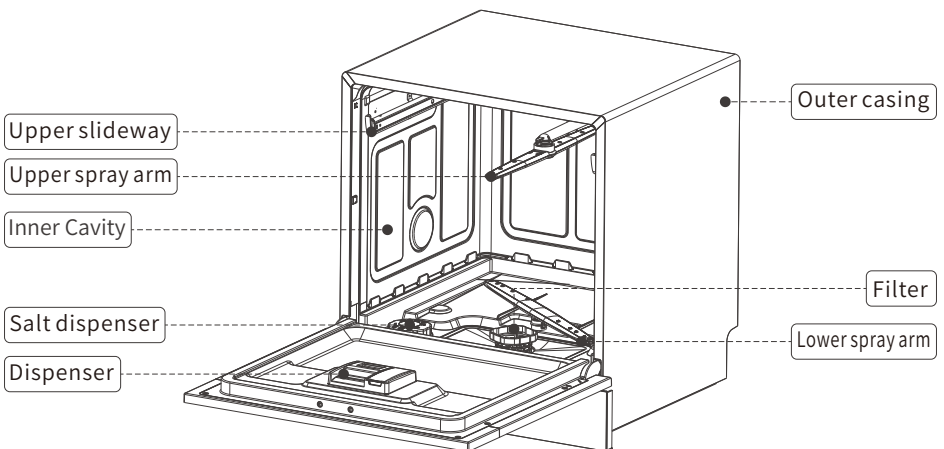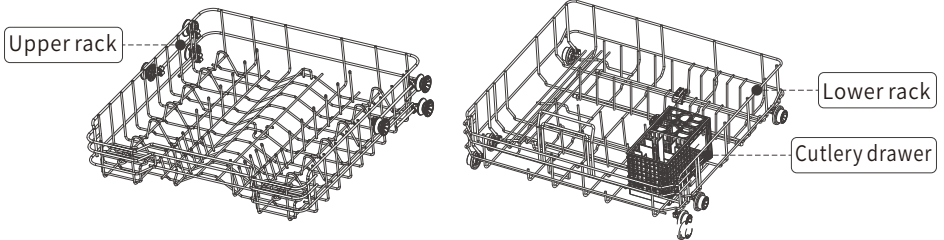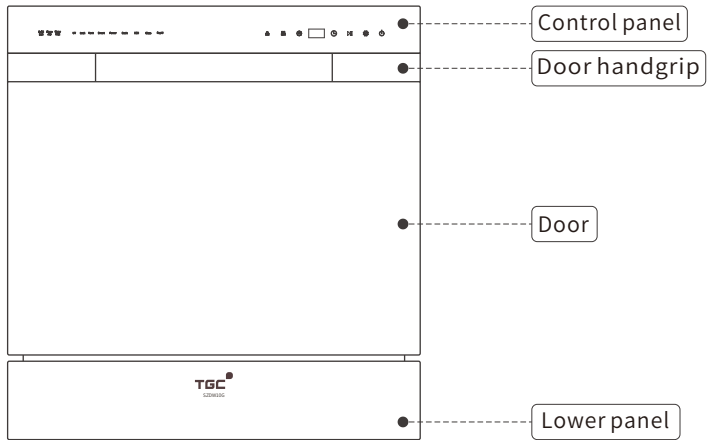


Appliance Parts

Control panel

● Control Panel on the left side

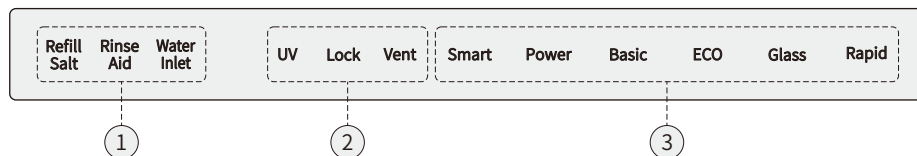

● Control Panel on the right side

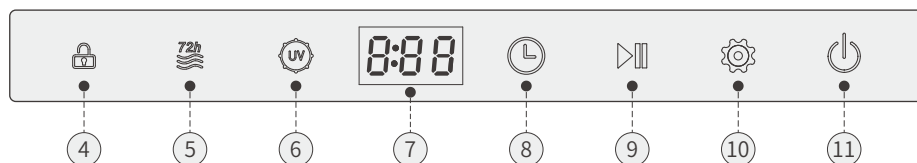

①	Lacking of salt, lacking of rinse aid, not filling with water indicator	The indicator light lights up when the salt, rinse aid are low or the machine is not filling with water
②	Functions	Displaying the extra selected function
③	Washing mode	Displaying the selected washing mode
④	Child lock function button	Child lock function ON/OFF
⑤	Ventilation function button	Ventilation function ON/OFF
⑥	UV light disinfection function button	UV light disinfection function ON/OFF
⑦	Time display panel / fault codes display panel	Washing mode running time or delayed start time /fault code display
⑧	Delayed start button	Delayed start function ON/OFF
⑨	Start / Pause button	Start / pause the current mode or function
⑩	Washing mode switching button	Select the washing mode
⑪	Power ON/OFF button	Power ON/OFF



Reminder: When the dishwasher is plugged in, the indicator light of the power button "⏻" is slightly on, which is normal.

Installation Instruction

Cut out size & Installation position

Cut out size


Unit : millimeter

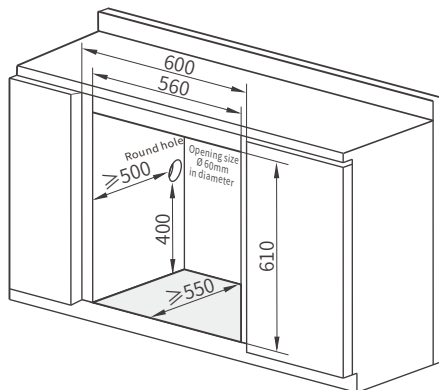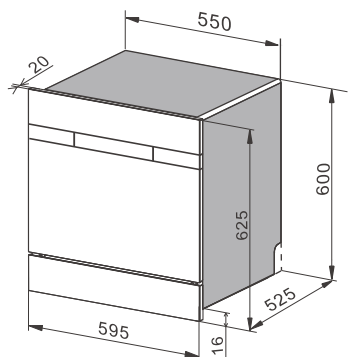

- Cabinet materials must be heat and humidity resistant.
- Please be ensure to set the cut out of the cabinet according to the size shown in the picture, and do not change the installation method and cut out by yourself, so as to avoid improper positioning between the dishwasher and the cabinet.
- The round hole marked on the side wall of the cabinet are hole for the water inlet pipe, drain pipe, and electrical cable. The recommended opening size is $\varnothing 60\text{mm}$ in diameter.

Installation position

Unit : millimeter

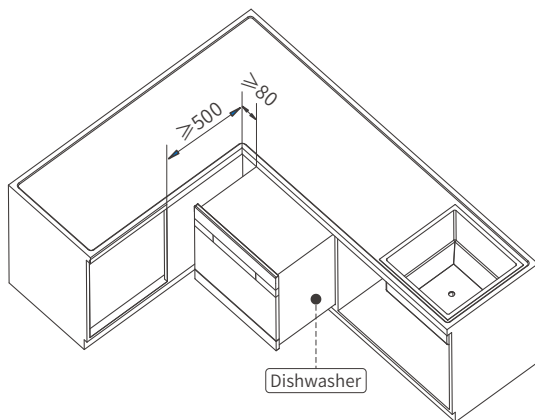

- The installation position should be confirmed that there is enough space so that the dishwasher will not touch other equipments when the door is opened or closed.


Installation Instruction

Water Inlet, drainage and installation



Caution


- Applicable tap water pressure range for dishwashers: 0.04-1.0MPa. When the water supply pressure is high, a pressure reducing regulator must be installed. When the water supply pressure is lower than 0.04MPa, a booster pump must be installed to avoid starving the dishwasher.
- The length of the electrical cable is about 1.8m, the length of the water inlet pipe is about 1.5m, and the length of the drain pipe is about 2.0m. Please consider the location of the water inlet and outlet ports and electrical sockets.
- Please use heat-resistant material for the drain pipe.
- 220V/50Hz three-pin electrical socket must be independent and effectively grounded.
- The joints of the water inlet pipe and the drain pipe should be treated, foreign objects such as plastic shredding remaining in the pipe should be completely removed.
- Independent drain pipe must be installed with air barrier.

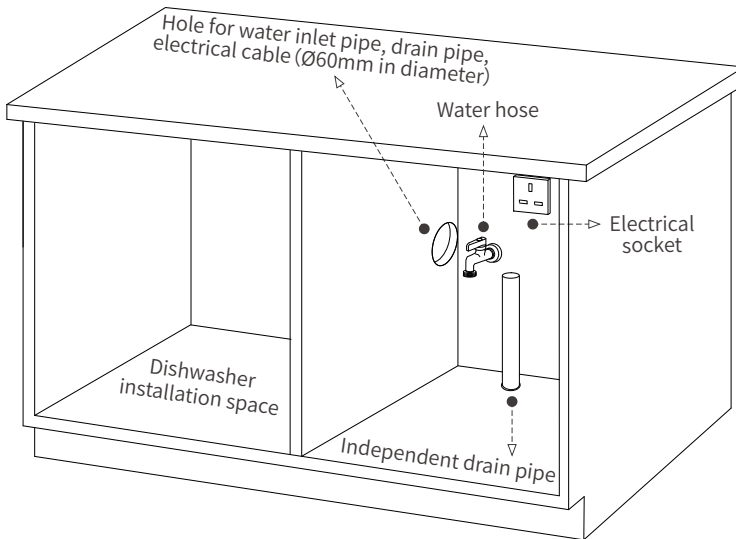

Installation Instruction


Installation

1. Connect the thumb screw of the water inlet pipe (accessory supplied) to the water inlet valve on the back of the dishwasher and tighten it firmly.

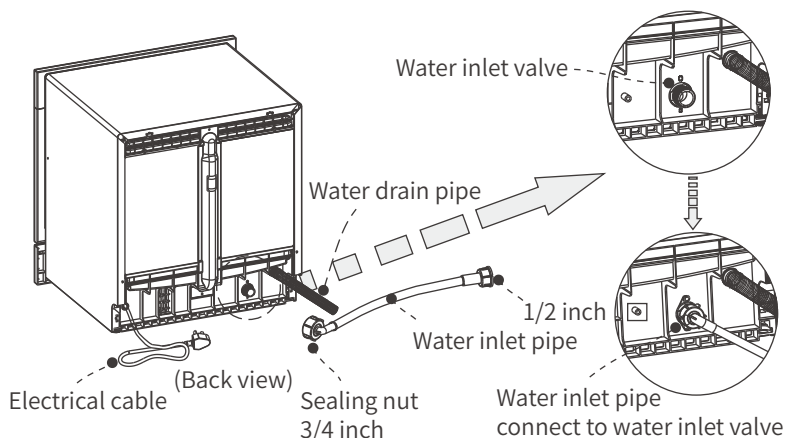

⚠ Cautions:

- ① Do not use overheated hot water or boiling water as water source.
 - ② A new water inlet pipe should be used to connect to the faucet or spout, and the aged water pipe cannot be reused. Do not use aged or damaged water inlet pipe.
2. Before moving the dishwasher to the installation position in the cabinet, pull out the water inlet pipe, drain pipe and electrical cable from the $\varnothing 60\text{mm}$ round hole on the side of the cabinet. Then slowly insert the dishwasher into the installation position of the cabinet, and at the same time slowly pull out the water inlet pipe, drain pipe and electrical cable from the round hole.
 3. Make sure that the dishwasher is placed horizontally in the cabinet, otherwise, it will cause water leakage from the dishwasher. If the dishwasher is not placed horizontally, you can use the four adjustable foot for alignment to a horizontal position. (Picture A)
 4. After confirming that the dishwasher is in a horizontal position, open the door of the dishwasher, pass 2 mounting screws through the square holes on both sides of the door frame of the dishwasher, and screw them into the wooden board of the cabinet. Pay attention to the depth of screwing in, so as not to cause deformation; then buckle 4 plastic decorative covers to the square hole. (Picture B)

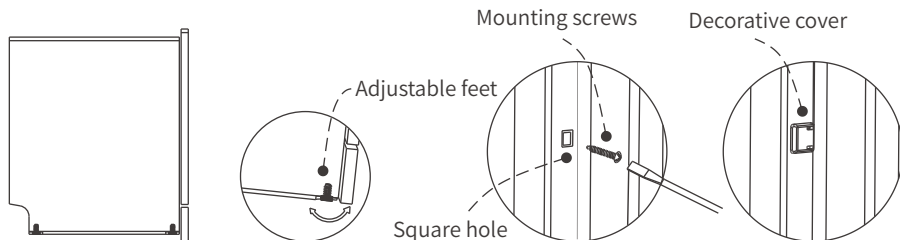

Picture A Diagram of how to adjust adjustable foot


Picture B Screws into cabinets and secure

5. Remove interior packing material in dishwasher.

Installation Instruction

Connect water inlet pipe and drain pipe

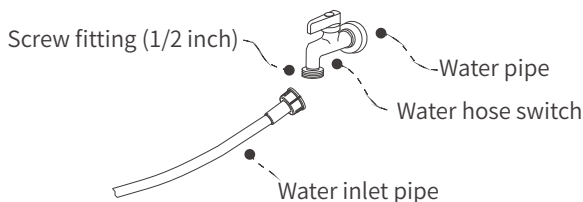


- Make sure that the sealing nut (1/2 inch) of the water inlet pipe is intact, and then connect the sealing nut (1/2 inch) of the water inlet pipe of the water inlet pipe to the screw fitting (1/2 inch) of water hose switch and tighten.



- Connect the other end of the drain pipe to the water outlet of the sink or connect it to an independent drain pipe, and fix it. The highest point of the drain pipe should be at least higher than the height of the outlet or independent drain pipe and drain pipe must not be bent.

Note: If extending the drain pipe, please do not extend it by more than 5 meters, otherwise it may affect the drainage effect.

Confirmation of operation

1. Close the door of the dishwasher, plug in the power supply, and turn on the water hose.
2. Long press the Power ON/OFF "  " to enter the boot interface, then press the washing mode switching button "  " to select the "Rapid" mode, and press the Start / Pause button "  " to start washing, "Rapid" wash will be completed in about 25 minutes.
3. Confirm the followings:
 - A. Any sound of washing water can be heard normally during the washing process.
 - B. During the washing process, there is no water leakage at the connection parts of the water inlet pipe, the drain pipe and other parts.
 - C. After the washing program is finished, open the door of the dishwasher to confirm the sewage inside has been drained.
4. After the washing program is finished, turn off the water hose switch and turn off the power.

Reminder :

- ① After the installation is completed, please keep this instruction manual and other accessories for future use.
- ② It is normal for the water in the dishwasher to turn yellowish in the first time. This is because the residual in the salt dispenser is the result of long-term soaking of water softening substances, and it does not affect normal usage.
- ③ Since the dishwasher has passed the test before ex-factory, if you find water residue inside the machine after opening the package, it is a normal phenomenon, please use it with confidence.

Operation Instruction

Standard tableware specifications and quantity

● Upper rack for tableware

Tableware name	Rice bowl	Mug	Rice spatula	Soup ladle	Small plate	Spoon
Tableware quantity	10	5	1	1	5	5
Size(mm)	Φ117X53	Φ85X94	200X75	217X63	Φ96X23	135

● Lower rack for tableware

Tableware name	Dish	Plate	Big plate	Glass	Soup bowl	Spoon
Tableware quantity	5	5	1	5	5	5
Size(mm)	Φ208X38	Φ208X28	320X214X34	Φ60X120	Φ156X58	135
Tableware name	Big soup bowl	Chopsticks				
Tableware quantity	1	20				
Size(mm)	Φ202X98	230				



Caution

- Do not wash the following types of tableware in the dishwasher:
 1. Precious metal and colored glaze tableware, aluminum products;
 2. Tableware made of non heat resistant materials such as wood, plastic, and styrofoam;
 3. Metal products that are prone to rust;
 4. Tableware that is easy to change color or the coating is easy to peel off;
 5. Tableware with small openings and difficult to clean inside;
 6. Sponge, rag, etc.
- Before using the dishwasher, please soak and clean the stubborn scorched or burnt stains in advance.
- Before using the dishwasher, remove large residues on the tableware, such as bones and vegetable leaves, in advance.




Warning


- The dishwasher door should not be left open as this may present a tipping hazard.
- Knives and other sharp utensils must be placed in the rack with the tip pointing down or horizontally.

Operation Instruction


Placement of upper rack

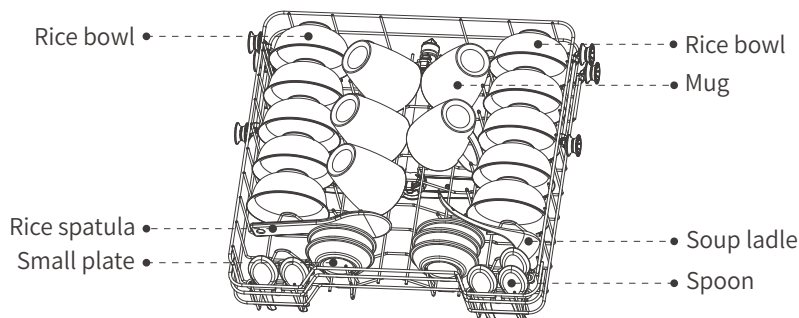

Placement of lower rack

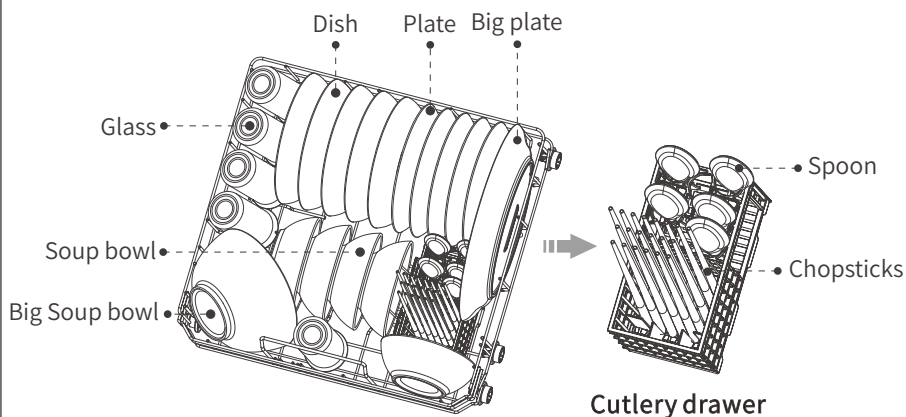

Recommended placement of range hood filter

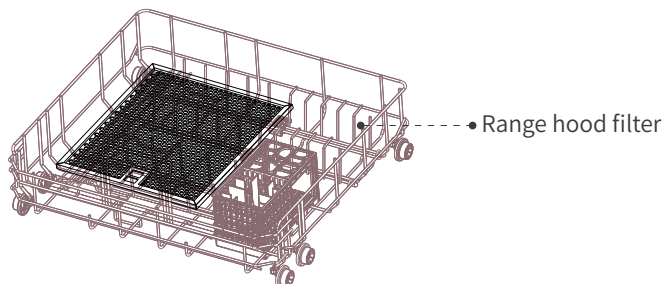

Reminder:

To avoid lasting accumulated grease result in bad cleaning performance, please do clean the range hood filter regularly.

Operation Instruction



Caution

- All tableware should be placed in their prescribed positions as shown in the picture.
- The bowls, plates, and dishes are placed slightly declined to facilitate cleaning and drying.
- Place cups and spoons facing down.
- The length of chopsticks should not exceed 23 cm and the chopsticks should be placed with their heads facing down.
- Chopsticks and small spoons are placed separately in the grid of the cutlery drawer, avoid overlapping when drying.



Caution

- Please put small cutlery in the cutlery rack to avoid falling during washing.
- Please place the tableware as required, do not overlap them, otherwise they will not be cleaned properly.
- Tableware with a concave bottom is likely to retain water, so please place it at a certain angle.
- The stained side of the tableware is facing down, therefore water flow can completely wash it away when rinsing.
- The tableware should not protrude from the bottom of the rack or be placed so high that it would interfere with the rotation of the upper and lower spray arms.
- After washing, there will be a lot of high temperature steam inside the machine. Please be careful when opening the door to avoid burns.
- When taking out the tableware, first take off the cutlery rack, and then take the tableware from upper rack.
- When pushing the washing rack back into the dishwasher, do not scratch the inner wall with sharp utensils.
- The surface of the washing rack cannot be scratched with sharp objects, as the coating on the surface of the washing rack will rust if scratched.
- With the rack pushed in, pull the spray arm once to check that the spray arm can rotate freely.
- Small utensils may fall out from the washing rack and be discharged out of the dishwasher with the sewage. Please do not wash such items.

Use of salt dispenser

The function of the salt dispenser is to soften the water, reduce the water limescale, and make the surface of the tableware as bright as new. Especially suitable for areas with high water hardness.

● Water hardness and water hardness setting level reference table

Water hardness (ppm)	0-90	100-200	210-300	310-400	410-600	610-800
Water hardness level	H1	H2	H3	H4	H5	H6

Note: 1. The default setting of dishwasher is H4.





2. Level H1 is preset to not to soften the water, and the "Refill Salt" indicator light will always be off.

3. The water hardness level in Hong Kong is H1.

Operation Instruction

● Adding salt

Dishwasher needs to add special salt (except for areas with water hardness level H1) to have the ability to soften water. Special salt is a consumable product that can be added once and used many times.

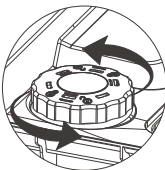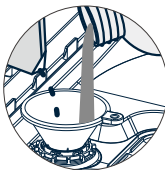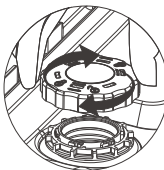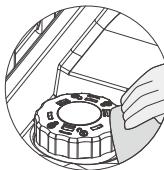			
STEP1	STEP2	STEP3	STEP4

STEP 1: Open the door, take out the lower rack, the salt dispenser is located on the left front side of the bottom of the inner cavity, unscrew it counterclockwise and take out the cover of salt dispenser;

STEP 2: Put the funnel firmly into the salt inlet of the salt dispenser, add about 500 grams of salt and water, pay attention not to spill the salt, fill up with water but no water flow out;

STEP 3: Align the cover with the salt filling port of the salt dispenser, and tighten clockwise;

STEP 4: If there is salt spilled or salt water flows out, please wipe it off with towel, otherwise the salt water will corrode the metal inner cavity and filter. After adding the salt, please run the "Rapid" mode once to clean the inner cavity.





Caution


- When the salt in the salt dispenser is insufficient, the panel will show "Refill Salt" to remind you to add special salt.
- After adding salt and water, the "Refill salt" indicator light may not turn off immediately, it needs to wait for the salt water to dissolve to saturated.
- Dishwasher special salt must be used, otherwise it will damage the inner cavity of the dishwasher.
- After adding salt each time, it is recommended that the dishwasher run a "Rapid" program without any load, and rinse the inner cavity once.


● Salt dispenser level setting


Refill Salt Rinse Aid


3



72h



UV


H4


2 4


1






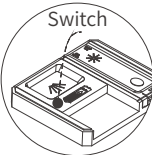
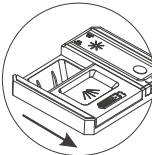
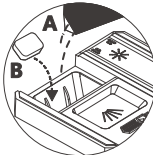
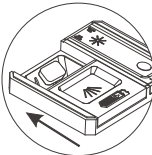
- STEP 1:** Close the door, press and hold the Power ON/OFF button "⏻" to power-on status;
- STEP 2:** Within 60 seconds of power-on status, press and hold the Start / Pause button "▶||" for 5 seconds to enter the setting mode;
- STEP 3:** "Refill Salt" and "Rinse Aid" in the control panel on the left side light up cyclically, indicating that it has entered to setting mode
- STEP 4:** Press again Start / Pause button "▶||" to adjust the level, the adjustment range is "H1-H6 (default H4)", the display panel displays the current level.
- Selecting the appropriate level, if there is no touch to Start / Pause button within 5 seconds, then exit the setting mode, enter to standby status, confirm and save the set level.

Operation Instruction

Use of cleaning powder/cleaning tablet and rinse aid

Cleaning powder/cleaning tablet for dishwashers, which can decompose oil stains on tableware and remove food residue. For the amount of cleaning powder, refer to the recommended usage amount for the corresponding washing mode in the "Washing mode program table"

● Adding cleaning powder/cleaning tablet:

			
Step1	Step2	Step3	Step4



Step 1: Open the door, the dispenser is located inside the door, press the powder box cover switch of the dispenser in the direction of the arrow ;

Step 2: After pressing the switch, the powder box cover switch of the dispenser will slide open automatically;

Step 3: Put an appropriate amount of cleaning powder or cleaning tablets;

Step 4: Push the powder box cover in the direction of the arrow, and then press the powder box cover until you hear a "click" sound.

● Adding rinse aid:

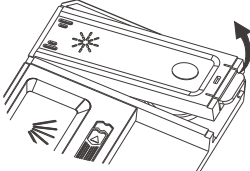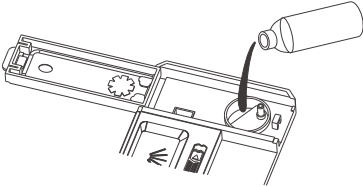	
Step1	Step2

Step 1: Open the door, the dispenser is located inside of the door, and pull off the cover of the rinse aid dispenser box;


Step 2: Slowly pour the rinse aid into the inlet of the dispenser, and fill it to the full position. If it is accidentally spilled, please wipe it with a cloth; after adding, press the lid to close the dispenser until a "click" is heard.


Note: 1. When the "Rinse Aid" indicator light in the display panel is on, it means that rinse aid needs to be added;

2. The rinse aid is good for drying the tableware, making the tableware as bright as new. During using the dishwasher, you need to add the 100ml rinse aid in the first time. Rinse aid is consumable that are added once and used multiple times.


Operation Instruction

● Rinse aid dispenser dosage level setting

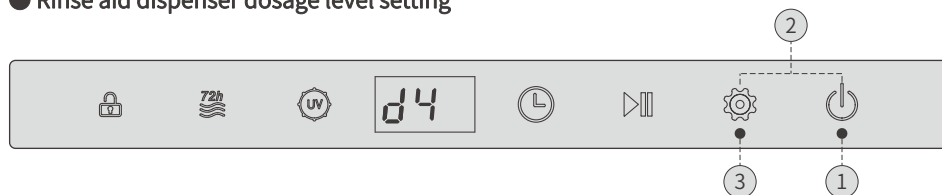

STEP 1: Close the door of the dishwasher, press and hold the Power ON/OFF button "  " to enter to power-on status;

STEP 2: Within 60 seconds of power-on status, press the Power ON/OFF button "  " and the Washing mode switching button "  " simultaneously for 5 seconds to enter the status of setting the rinse aid level, and the display panel will display the current rinse aid level;

STEP 3: Press the Washing mode switching button "  " to select the level. If there is no operation within 5 seconds, the current level will be saved and exit to the power-on status.

Note: 1. There are 6 levels of detergent, the lowest level is d1, the highest level is d6, and the default level is d4.

2. If the surface of the tableware feels greasy after cleaning, please lower the level and run the dishwasher to clean the tableware again.




Caution

- Please use special cleaning powder, rinse aid, and salt for dishwashers. Non-special detergents such as ordinary detergent for washing dishes are not allowed.
- If ordinary detergent is used, a large amount of foam will be produced in the dishwasher, which may cause a water leakage alarm of the dishwasher.
- Please keep the cleaning powder, rinse aid and salt out of the reach of children to avoid the risk of accidental eating.
- When the dishwasher is not in use, please do not put cleaning powder into the appliance, so as not to affect the cleaning effect after the cleaning powder gets wet.


Functional operation


● Washing Mode Operation


Operation area on the right side of the control panel

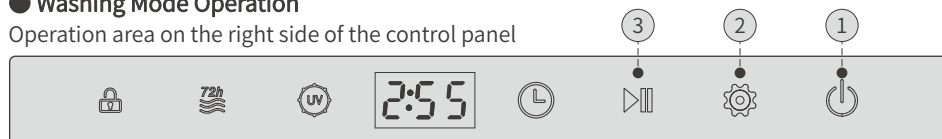


Operation area on the left side of the control panel

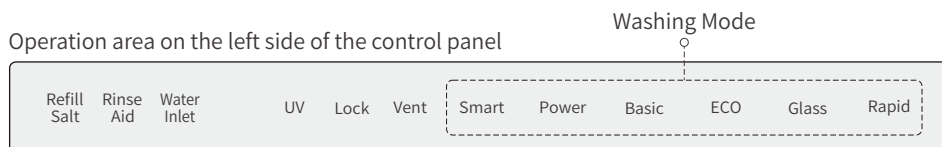

Step 1: Place the tableware, put cleaning powder in the dispenser, close the door of the dishwasher, and press and hold the power switch "  " to enter to power on status;

Step 2: Press the Washing mode switching button "  " to select the desired washing mode, the control panel on the left side will light up statically to display the selected washing mode, and the screen will display the corresponding washing operation time;

Step 3: After selecting the washing mode, press Start / Pause button "  " to start the work, the washing mode indicator will flash, and the washing operation on the display panel will start counting down.

Operation Instruction

● Washing mode program

Mode	Scope of application	Cleaning Powder(g)	Estimated operating time
Smart	Smart analysis selects the best washing program	27.5	1:30 - 3:00
Power	Suitable for heavily soiled tablewares	27.5	2:55
Basic	Suitable for normally soiled tablewares	27.5	1:00
ECO	Suitable for dirty tablewares	2.5+25	3:55
Glass	Suitable for generally dirty tableware and tableware with clean surface, such as glass products, etc	27.5	1:30
Rapid	Suitable for slightly dirty tableware or tableware which is clean but has been stored for a long time.	Not add	0:25

Note: Select the "ECO" program, in order to achieve a better cleaning effect, the recommended way to add cleaning powder: add 2.5 grams of cleaning powder outside the dispenser, add 25 grams of cleaning powder inside the dispenser.

⚠ Caution:

- ① When the dishwasher is in operation, if you need to manually stop the washing program, please press and hold the Start/Pause button "▶||" for 3seconds, and the dishwasher will stop washing. The drainage pump starts to drain water, and enters the standby status after the drainage is completed, and enters the shutdown status after 15 seconds of no operation.
- ② When the dishwasher is in operation, if you need to change the washing mode, please press and hold the Power ON/OFF button "⏻" to turn off the dishwasher, then turn it on again, select and start a new washing mode.
- ③ After the washing program ends, the display panel will display "FAN", indicating that the dishwasher is in the PTC heating stage.


Note: PTC heating function is included in "Smart, Power, Basic, Glass" mode. It will start PTC heating after washing automatically.

● Child lock function operation

When the dishwasher is in operation, in order to prevent children from misoperation and affecting the normal operation of the machine, please turn on the child lock function.



Steps: Press and hold the child lock function button "🔒" in the control Panel on the right side for 3 seconds, and the "Lock" indicator light in the control panel lights up. Except for the child lock function button, other buttons are locked. When the panel is locked, press and hold the child lock function button "🔒" for 3 seconds to exit the locked screen.



Caution


- Do not allow children to play and do not let children and people with disabilities operate the dishwasher to avoid accidental injuries such as electric shock and burns.
- During washing, please do not open the door to avoid scalding by high-temperature steam and splashing of water.
- When the dishwasher is not in use for a long time, turn off the water source and unplug the electrical plug.
- During washing, please do not move or tilt the dishwasher, otherwise it will cause the danger of water leakage and electricity leakage.
- During using, please do not manually add water into the dishwasher, which may cause the risk of water leakage from the dishwasher.

Operation Instruction


● Ventilation function operation




Ventilation function is included in "Smart, Power, Basic, Glass, Rapid" mode. 72-Hour ventilation function and Fresh Air ventilation function will be enabled after washing program to remove odors. If you want to disable the Ventilation function.

Step 1: Close the door of the dishwasher, press and hold the Power ON/OFF button "  " to enter the power-on status;

Step 2: Press the washing mode switching button "  " to select the desired cleaning program;


Step 3: Press the ventilation function button "  " to turn off the ventilation function. "Vent" indicator will be off;

Step 4: Press the start/pause button "  " to start washing.


Note: The "Ventilation" function starts 15 minutes of hot air and 2 minutes of cold air every 2 hours; the "Fresh Air ventilation" starts 15 minutes of cold air every 4 hours.


● UV light disinfection function operation



Step 1: Close the door of the dishwasher, press and hold the Power ON/OFF button "  " to enter the power-on status;


Step 2: Press the Washing mode switching button "  " to select the desired washing program;

 
Step 3: Press the UV light disinfection function button "  " to turn on the UV light disinfection function, and automatically turn on the UV lamp disinfection function after the program is finished;

Step 4: Press the Start/Pause button "  " to start washing.


Note: UV light disinfection function is included in "POWER, BASIC, GLASS" mode.


● Delayed start function operation

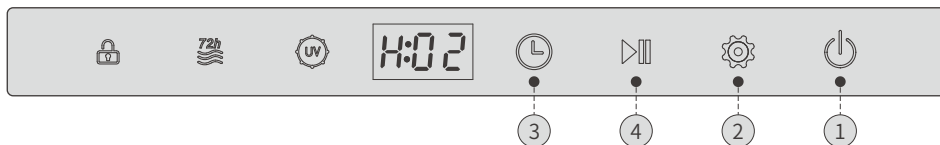

Step 1: Close the door of the dishwasher, press and hold the Power ON/OFF button "  " to enter the power-on status;

Step 2: Press the Washing mode switching button "  " to select the desired washing program;

Step 3: Press the Delayed start button "  ", select the desired delay start time (H:00-H:24), the dishwasher will start washing after the preset time;

Step 4: Press the Start / Pause button "  " to start the countdown, the preset time will be displayed and the corresponding washing program will flash.

Note: During the preset process, press and hold Delayed Start Function "  " for 3 seconds, the display panel will display H:00, and H:00 means there is no preset delayed start function.

Maintenance

Maintenance

In order to maintain the good washing performance of the dishwasher, please clean the filter regularly, and check whether the filter and the spray arm are blocked by food debris.



Caution

- Do not use bleach, detergent, diluting and other corrosive cleaning agents to wipe and clean.
- Wipe the body with a well-wrung soft cloth. When using a artificial cloth, please follow its instruction manual.
- When there are stains and odors in the inner cavity of the dishwasher, you can add cleaning tablet or commercially available special body cleaner for dishwashers, and use the "BASIC" program without adding any tableware to keep the inner cavity of the dishwasher clean.
- If the spray arm is not installed correctly, it will not be possible to wash the dishes.



Caution


- Do not add water manually and use sharp metal objects.
- Non-professional technicians are strictly forbidden to disassemble, repair or modify the machine.
- If the electrical cable is damaged, in order to avoid danger, it must be replaced by the manufacturer, its maintenance department or professionals from relevant departments.

●Cleaning filter

Open the dishwasher door and pull out the lower rack.



Step1

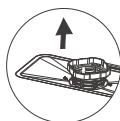

Step2



Step3



Step4



Step5

Step 1: Turn the screw cap counterclockwisely and remove the filter.

Step 2: Lift up and take out the stainless steel filter at the same time.

Step 3: Rinse the stainless steel filter with running water, or use a soft brush to clean it, but do not use an iron brush or stainless steel wire ball brush, which will rust the stainless steel filter.

Step 4: Rinse the screw cap and filter with running water.

Step 5: After cleaning, put it back into the dishwasher. The screw cap needs to be rotated clockwise. When the small triangle of the screw cap match to the small triangle of stainless steel filter, it means that the screw cap is tightened. After fix to the correct place, push the lower rack back to the original position.



Caution

- If the filter is clogged, it may cause poor washing effect or cause mildew, odor, water leakage and other adverse consequences.
- It is recommended to clean the filter after each use, and do not damage the filter when cleaning.

Maintenance

● Cleaning the upper spray arm/lower spray arm

Open the dishwasher door and pull out the upper and lower rack respectively.

Clean the upper spray arm



- A. Disassembly: Fix the snap ring of the upper spray arm by hand, rotate the upper spray arm in the direction of the unlock arrow (counterclockwise), and pull the spray arm down after loosening.
- B. Installation: Align the pipe of the upper spray arm with the pipe opening of the snap ring, and then rotate in the opposite direction to be the installation position.
- C. Check whether the water outlet hole of the spray arm is blocked, if necessary Pick out with a fine-tipped iron wire, or use plenty of running water to flush out the clogged hole.



Clean the lower spray arms



- A. Disassembly: Hold the middle of the lower spray arm with your hand and pull it out vertically.
- B. Installation: Insert the pipe part of the lower spray arm into the base of the body Press the pipe until you hear a "click" sound to confirm that the spray arm can rotate easily.
- C. Check whether the outlet hole of the spray arm is blocked. If there is a hole blocked, it is necessary to pick out with a fine-tipped iron wire, or use plenty of running water to flush out the clogged hole.



Troubleshooting

Fault codes and common problems

If the dishwasher is found to be abnormal during normal use, please check and deal with it according to the following contents. If the fault cannot be eliminated, please stop using it immediately, pull out the electric plug, turn off the water hose switch, and please contact our company.

Error code

Code	Possible cause of failure	Solutions
E01	Short circuit of temperature sensor	Please contact us to arrange repairing.
E02	Open circuit of temperature sensor	Please contact us to arrange repairing.
E03	Dishwasher heating failure	Please check whether the tableware is placed flat with its front facing up. If it is placed facing up, it will contain water, resulting in too little water inside the dishwasher, so it will not be heated.
E04	Water inlet fault	Please contact us to arrange repairing.
E05	Water leakage	1. Check if the drain pipe is hanging too high. 2. Check whether the drain pipe is knotted, blocked, or bent. 3. Check the drain pump for malfunction.
E06	Heating abnormal	Please contact us to arrange repairing.
E10	Water inlet abnormal	Check whether the water input is normal.
E11	Shunt failure	Unplug the electric plug and plug it in again for operation.

FQA

Error symptoms	Possible cause of failure	Solutions
The tablewares are not dried.	1. There is a lack of rinse aid or the level of rinse aid in the dispenser is low.	A. Add rinse aid for dishwashers. B. Turn up the rinse aid level.
	2. The tableware is not placed neatly, and the tableware is stacked on top of each other.	Refer to the tableware placement requirements in the instruction manual.
	3. The washing mode is not finished.	The washing program should be completed according to the normal procedure.
	4. The washing mode is RAPID.	There is no drying program in RAPID mode.
No response to the operation	1. The control panel or hands are greasy.	Cleaning glass and hands
	2. Possible child lock status.	Release the child lock.
	3. The gate control circuit board is faulty.	Please contact us to arrange repairing.



Caution

- When the water supply is stopped, shut down the dishwasher and turn off the water hose switch. After the water supply is restored, please drain the turbid water, then turn on the water hose switch and restart the dishwasher for operation.
- In case of power failure or tripping circuit breaker, please restart the dishwasher after the power supply returns to normal.

Troubleshooting

Error symptoms	Possible cause of failure	Solutions
Cleaning powder or cleaning tablet residue	1.The tableware in the lower rack is placed too full, and the water cannot go into the dispenser.	Refer to the washing rack placement requirements in the instruction manual.
	2.The water outlet of the spray arm is blocked, and the flow of spray flushing water is weak.	Clean up the water outlet of the spray arm, and then run the RAPID mode once to wash the tableware again.
	3.The amount of cleaning powder is too much.	A. Run RAPID mode to wash the dishes once. B. Corresponding to the washing mode, add the corresponding amount of cleaning powder.
	4.Use inferior cleaning powder or cleaning tablets.	A. Run rapid mode to wash the dishes once. B. Use regular special cleaning powder or cleaning tablets.
Foam left in inner cavity	Special cleaning powder is not used or too much cleaning powder is used.	Manually remove the foam first, and then start any washing mode for about 3 minutes. After the program is finished, run it repeatedly until the foam disappears.
Banging noise during washing	Tablewares are touching the spray arm.	Rearrange the tablewares.
Dishes are not cleaned.	1.Tableware is stacked on top of each other when placed.	Refer to the washing rack placement requirements in the instruction manual.
	2.The washing mode is not selected correctly.	Select the corresponding mode according to the degree of dirt and quantity of the tableware.
	3.Special cleaning powder is not used or the dosage is not enough.	Put in the special cleaning powder, and put in the amount of cleaning powder that corresponds to the cleaning mode.
	4.The filter is not cleaned.	Clean the filter regularly.
	5.The water outlet of the spray arm is blocked.	Check and clean the spray arm water outlet.
	6.The spray arm is stuck on the tablewares.	Check if tablewares are caught in the spray arm.
	7.The residue on the surface of the tableware is severely dried.	Soak the tableware for a period of time before washing.
	8.There is an abnormality in the washing process.	Run the washing program again.
	9.Certain types of dirt are difficult to clean.	It is recommended to scrub the difficult-to-clean dirt with a wire brush ball first.
When the dishwasher is not in use, a large amount of water accumulates inside	1.The drain pipe hangs too high.	Refer to the instructions to adjust the installation position of the drain pipe.
	2.Drain pipe is knotted, blocked, and folded.	Check and organize the drain pipe.
	3.Drain pump failure.	Please contact us to arrange repairing.
	4.Water inlet fault.	Please contact us to arrange repairing.
When the dishwasher is powered on, there is a "whirring" sound, and the display shows "FAN"	Programmed periodic ventilation system operation.	It is normal and does not need to be dealt with.

Product Specifications

Product specifications

Product name	Dishwasher
Model	SZDW10G
Product code	SZDW10G
Rated voltage	220V
Rated frequency	50Hz
Rated input power	1270W
Rated water pressure	0.04-1.0MPa (Water inlet)
Control method	Fully automatic
Waterproof level	IPX1
Rated capacity	Chinese tableware 10set
Washing method	Spraying
Drying method	PTC heater
Bacteria removal rate	≥99.9%
Water efficiency Grade	Grade 1
Energy efficiency Grade	Grade 1
Washing program	Smart / Power / Basic / ECO / Glass / Rapid
Types of detergent	Cleaning Powder / Cleaning Tablets
Rack	2 layers (With cutlery rack)
Delayed start function	0-24 hours
Warning indicator	Lacking of salt / lacking of detergent / Water leakage
Noise	55dB
Working cycle water consumption (L)	7.8 (ECO)
Working cycle energy consumption(kW·h)	0.71 (ECO)
Product Weight	27.5kg
Dimensions	Width 595 X Height 625 X Depth 525mm
Installation space dimensions	Width 560 X Height 610 X Depth 550mm

Note1: Sterilization Standard:QB/T 5133-2017、Water efficiency level and Energy efficiency level Standard: GB 38383-2019、Noise Standard:IEC 60704-1.

Note2: Due to product improvement and technical update, if the specifications are changed, please refer to the actual product without prior notice.



香港中華煤氣有限公司

The Hong Kong and China Gas Company Limited

202401