

抽油煙機 Range Hood

使用說明書 User Instructions

型號 Model



SRHT712XDA(SL)

目 錄


重要安全指示	第 1 頁
部件名稱	第 2 頁
安裝附件	第 2 頁
安裝指引	第 3 頁
安裝程序	第 4 頁
使用方法	第 6 頁
日常保養	第 7 頁
故障處理	第 9 頁
接線圖	第 10 頁
規格	第 10 頁

重要安全指示

感謝您選用Mia Cucina產品，如有任何有關使用及維修的查詢，請致電24小時客戶服務熱線2880 6988。

1. 當拆洗集油杯、小油杯及保護網時，請勿開機使用。
2. **警告：**當使用煮食器具時，須注意本機可能會有輕微發熱。
3. 切勿讓兒童、行動不便或缺乏經驗知識者使用本機，除非有人在旁監督或提供指導。
4. 請將本機遠離兒童，不要讓兒童使用本機。
5. 當更換燈泡時，請關閉電源。
6. 燈泡規格
 - 單蓋燈，圓形
 - 最大功率 11W
 - 電壓範圍AC 220 - 240V
 - E27型
 - 與更換的燈相同
7. 切勿讓非專業人員拆除本機內部。(含第八項異常狀況處理)
8. 切勿在鍋中燃火(當烹調燒酒雞之類的食物，嚴禁鍋中燃火，以免燒壞機體)。
9. 切勿用水直接沖洗機體及內部電子零件或把機體浸泡在水裡，以免產生漏電或損壞馬達。
10. 切勿使用強酸或強鹼之清潔劑浸泡清洗集油杯、小油杯及機體。
11. 當抽油煙機和其他燃燒燃料的器具同時使用時，室內需有充足的空氣循環。
12. 請依照說明書指示清潔抽油煙機以避免產生火警。
13. 未放置鍋具時，不可讓抽油煙機底下的爐火空燒，以免溫度太高損壞內部機件。
14. 抽油煙機不可和其它燃燒燃料的器具使用同一個排氣管道。
15. 若電源線損壞，須由生產商、其服務代理商、或具備同樣資格的維修人員進行更換，以免發生危險。
16. 切勿清潔抽油煙機內部零件。
17. 電源插座必需安裝地線。
18. 切勿用有強酸或強鹼之清潔劑清洗或浸泡風扇，以免破壞風葉之表面層，造成脫漆。
19. 必需遵守排放空氣的規定。

部件名稱

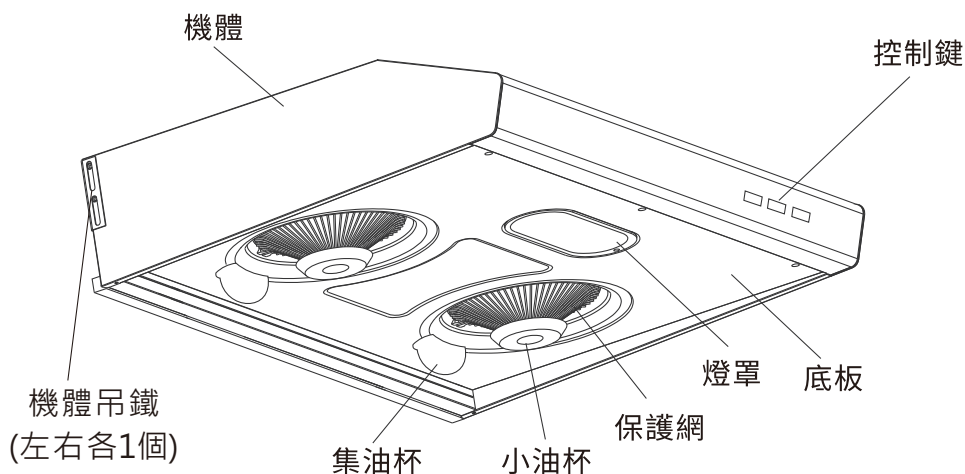

安裝附件

A. 壁掛式安裝


項目	附 件	簡 圖	數量	項目	附 件	簡 圖	數量
1.	膨脹螺絲		2支	3.	鑽孔模板		1張
2.	適配座		1個	4.	密封條		1條

B. 廚櫃底安裝

項目	附 件	簡 圖	數量	項目	附 件	簡 圖	數量
1.	安裝模板貼紙		1張	4.	彈簧墊圈		4個
2.	平頭螺絲 (3/16" X 1½")		4支	5.	螺母		4個
3.	墊圈		4個	6.	適配座	(同上)	

安裝指引

1. 抽油煙機安裝之周圍，應避免門窗過多而產生空氣對流太大，則無法發揮其排煙之效果。(圖4-1)
2. 抽油煙機安裝於爐台之正上方。(圖4-2)
3. 安裝後之機體不能歪斜應保持水平，否則集油杯內積油將傾向單邊而溢出。(圖4-3)
4. 排風出口至機體之距離，應盡量避免過長，以免氣流擠壓於管內，影響其排風效果。
5. 抽油煙機之安裝高度為爐面至機體最低為之距離，最少為65cm；倘上述距離有別於爐具生產商的建議，則以較遠者為主。(圖4-4)
6. 接駁電源必須符合標籤上所示的額定電壓，並由合格資格技術的人員處理。
7. 應符合條例中有關廢氣排放事宜。

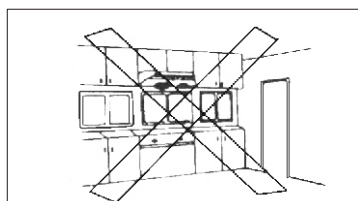

門窗太多，對流太大 圖4-1

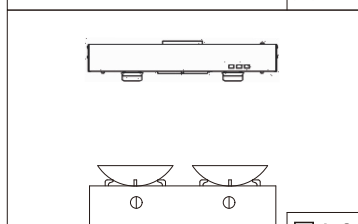


圖4-2

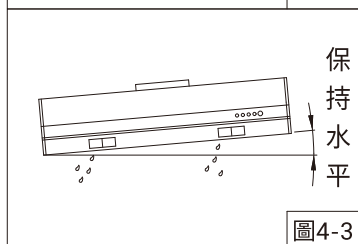


圖4-3

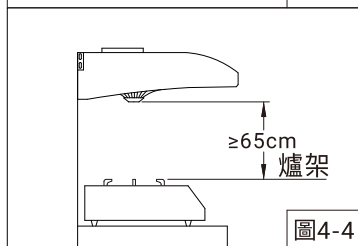


圖4-4

安裝程序

1. 打開紙箱檢視說明書、適配座等附屬配件是否齊全。
2. 安裝前先測試,操作開關上之各項功能是否正常(馬達運轉、照明),嚴禁將手伸入除油煙機內部以避免觸及風扇發生危險或損壞風扇。

3. 密封條安裝說明:

- 機體於安裝吊掛前,須先裝上密封條
 - a. 從附件包內取出密封條後,先撕下背膠貼紙。(圖5-1)
 - b. 依機體後方之位置黏貼,黏貼後再稍加按壓密封條,使其確實固定後即可。(圖5-1)






4. 機體之安裝:

a. 吊鐵安裝方法:

- 將吊鐵安裝模板A貼於擺放抽油煙機之牆壁位置上,以適當鑽頭鑽孔(左右各1孔),將膨脹螺絲固定孔內。(圖5-2)
- 調整機體兩側之吊鐵,將機體懸掛於膨脹螺絲上,然後將膨脹螺絲之螺帽旋緊。(圖5-3)

b. 機體背板安裝方法:

- 將背板安裝模板B貼於擺放抽油煙機之牆壁位置上,該模板安裝孔的中心線距離櫥櫃底60 mm,以適當鑽頭鑽孔(左右各1孔)將膨脹螺絲固定孔內。(圖5-4)
- 拆下油煙機附有的吊鐵和底板,將機體背板的兩側孔固定於膨脹螺絲上,然後將膨脹螺絲之螺帽旋緊。(圖5-5)
- 安裝回底板。

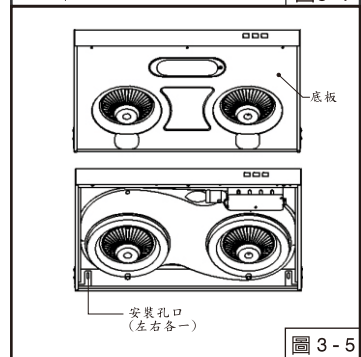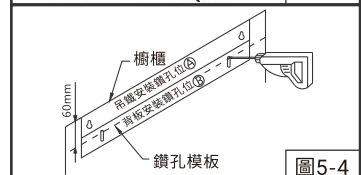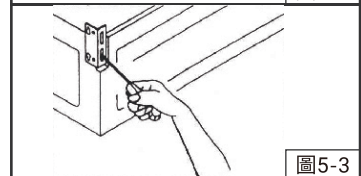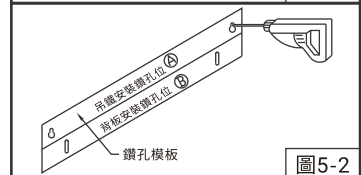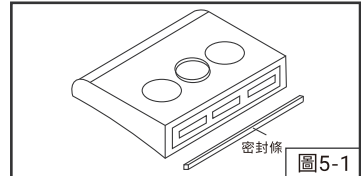

安裝程序

c. 廚櫃下安裝




- 將安裝模板貼紙貼在廚櫃板底部(文字面朝下)，依照標示進行鑽孔。(圖5-6)
- 將四支平頭螺絲分別由廚櫃板的上方穿過鑽孔。(圖5-7)
- 從油煙機拆除機體底板,將機體頂部鑰匙孔對準廚櫃底板的平頭螺絲,使平頭螺絲穿過鑰匙孔。(圖5-8)
- 依正確次序將墊圈、彈簧墊圈及螺母鎖緊於平頭螺絲皆鎖緊(共四處)。(圖5-8)
- 安裝妥當後(共四處)・裝回底板。

5. 懸掛後,機體一定要保持水平並將機體鎖好固定。

6. 將適配座固定於機體出風口。

7. 將鋁風管之一端套入風管座,拉伸鋁風管至所需長度後,將風管另一端固定於排風出口。

8. 安裝後請將機殼表面之PE保護膜撕掉,避免沾附油煙後無法撕掉。

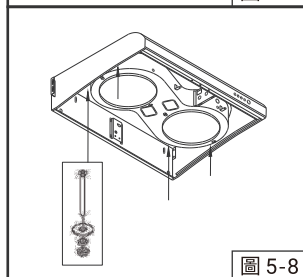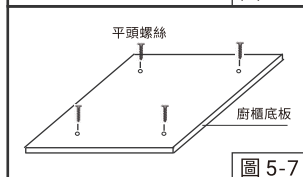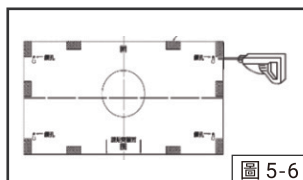

使用方法



1.  鍵：開關控制鍵/風速控制鍵

左右馬達獨立控制,按鍵三段式操作。

『O』表示電源關閉狀態

『II』表示抽油煙機高速運轉

『I』表示抽油煙機低速運轉

2.  鍵：照明燈控制鍵

開燈與關燈間切換,此按鍵為一獨立運作開關,不受開關機狀態之影響。

日常保養

進行清潔時，應穿上保護手套避免割傷。

日常保養重於維修：

為發揮本機最佳性能，延長使用壽命，應經常注意保養。

※保養維修時應關閉電源！

A.常保持機體外部清潔：

使用後請用乾布或沾有中性清潔劑之抹布，擦拭機體外殼、底板表面，經常清潔以保持其美觀、衛生和靈敏度。

B.清除積存之油汙：

當集油杯、小油杯內所盛之油汙已達八分滿，須即時將油汙倒掉，以免有溢出的可能。(集油杯、小油杯之裝拆已於使用方法中敘述)

1. 小油杯之裝拆：

手持小油杯，依逆時針方向旋轉，即可取下，依順時針方向裝回原位。(圖7-1)

2. 集油杯之裝拆：

集油杯取出時，只需用手將集油杯拉出來，裝回時將集油杯依原位往內推進至底即可。(圖7-2)

3. 易拆程序說明：

拆卸前請先將電源插頭拔掉。

*底板之裝拆：

拆：a. 取下小油杯及集油杯(參考第1、2點)。

b. 先扶住底板，再分別旋開三顆易拆螺絲(圖7-3)，即可鬆開底板，並將其懸掛於機體後方(圖7-4)。

c. 若欲完全拆除底板，則先握住底板左右兩側，並將其任一側傾斜至可抽取之角度即可。(圖7-5/7-6)

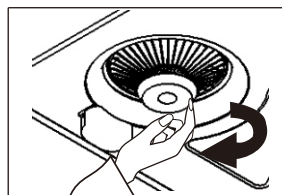


圖 7-1

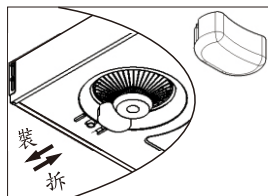


圖 7-2

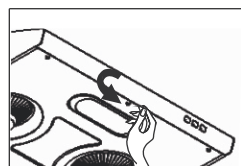


圖 7-3

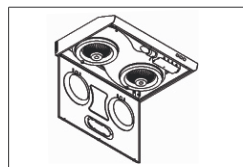


圖 7-4

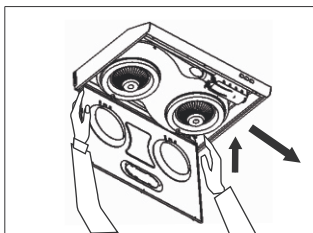


圖 7-5

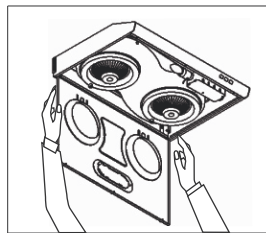


圖 7-6

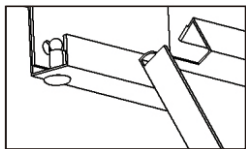


圖 7-7

裝:a.欲將底板裝回時，則先握住底板左右兩側傾斜一邊，將拉柄插銷使其定位於機體後方之溝槽內。(圖7-7/7-8)

b.再用雙手往上推後，將螺絲重新鎖緊即可。

註:底板裝回後，三顆易拆螺絲務必鎖緊，使底板與機體貼合，以確保抽油煙機正常運作。

4. 導油盤之裝拆:

a.依順時針方向旋轉導油盤，即可將其取下(圖7-9)。

b.欲裝回時則以逆時針方向旋轉導油盤至定位點即可。

5. 風扇之裝拆:

a.手扶風葉，依順時針方向旋開網束(圖7-10)，即可取下風葉(圖7-11)

註:須小心取下風葉以免因碰撞而使葉片變形。

b.欲裝回風葉時，先將風葉置入，再將網束旋緊即可。(須確實旋緊)

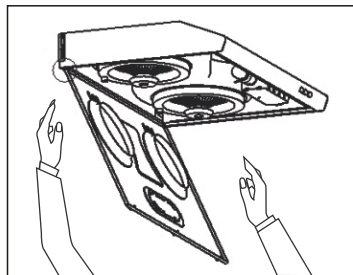


圖 7-8

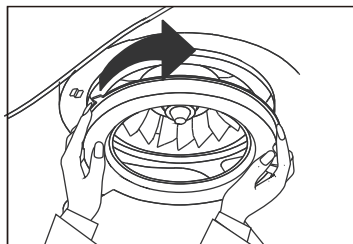


圖 7-9

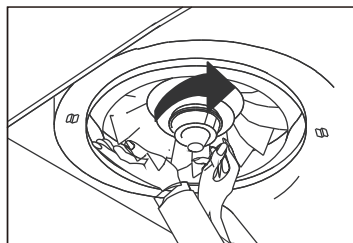


圖 7-10

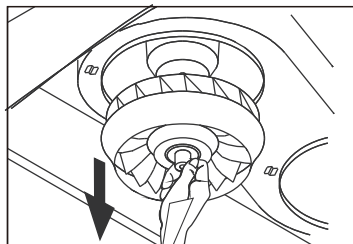


圖 7-11


故障處理

1. 使用中發現異常狀況時，請將開關電源切掉，並請合格技師進行維修。
2. 處理異常狀況時請將開關電源切掉

狀況	原因及處理方法
電源線損壞	▲ 若電源線損壞，須由生產商、其服務代理商、或具備同樣資格的維修人員進行更換，以免發生危險。 ▲ 電源線規格:VDE H05VV-F 0.75mm² X3C綠滾黃接地線附圓型端子。 ▲ 插頭規格:250V/13A 三角腳扁插頭。
燈亮馬達不轉	A. 若電容器已燒毀，則需更換新電容器。 B. 若按下"☐"按鈕上的『o』鍵,馬達稍運轉即停止,而於馬達處有一股燒焦的臭味,馬達可能已經燒毀,必須更換新馬達。
機體震動	A. 查看馬達是否鎖緊。 B. 如馬達已鎖緊，則是風葉受損；不平穩轉動會產生機體震動，應更換風葉
吸力不強	A. 抽油煙機與檯面的距離太高。 B. 抽油煙機周圍環境門窗通風多，對流太多。 C. 抽油煙機裝置於窗戶處所導致，最好在抽油煙機後部下方放一塊板子，與抽油煙機後部對齊，遮住窗戶。 D. 參考安裝原則及安裝注意事項進行安裝。
機體裝設歪斜	A. 如太右歪斜則由吊鐵調整左右高度。 B. 如向前傾斜，則由木螺釘再行鎖入牆壁，(釘身大約十字起子0.5~1公分於壁外，或查看吊鐵固定於機體的螺絲是否鬆落。
馬達運轉無明顯變速	須更換馬達。
嗡嗡異音	須更換馬達。

接線圖

雙馬達除油煙機配線圖
WIRING DIAGRAM OF TWO MOTORS RANGE HOOD

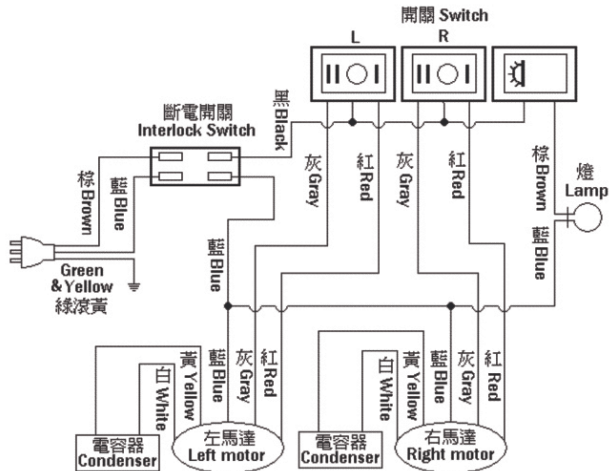

註 (REMARKS): 交流電壓220V/240V使用2.5 μ F 400VAC電容器
CONDENSER 2.5 μ F400VAC FIT AC 220/240V

規格

型號	SRHT712XDA(SL)
銷售代號	SRHT712XDA(SL)
淨重量(公斤)	11.0
機體尺寸(毫米) 闊(W) x 深(D) x 高(H)	710 X 510 X 100
額定電壓及頻率	交流電220伏特 / 50赫
馬達數量(個)	2
出風口直徑(毫米)	Ø152
照明(瓦)	節能燈泡 11W
馬達轉速(轉數/分鐘)	1400 / 1300
排風量(立方米/分鐘)	11.5 / 10.2
額定總功率(瓦)	171
馬達功率(瓦)	160

Table of Contents


Important Safety Instructions - - - - -	P. 1
Part Descriptions - - - - -	P. 2
Installation Accessories - - - - -	P. 2
Installation Guidelines - - - - -	P. 3
Installation Procedures- - - - -	P. 4
Operating Instructions- - - - -	P. 6
Daily Maintenance- - - - -	P. 7
Troubleshooting - - - - -	P. 9
Wiring Diagram - - - - -	P. 10
Specifications - - - - -	P. 10

Important Safety Instructions

Thank you for choosing Mia Cucina products. Should you have any enquires about operation and maintenance, please call 24-hour Customer Service Hotline 2880 6988 .

1. Do not turn on range hood when remove or clean the fan guard, oil collector and oil cup.
2. **CAUTION:** Accessible parts may become hot when used with cooking appliances.
3. The appliances is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Disconnect the power supply before cleaning, repairing replace the light bulb or dismantling the range hood.
6. Lamp specifications
 - Single-capped lamps, circular shaped
 - Max. 11W
 - AC 220 - 240V
 - E27
 - Same as for the lamp which is replaced.
7. It is forbidden to dismantle the appliance by an unqualified technician.
8. When frying, take particular care to prevent oil and grease from catching fire.
9. Do not splash water to the hood or soak the hood in water or it may cause short circuit or damage the motor.
10. Do not use strong acid or strong alkaline detergent to clean the oil collector, oil cup and casing.
11. There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
12. There is a fire risk if cleaning is not carried out in accordance with the instructions.
13. Do not flame under the range hood. Cover flame with cooking utensil whenever burner is on.
14. The air must not be discharged into a venting pipe that is used for exhausting fumes from appliances burning gas or other fuels.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Do not clean the internal components of the hood.
17. The hood must be earthed.
18. Do not use strong acid or strong alkaline detergent to clean the fan blades, otherwise it may damage the blades' coating.
19. Regulations concerning the discharge of air have to be fulfilled.

Part Descriptions

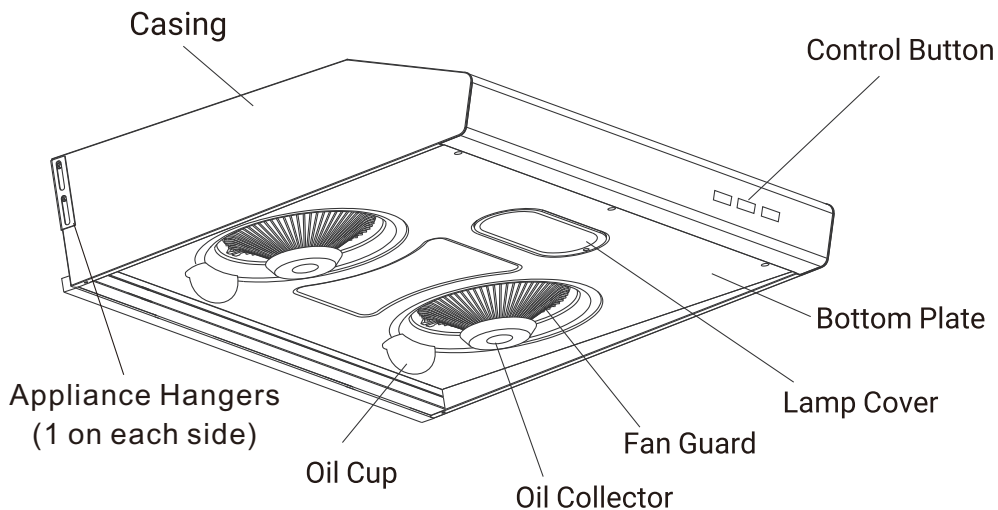

Installation Accessories

A. Wall mounted installation


Item	Accessories	Sketch	Quantity	Item	Accessories	Sketch	Quantity
1.	Sleeve Anchor		2 pcs	3.	Drilling Template		1 sheet
2.	Pipe Adapter		1 pcs	4.	Plastic Strip		1 pcs

B. Under cabinet installation

Item	Accessories	Sketch	Quantity	Item	Accessories	Sketch	Quantity
1.	Installation paper template		1 sheet	4.	Spring washer		4 pcs
2.	Flat Head Cap Screws (3/16" X 1 1/2")		4 pcs	5.	Hex nut		4 pcs
3.	Washer		4 pcs	6.	Pipe Adapter	(Same item as above)	

Installation Guidelines

1. Too many windows and doors surrounding the appliance will cause air convection, worsening the performance of air-exhaust (Fig 4-1).
2. The appliance shall be installed on the frontal upper side of cooking area (Fig 4-2).
3. After installation, the hood shall be kept in horizontal position to prevent grease from pouring out of oil collectors (Fig 4-3).
4. Minimize the distance between the exhaust outlet of the appliance and the air venting hole for effective air exhaustion.
5. The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood.
When the range hood is located above a gas appliance, this distance shall be at least 65 cm.
If the instructions for installation for the gas hob specify a greater distance, this must be adhered to. (Fig 4-4).
6. When making the electrical connections, check that the voltage values correspond to those indicated on the appliances.
7. Regulations concerning the discharge of exhaust air have to be fulfilled.

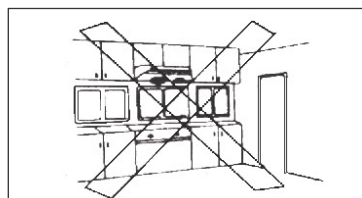

Too many windows and doors will cause air convection

Fig4-1


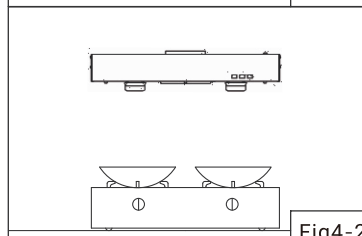


Fig4-2

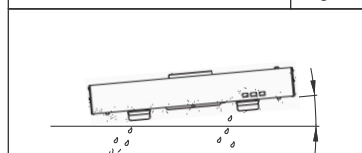

Keep machine in horizontal position

Fig4-3

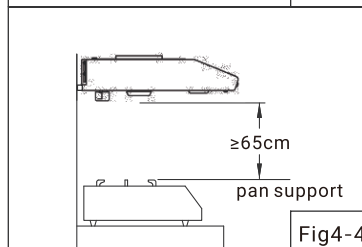


Fig4-4

Installation Procedures

1. Check if all installation accessories are ready.
2. Check if the range hood is functioning well. Do not touch the fan inside the hood to prevent any injury or damage to the fan.
3. Plastic Strip Installation Instruction:
 - Before installation the plastic strip must be firstly stuck to the range hood.
 - A. Take the plastic strip out from the accessory bag, tear off the tape. (Fig. 5-1)
 - B. According to the back of the range hood, the stick the plastic strip onto the range hood. Press the plastic strip slightly to ensure that it is firmly stuck. (Fig. 5-1)
4. Range hood installation:
 - a. Hanger Installation Method
 - Rest the drilling template against the wall and drill holes at the indicated positions (1 hole each at left and right), fix sleeve anchor to the drilled holes. (Fig. 5-2)
 - Adjust the hangers on the back of the appliance and hang the appliance to the wall, tightly screw the nut of sleeve anchor. (Fig. 5-3)
 - b. Back Panel Installation Method
 - Rest the drilling template against the wall. The distance between the bottom of cabinet is 60mm. Drill holes at the indicated positions (1 hole each at left and right), fix sleeve anchor to the drilled holes. (Fig. 5-4)
 - Remove 2 hangers on both sides. Detach the bottom plate. Install the range hood to sleeve anchors through the holes on the back sides of range hood. Tightly screw the nut of sleeve anchor. (Fig. 5-5)
 - Install the bottom plate
5. The appliance has to remain horizontal and fixed after hanging on the wall.
6. Fix the adapter to exhaust outlet.
7. Install one end of aluminum pipe into the pipe adapter. Extend the aluminum pipe to the required length. Install the other end of the pipe to the air venting hole.
8. Tean off the PE protecting film on the casing .Otherwise, the protecting film is difficult to be removed.

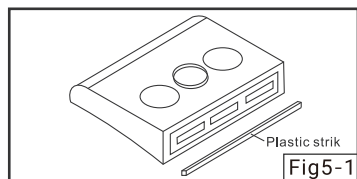


Fig5-1

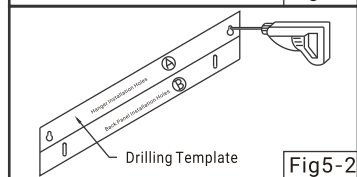


Fig5-2

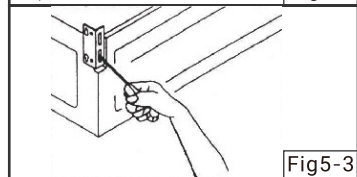


Fig5-3

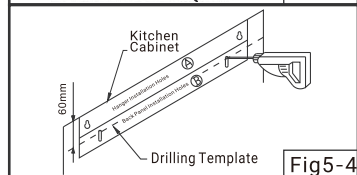


Fig5-4

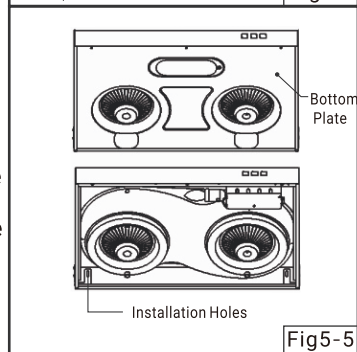


Fig5-5

Installation Procedures

● Under cabinet installation

1. Attach the installation paper template onto the bottom plate of cabinet (texts side face down). Drill holes according to the marks. (Fig. 5-6)
2. Insert the four flat head cap screws from the top of cabinet into the drilled holes. (Fig. 5-7)
3. Remove the bottom plate from range hood. Align the keyholes, which are located at the top of range hood, to the flat cap screws at the bottom plate of cabinet. Insert the flat cap screws through the keyholes. (Fig. 5-8)
4. Fasten the provided flat washers, spring washers, and hex nuts in correct order to the flat head cap screws. (Fig. 5-8)
5. Make sure the installations are proper (total four places), refix the bottom plate.

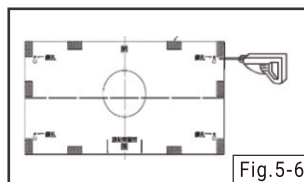


Fig.5-6

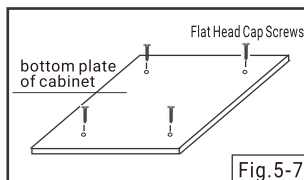


Fig.5-7

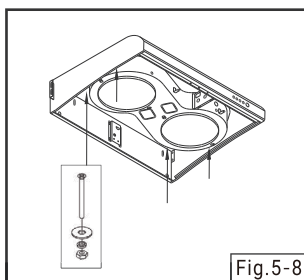


Fig.5-8

After installation

1. The appliance has to remain horizontal and fixed after hanging on the wall.
2. Fix the adapter to exhaust outlet.
3. Install one end of aluminum pipe into the pipe adapter. Extend the aluminum pipe to the required length. Install the other end of the pipe to the air venting hole.
4. Tear off the PE protecting film on the casing. Otherwise , the protecting film is difficult to be removed.

Operating Instructions



1. Button:

(1) Control on and off of range hood.

(2) Control the fan speed.

Left and right motor can be separated controlled with 3 modes operation.

『O』 Press the button to turn off the range hood.

『II』 Press the button for high speed of range hood.

『I』 Press the button for low speed of range hood.

2. Button: ON/OFF button of the light.

Press the button to turn on and off the light.

The operation of this switch is independent and will not affect the operation of the motor.

Daily Maintenance

Wear glove to protect the hand to prevent cutting by sharp edges when cleaning.

Daily maintenance is more important than servicing.

Good maintenance gives the best performance and prolongs the life span of the appliance.

※ **Disconnect the main supply or unplug before cleaning.**

A. Always keep the appliance clean. After use, please wipe the casing, and the surface of bottom plate with dry cloth soaked in mild detergent to keep the hood clean and maintain the sensor's sensitivity.

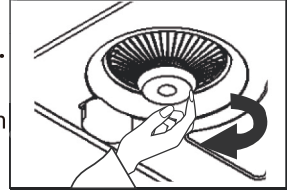


Fig.7-1

B. Clean the oil collectors and oil cups:

Empty the oil collectors and oil cups when they are 4/5 full of oil, to avoid overflow. (Please refer to the previous page regarding the installation and dismantling of the oil collectors and oil cups).

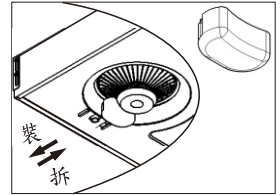


Fig.7-2

1. Small Oil Collector:

Detach the collector by turning it in anti-clockwise direction.

Place back the collector by turning it in clockwise direction.

2. Oil Cup:

Simply pull out the oil cup for removal.

Insert back firmly to its original position.

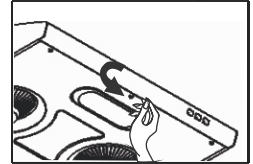


Fig.7-3

3. Bottom Plate Disassembly and Assembly:

Disassembly:

a. Remove the dripping oil cup and oil collector. (ref. Point 1 and 2) (fig7-1/7-2)

b. Screw on the screws which on the middle of bottom plate, push inner and draw down the nylon plate, then you can take apart the bottom plate. (fig. 7-3/7-4)

c. If you need to take apart the bottom plate completely, hold its right side and pull to left side with the puller, then remove to right side. (fig 7-5/7-6)

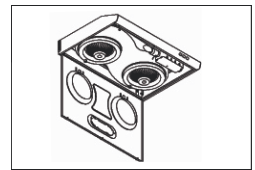


Fig.7-4

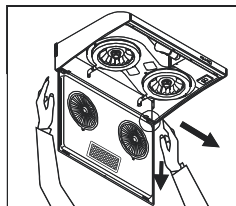


Fig.7-6

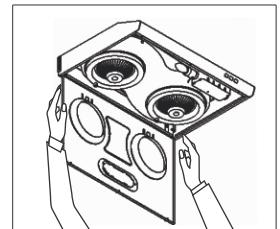


Fig.7-5

Daily Maintenance

4. OIL BASE

- a. Remove the oil base by turning it clockwise direction. (fig.7-7)
- b. Return the oil base back to its position by turning it in anti-clockwise direction.

5. FAN

- a. Hold the fan blade. Unlock the nut in clockwise direction (fig.7-8) to remove the fan blade. (fig. 7-9)(Be careful while removing the fan to avoid damaging the fan blade.)
- b. Insert the fan back to the original position and then fix the nut. (Ensure the nut to be firmly fixed.)

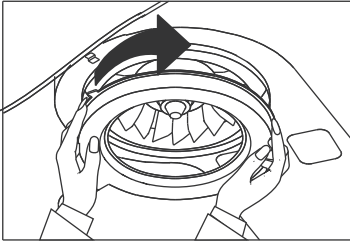


Fig.7-7

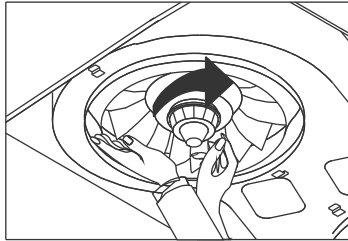


Fig.7-8

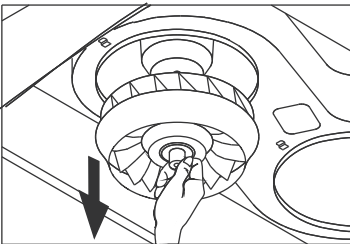


Fig.7-9


Troubleshooting

1. Be reminded to immediately cut off power supply when troubles occur, and contact qualified technician.
2. Disconnect the power before repairing.

Status	Cause and Method of Repairing
Power supply cord is damaged	• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. • Power supply cord specification: VDE H05VV-F 0.75mm² × 3C (Green/yellow earthing wire) • Plug specification: 250V/13A 3-rectangular-pin fused plug.
The lamp works but the motor does not run	A. The capacitor should be replaced if it burnt. B. If press 『O』 on [II O I] button, the motor stop rotating after a short time and there is a burning odor. The motor may have been burn it. Replace with a new motor.
Appliance vibration	A. Check if the motors are firmly screwed. B. If the motor has been tightened, it will be caused by the damaged fan blade. The unstable rotation will cause vibration; replace with a new one.
Inadequate suction	A. The distance between range hood and cooking surface is far. B. Too many doors or windows around the hood causing convection. C. If the hood is installed in front of window, it is desirable to install a piece of plywood below back side of the hood so as to cover the window. D. Please refer to the Installation Procedures and Safety Guides for installation.
Appliance installed not horizontally	A. If appliance is inclined to lateral side, adjust hangers of both sides for leveling. B. If appliance is inclined forward, screw further to the wall (The screw is 0.5~1 cm outside the wall), or check if screws are firmly fitted to hangers.
Inobvious fan speed change	Replace with a new motor.
Extraordinary fan noise	Replace with a new motor.

Wiring Diagram

WIRING DIAGRAM OF TWO MOTORS RANGE HOOD

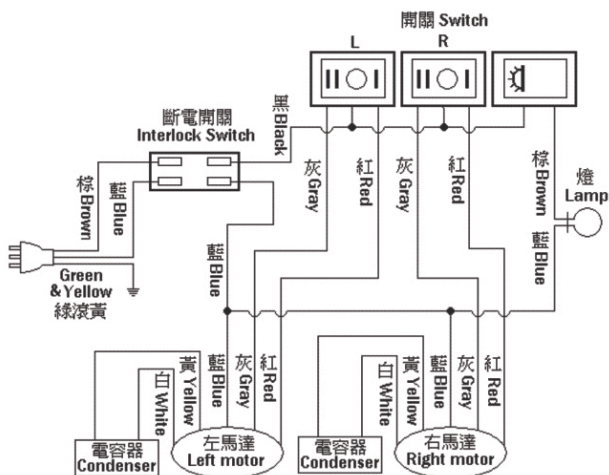

註 (REMARKS) : 交流電壓220V/240V使用 2.5 μ F 400VAC電容器
CONDENSER 2.5 μ F400VAC FIT AC 220/240V

Specifications

Model	SRHT712XDA(SL)
Sales Code	SRHT712XDA(SL)
Net Weight (kg)	11
Dimensions (mm) Width (W) x Depth (D) x Height (H)	710 X 510 X 100
Rated Voltage and Frequency	AC 220V / 50Hz
Number of Motor(Pcs)	2
Diameter of Outlet (mm)	Ø152
Rated Lamp Power (W)	11W Lamp
Motor Speed (RPM)	1400 / 1300
Air Flow Rate (m ³ /min)	11.5 / 10.2
Rated Power Input (W)	171
Load of Motor (W)	160

