

*Mia Cucina*

# 抽油煙機Range Hood

使用說明書User Instructions

型號 Model : TRHT711DXB 、 TRHT901DXB



*Mia Cucina*

• • • •

*Mia Cucina*

• • • •

## 目 錄

<b>1</b>	注意事項	P2
<b>2</b>	部件名稱	P3
<b>3</b>	安裝附屬零件表	P3
<b>4</b>	安裝前須知	P4
<b>5</b>	安裝施工說明	P5~P6
<b>6</b>	使用方法	P7
<b>7</b>	日常保養	P8
<b>8</b>	異常狀況之處理	P9
<b>9</b>	配線圖	P10
<b>10</b>	規格表	P10

安裝指示中的圖片僅供參考用



感謝您選用Mia Cucina產品,如有任何有關使用及維修的查詢,請致電24小時  
客戶服務熱線2880 6988 .

## 1 注意事項

---

- 1.當拆洗濾油網時,請勿開機使用。
- 2.注意:當同時使用煮食爐時,本抽油煙機可接觸部件可能會發熱。
- 3.除非有人在旁監督或提供指導,切勿讓兒童或行動不便人士使用本機。
- 4.請將本機遠離兒童,不要讓兒童使用本機。
- 5.更換照明燈、清潔、維修或拆洗除油煙機前,須先切斷電源。
- 6.必須由合資格人員安裝及維修本機。
- 7.切勿在鍋中燃火(當烹調燒酒雞之類的食物,嚴禁鍋中燃火,以免燒壞機體)。
- 8.切勿用水直接沖洗抽油煙機,以免引致漏電或損壞馬達。
- 9.切勿使用強酸或強鹼之清潔劑清洗濾油網及機體。
- 10.當抽油煙機與燃氣或其他燃料爐具同時使用時,房間必須通風良好。
- 11.請依照說明書指示清潔抽油煙機,以避免發生火警。
- 12.避免讓抽油煙機下方有爐火空燒,以免高溫損壞機件。
- 13.抽油煙機的排氣不可排放到燃氣或其他燃料爐具的排氣管道。
- 14.若電源線損壞,須由合資格人員進行更換,以保安全。
- 15.切勿弄濕抽油煙機內部電氣部件。
- 16.抽油煙機的供電位必須連接地線。
- 17.必需遵守排放空氣的規定。
- 18.濾油網應定期清潔,請依使用頻率,約一至二週清洗一次。
- 19.使用時,請避免頭部碰撞於機體前板和其四角以防受傷。

## 2 部件名稱

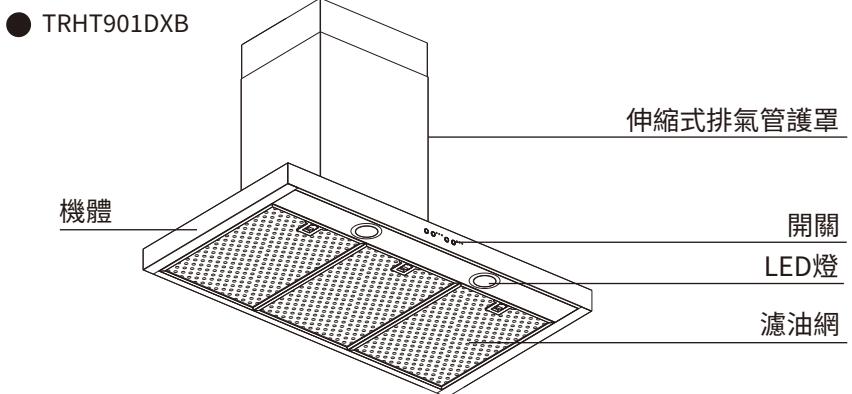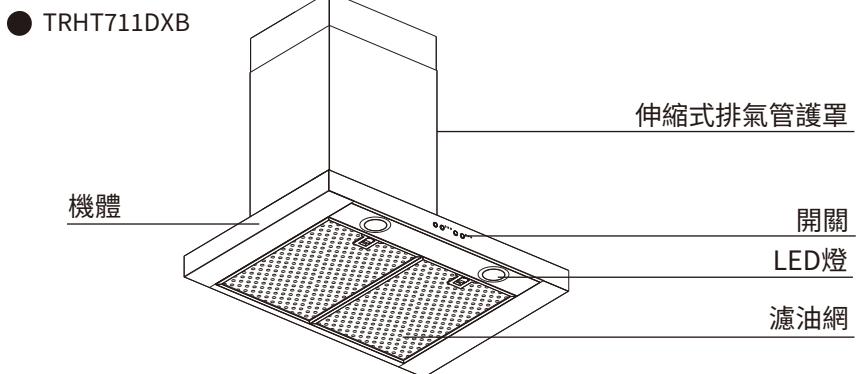


## 3 安裝附屬零件表

項次	名稱	簡圖	數量	項次	名稱	簡圖	數量
1.	膨脹螺絲		2支	6.	上護罩固定螺絲		2個
2.	螺釘		4支	7.	護罩掛架		1個
3.	牆栓		4支	8.	風管座		1個
4.	安裝模板		1張	9.	吊鐵(B)		2個
5.	阻煙條		1條	10.	濾油網		TRHT711DXB:2片 TRHT901DXB:3片

## 4 安裝前須知

1. 抽油煙機安裝位置附近，應避免門窗過多而產生太大的空氣對流，否則無法發揮其排煙之效果。(圖4-1)
2. 抽油煙機安裝於煮食爐之正上方。(圖4-2)
3. 安裝後之機體不能歪斜，應保持水平。(圖4-3)
4. 排風出口至機體之距離，應盡量避免過長，以免氣流擠壓於管內，影響其排風效果。
5. 抽油煙機之安裝高度為爐架至機體最低之距離，最少為65厘米；倘上述距離有別於爐具生產商的建議，則以較遠者為主。(圖4-4)
6. 接駁電源必須符合標籤上所示的額定電壓，由認可技術的人員處理。
7. 應符合條列中有關於廢氣排放的事宜。

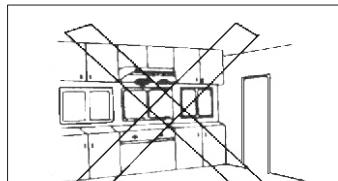

門窗太多，對流太大。

圖4-1

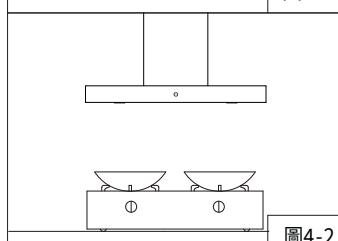


圖4-2

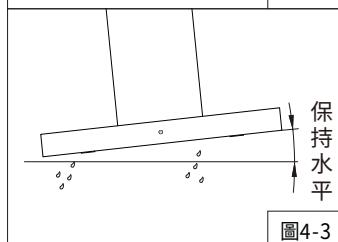


圖4-3

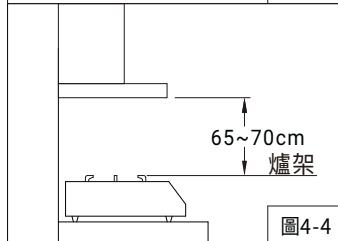


圖4-4

## 5 安裝施工說明

- 1.打開紙箱檢查說明書、風管座等附屬配件是否齊全。
- 2.安裝前先測試操作及各項功能是否正常(如馬達運轉、照明燈)，嚴禁將手伸入抽油煙機內部以避免發生危險。
- 3.請將附件箱內黑色阻煙條取出，對齊機體後面下方邊緣黏貼。
- 4.確定牆壁或櫥櫃背板的強度必須足以承托抽油煙機的重量。
- 5.測量從爐架到抽油煙機底部的尺寸，最小65厘米，在抽油煙機底部標示出基準線A。
- 6.標示出抽油煙機的中心線。
- 7.安裝位置線標示。

### (1)壁掛標準安裝模式 - 280毫米

- a)標示出安裝高度線B  
(距線A為26.5厘米)。(圖5-2)
- b)請裁下『機體掛鉤模板(B)280毫米』並貼於B線，與機體中心線對齊，以鑽頭鑽孔(左右各鑽一孔)。(圖5-3)

※ 依安裝穩固性需求可適時追加鑽孔。


- c)按照標示，將膨脹螺絲固定於孔內。
- d)調整機體兩側之吊鐵(A)，將機體掛於膨脹螺絲上，並鎖緊螺絲。(圖5-4)

### (2)壁掛選用安裝模式 - 260毫米

- a)標示出安裝高度線B  
(距線A為26.5厘米)。(圖5-3)
- b)請裁下『機體掛鉤模板(A) 260毫米』並貼於B線，與機體中心線對齊，以鑽頭鑽孔(左右各鑽一孔)。(圖5-3)

※ 依安裝穩固性需求可適時追加鑽孔。

- c)按照標示，將膨脹螺絲固定於孔內。
- d)將機體之吊鐵(A)拆下旋轉缺口朝上，再鎖附調整至機體兩側，將機體掛於膨脹螺絲上，並鎖緊螺絲。(圖5-4-1)

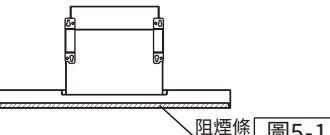

阻煙條 圖5-1

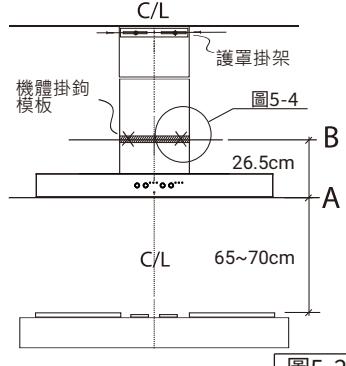


圖5-2



圖5-3

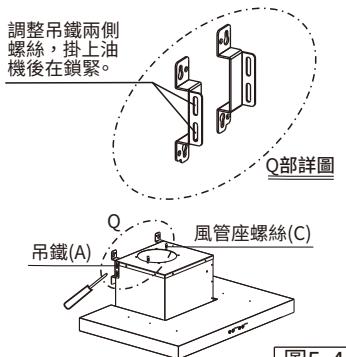


圖5-4

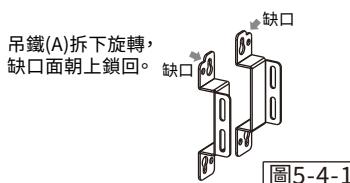


圖5-4-1






### (3) 櫥櫃安裝模式

- 標示出安裝高度線B  
(距線A為25厘米)。(圖5-5)
- 請裁下『機體掛鉤模板(A) 260毫米』並貼於B線,與機體中心線對齊,以鑽頭鑽孔(左右各鑽一孔)。(如前圖5-3)
- 依安裝穩固性需求可適時追加鑽孔。
- 按照標示,將膨脹螺絲固定於孔內。
- 將機體之吊鐵(A)拆下,從附件包取出吊鐵(B)並將其鎖附調整至機體兩側,將機體掛於膨脹螺絲上,並鎖緊螺絲。(圖5-6)

7.懸掛後,機體一定要保持水平。

(安裝原則第3點已敘述)

- 將2支風管座固定螺絲(C)鬆開取下  
(如前圖5-4)(圖5-6),附件箱內風管座取出並安裝於出風口上,以螺絲將風管座固定。
- 將鋁風管套套入風管座,拉伸鋁風管至所需長度後將風管另一端固定於排風出口。
- 將護罩掛架模板貼於牆壁上,該模板水平中心線距離天花板3厘米,豎直方向與機體中心線對齊;然後以鑽頭鑽孔。(左右各鑽一孔)(圖5-7)
- 把牆栓打進兩個孔中,用螺絲將護罩掛架固定到牆壁上。(圖5-8)
- 將機體及上下排氣管護罩表面保護膜撕掉。
- 如圖示用上護罩固定螺絲將上排氣管護罩固定到掛架上。(圖5-9)
- 濾油網安裝:
  - 從附件紙盒內取出濾油網。
  - 用雙手承托濾油網,傾斜對準機體下後方槽孔插入,拉開鎖扣推入機體,然後扣上。即可裝上濾油網。(圖5-10)
  - 將所有濾油網分別安裝妥當,濾油網安裝完成。(圖5-11)

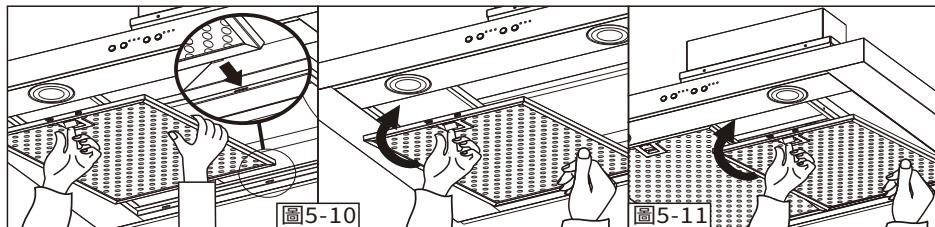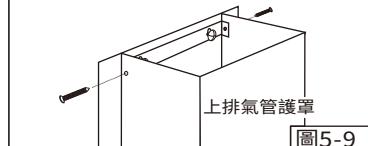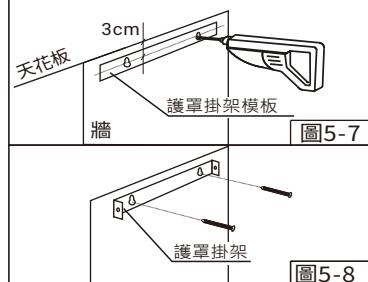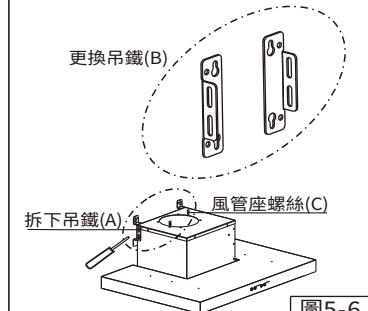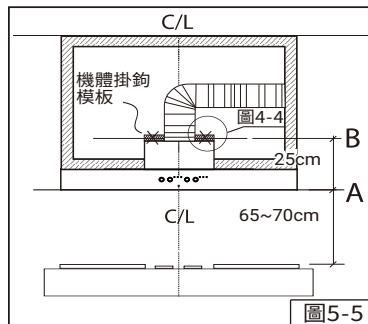

## 6 使用方法



### ● 「 」鍵:開關控制鍵

此功能是控制抽油煙機的開與關

- (1)在關機狀態下,按一下為開啟電源,再按一下為關閉電源。
- (2)開啟電源時,抽油煙機啟動,啟動風速是最後關閉前的設定風速。
- (3)關閉電源時,延遲關機功能會一併停止。

### ● 「 」鍵:延遲關機控制鍵

- (1)於開機運轉之狀態下,按一下則立即進入自動延遲關機功能,同時5分鐘指示燈亮起,抽油煙機轉速不變,此時再按一下則時間跳為10分鐘,再續按一下則跳為30分鐘,再按一下則取消延遲關機功能,即連續按壓此鍵則在"5分→10分→30分→取消"之間循環切換。
- (2)每次狀態改變時蜂鳴器均"嗶"一聲。
- (3)當延遲關機倒數時間完成,抽油煙機及照明燈會自動關閉。
  - 若取消自動關燈功能,按照明燈控制鍵「  」3秒,直至發出"嗶"2聲。
  - 回復自動關燈功能,按照明燈控制鍵「  」3秒,直至發出"嗶"1聲。

### ● 「 」鍵:照明燈控制鍵

- (1)每按一下,即可在開燈與關燈間切換。
- (2)每次狀態改變時蜂鳴器均"嗶"一聲

### ● 「 」鍵:風速控制鍵

- (1)1為低速、2為中速、3為高速。
- (2)每按一下,則抽油煙機轉速增加一檔,分別為低速→中速→高速,若已經到達最高檔位,則再從最低檔開始,依此循環。
- (3)每次風速控制切換時,蜂鳴器均"嗶"一聲。

日常保養重於維修：

為發揮本機最佳性能，延長其使用壽命，應經常注意保養。

1. 常保持機體外部潔淨：

使用後請用乾布或沾有中性清潔劑之抹布，擦拭機體外殼、排氣管護罩表面，經常清潔以保持其美觀和衛生。

2. 拆除濾油網清潔：

※注意：(a)保養維修時應將電源插頭拔掉！  
(b)為避免濾油網意外地掉下和衣服沾染油漬，必須以雙手拆除濾油網。

(1) 濾油網之裝拆：

用雙手承托濾油網及拉開鎖扣，往下推動鎖扣，使濾油網鬆開(圖7-1)；將濾油網傾斜，向下取出(圖7-2)。

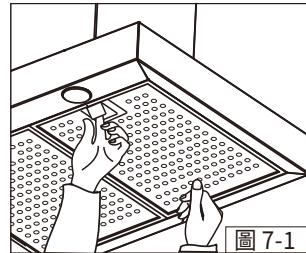


圖 7-1

(2) 濾油網應定期清潔，請依使用頻率，約一至二週清洗一次。

(3) 清洗時可使用性質溫和的清潔劑。

除手洗外，也可用洗碗碟機，但應選用低溫、短促的清洗程序。

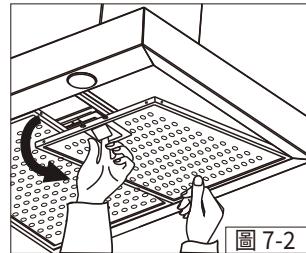


圖 7-2

3. 更換LED燈泡：

(1) LED更換，請聯繫客戶服務。

(2) 更換燈泡前，必須將電源切斷和確定燈泡已經冷卻。

(3) 拔除LED燈接線組後將LED燈組推出(圖7-3)。

(4) 更換新零件後，再接上LED燈接線組，並將LED燈組推回燈固定板固定。


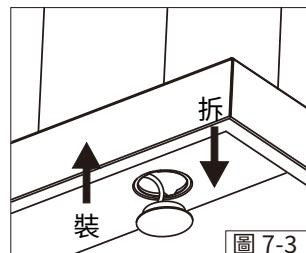


圖 7-3

## 8 異常狀況之處理

1. 使用中發現異常狀況時,請將開關電源切掉,並請合格技術人員進行維修。
2. 處理異常狀況時請將開關電源切掉。

狀 況	原 因 及 處 理 方 法
電源線 損 壞	<p>▲ 電源線規格:VDE H05VV-F 0.75mm<sup>2</sup> X 3C綠黃接地線 附R型端子。</p> <p>▲ 插頭規格:250V/13A三腳扁插頭。</p>
燈亮馬 達不轉	<p>A.若電控基板上的零件已燒毀,則需更換新電控基板。</p> <p>B.馬達不運轉或運轉遲緩、異音、有燒焦味,可能馬達損壞,必需更換新馬達風機組。</p>
機 體 震 動	<p>A.查看馬達風機組是否鎖緊。</p> <p>B.如馬達風機組已鎖緊,則是風葉受損;不平穩轉動會產生機體震動,應更換風機組。</p>
吸 力 不 強	<p>A.抽油煙機與爐面的距離太高。</p> <p>B.抽油煙機周圍環境門窗通風多,對流太大。</p> <p>C.抽油煙機裝置於窗戶處所導致,最好在抽油煙機後部下方放一塊板子,與抽油煙機後部對齊,遮住窗戶。</p> <p>D.參考安裝原則及安裝注意事項進行安裝。</p>
機體裝 設歪斜	<p>A.如左右歪斜則由吊鐵調整左右高度</p> <p>B.如向前傾斜,則由膨脹螺絲再行鎖入牆壁,或查看吊鐵固定於機體的螺絲是否鬆脫。</p>

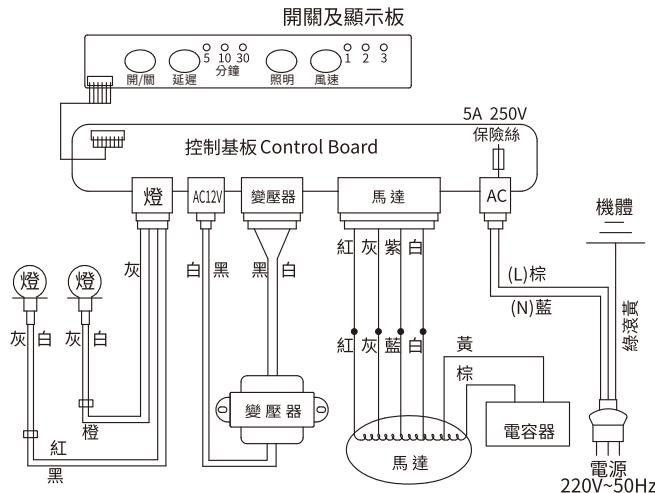

## 10 規格表

型號	TRHT711DXB	TRHT901DXB
淨重量(公斤)	12.5	13.5
機體尺寸(毫米) (闊X高X深)	710 X 512 X 55	900 X 512 X 55
機體連伸縮罩高度(毫米)	655 - 1177	
額定電壓及頻率	交流電220-240伏特 / 50赫	
出風口直徑(毫米)	150	
照明(瓦)	2 x 1W LED燈	
馬達轉速(轉數/分鐘)	2250   1700   950	
排風量(立方米/分鐘)	13   9.5   5.3	
額定總功率(瓦)	300	

## Table of contents

<b>1</b>	Notice Before Use .....	P12
<b>2</b>	Part Description .....	P13
<b>3</b>	Installation Accessories .....	P13
<b>4</b>	Installation Guidelines .....	P14
<b>5</b>	Installation Procedures .....	P15~P16
<b>6</b>	Operation Instructions .....	P17
<b>7</b>	Daily Maintenance .....	P18
<b>8</b>	Trouble Shooting .....	P19
<b>9</b>	Wiring Diagram .....	P20
<b>10</b>	Specifications .....	P20

Figures in installation instructions are for reference only

Thank you for choosing Mia Cucina products. Should you have any enquires about operation and maintenance, please call 24-hour Customer Service Hotline 2880 6988.


## **1 Notice Before Use**

---


- 1.Do not turn on the range hood when the filter is removed or cleaning.
- 2.Caution: When cooking appliance is in use, accessible parts of the range hood may become hot.
- 3.The appliances is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 4.Children should be supervised to ensure that they do not play with the appliance.
- 5.Disconnect the power supply before replacing the lamp, cleaning, repairing or dismantling the range hood.
- 6.Installation and maintenance of appliance must be undertaken by qualified persons.
- 7.Take particular care to prevent oil and grease inside cooking pots from catching fire, which may damage the range hood.
- 8.Do not splash water onto the range hood. It may cause electric leakage or motor damaging.
- 9.Do not use strong acid or strong alkaline detergent to clean the filter and casing.
- 10.There shall be adequate ventilation of the room when the range hood is used simultaneously with appliances burning gas or other fuels.
- 11.There may be a fire risk if cleaning is not carried out in accordance with the instructions.
- 12.Avoid naked flame under range hood to prevent damage of machine by high temperature.
- 13.The exhaust air must not be discharged into venting pipe for exhausting fumes from appliances burning gas or other fuels.
- 14.The exhaust air must not be discharged into venting pipe for exhausting fumes from appliances burning gas or other fuels.
- 15.Do not wet the internal electrical components of the range hood.
- 16.Power point of range hood must be earthed.
- 17.Regulations concerning the discharge of air have to be fulfilled.
- 18.The grease filter must be cleaned regularly, please wash it once every one to two weeks according to the frequency of use.
- 19.Please be aware of head collision on front panel or its corners during usage to avoid injury.

## 2 Part Description

### ● TRHT711DXB

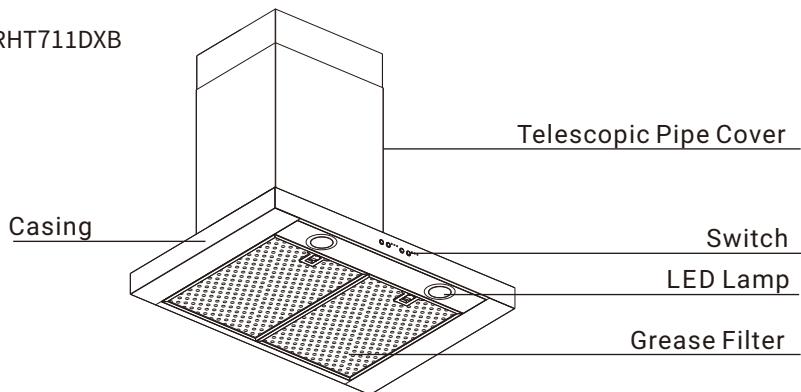

### ● TRHT901DXB

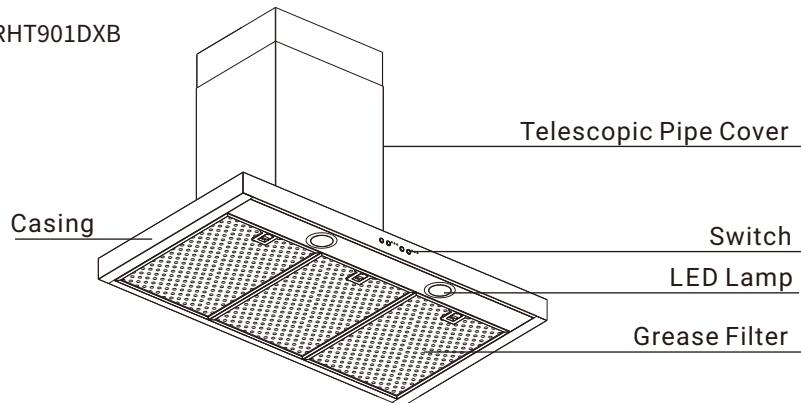


## 3 Installation Accessories

Item	Title	Sketch	Quantity	Item	Title	Sketch	Quantity
1.	Sleeve anchor		2	6.	screw for fixing upper pipe cover		2
2.	Wood screw		4	7.	Pipe Cover Support Bracket		1
3.	Wall plug		4	8.	Pipe Adapter		1
4.	Drilling template		1	9.	Hangers(B)		2
5.	Black gasket		1	10.	Grease filter		TRHT711DXB:2H TRHT901DXB:3H

## 4 Installation Guidelines

- 1.Too many windows and doors surrounding the appliance will cause air convection, worsening the performance of air-exhaust. (Fig.4-1)
- 2.The appliance shall be installed on frontal upper side of cooking area.(Fig.4-2)
- 3.The casing must be horizontal after installation. (Fig.4-3)
- 4.Minimize the distance between the exhaust outlet of the appliance and the air venting hole for effective air exhaustion.
- 5.The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood.  
When the range hood is located above a gas appliance, this distance shall be at least 65cm. If the instructions for installation for the gas hob specify a greater distance, this must be adhered to. (Fig.4-4)
- 6.When making the electrical connections, check that the voltage values correspond to those indicated on the appliances.
- 7.Regulations concerning the discharge of exhaust air have to be fulfilled.

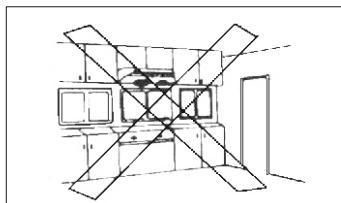

Too many windows and doors will cause air convection

Fig.4-1



 


Fig.4-2

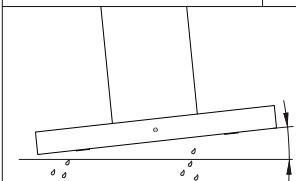

keep machine in horizontal position

Fig.4-3

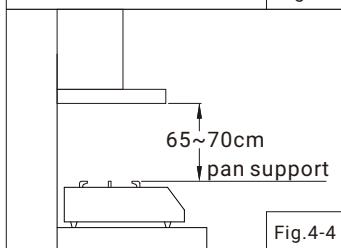

65~70cm

pan support

Fig.4-4

## 5 Installation Procedures

1. Before installation, check if all the supplementary parts are ready.
2. Check if all the range hood is functioning well. Do not attempt to reach the inside of the hood to prevent any injury or damage to the fan.
3. Please take out the black gasket from carton and adhere it on the bottom of machine at back side. (Fig.5-1)
4. Make sure that the wall must be strong enough to take the weight of the hood.
5. Measure the distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood(min. 65 cm). Then, mark the Line A.
6. Mark a centre line of hood on the wall.
7. Mark the line for installation:

- (1) Under wall-mounted installation (280mm).

(a) Mark a line "B" (26.5cm from line "A").(Fig.5-2)

(b) Please cut off the paper of drilling template⑧ and adhere it on line "B".

And the centre line of drilling template⑧ must correspond to the centre line of hood on the wall. Then, drill holes on each side.(Fig.5-3)

\*Drilling extra holes are applicable for installation stability.

(c) Insert sleeve anchors in drilling hole each.

(d) Adjust hangers (A) on each side of hood, then hang machine on the sleeve anchors and screw on screws tightly. (Fig 5-4)

- (2) Under wall-mounted installation (260mm).

(a) Mark a line "B" (26.5cm from line "A").(Fig.5-2)

(b) Please cut off the paper of drilling template⑨ and adhere it on line "B".

And the centre line of drilling template⑨ must correspond to the centre line of hood on the wall. Then, drill holes on each side.(Fig.5-3)

\*Drilling extra holes are applicable for installation stability.

(c) Insert sleeve anchors in drilling hole each.

(d) Loosen hangers (A) from body machine and switch hangers upside down with concave upward. Then screw the hangers back to machines at each side. Afterward, hang machine on the sleeve anchors and screw on screws tightly. (Fig 5-4-1)

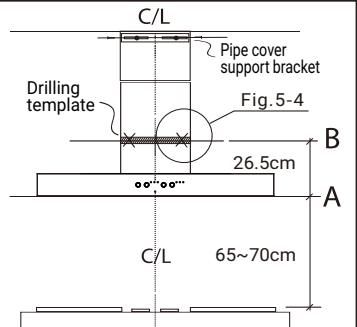
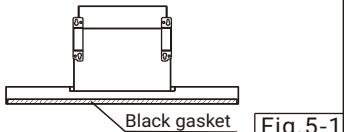


Fig. 5-2

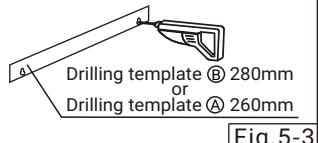


Fig. 5-3

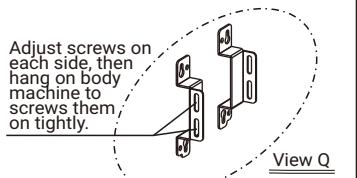


Fig. 5-4

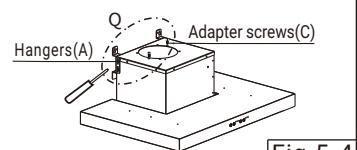


Fig. 5-4

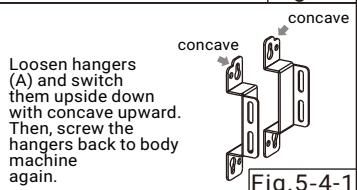


Fig. 5-4-1

(3) Under cabinet installation with wooden panel at back.

- (a) Mark a line "B" (25cm from line "A").(Fig.5-5)
- (b) Please cut off the paper of drilling templateⒶ and adhere it on line "B". And the centre line of drilling templateⒶ must correspond to the centre line of hood on the wall. Then, drill holes on each side.(Fig.5-3)

\*Drilling extra holes are applicable for installation stability.

- (c) Insert sleeve anchors in drilling hole each.

- (d) Loosen hangers (A) from body machine. Take out the hangers (B) from installation accessories and adjust the hangers (B) and screw them tightly on each side of body machine. Afterward, hang machine on the sleeve anchors and screw on screws tightly. (Fig 5-6)

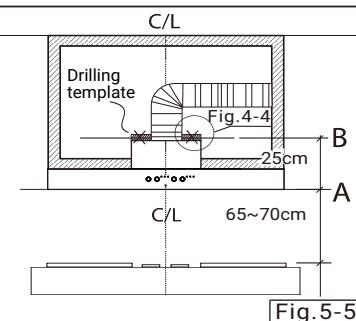


Fig.5-5

7. Make sure that the range hood remains in horizontal position(refer to installation guidelines).

8. Loosen 2 adapter screws (C) from ventilation duct. (refer to Fig 5-4) (Fig 5-6) And take out pipe adapter from installation accessories and install it on the air outlet and then fix them by these 2 adapter screws (C) .

9. Install one end of aluminum pipe into the pipe adapter. Extend the aluminum pipe to the required length. Install the other end of the pipe to the air venting hole.

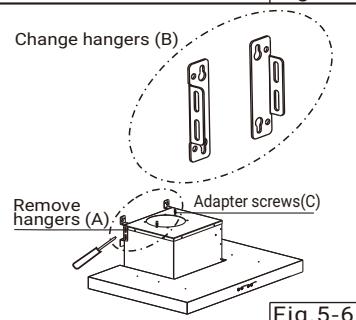


Fig.5-6

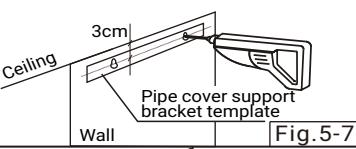


Fig.5-7

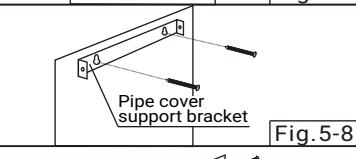


Fig.5-8


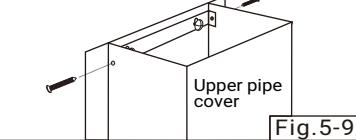


Fig.5-9

14. Filter installation

- (a) Take out filters from carton
- (b) Hold the grease filter by one hand and pull the latch downward by the other. Tilt grease filter upward and insert tenon into groove. Then, push latch back to horizontally. (Fig. 5-10)
- (c) Install all of filters separately and complete filter installation.(Fig. 5-11)

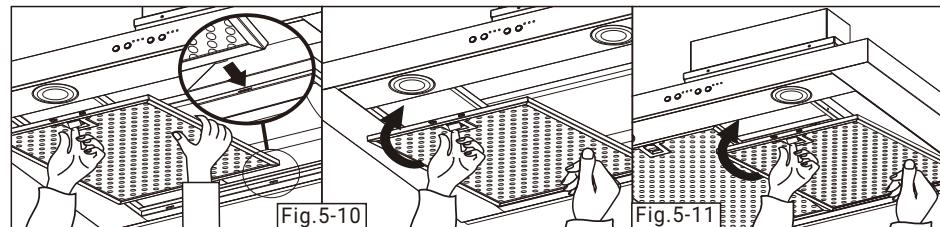

## 6 Operation Instructions



### ● 「」Button: Control on and off of the range hood

- (1) Press the button to turn on, and the range hood will start to operate. Then, press button again to turn off machine.
- (2) When hood is turned on, the fan speed will be automatically set up at the speed on previous usage.
- (3) While press the button to turn off the hood, the delay-off function will also shut down immediately.

### ● 「」Button: Delay-off button

- (1) When the hood is turned on, press the button to run the delay-off function, the “5”-minutes indicator will on and the range hood speed will keep no change. Press the button again to jump to “10”-minutes and “30”-minutes delay-off function. Press once more to cancel. Hence, set time for the motion of the range hood (5min→10min→30min→timer off in an overriding order).
- (2) The built-in alarm will one beep whenever the operation status change.
- (3) When Delay-off count down finishes, the range hood and the light will switch off automatically.

#### ● Cancel auto-switch off light function:

Press the button of light for 3 seconds until two beeps.

#### ● With auto-switch off light function:

Press the button of light for 3 seconds until one beep.

### ● 「」Button: ON/OFF button of the light

- (1) Press the button to turn on the light.
- (2) The built-in alarm will one beep whenever the operation status change.

### ● 「」Button: Control the fan speed

- (1) Low speed--“1”. Medium speed--“2”. High speed “3”.
- (2) Control the speed of range hood (low→medium→high in an overriding order)
- (3) The built-in alarm will beep each time whenever the operation status change

## 7 Daily Maintenance

Daily maintenance is more important than servicing.

※Good maintenance gives the best performance and prolongs the life span of the appliance.

### 1. Always keep the appliance clean.

After use, please wipe the casing, and the surface of duct cover with dry cloth or soaked in mild detergent to keep the hood clean.

### 2. Detachable grease filter for cleaning.

※Warning:(a) Disconnect the main supply or unplug before cleaning.

(b) In order to avoid sudden drop of grease filters and grease contamination of clothes, use two hands to detach the filters.

- (1) Support the grease filter and pull the latch to remove filter (Fig.7-1). Tilt the filter downwards to detach it. (Fig.7-2)
- (2) The grease filter must be cleaned regularly, please wash it once every one to two weeks according to the frequency of use.
- (3) Use non-aggressive detergents to wash filter, either by hand or in the dishwasher which must be set in a low temperature and short cycle.
- (4) Make dry the filter before put back to range hood.

### 3. Replacing light bulbs.

- (1) If light bulb is necessary to change, please contact customer service.
- (2) Make sure power supply is turned off and bulbs are not hot.
- (3) Remove the LED lamp by disconnecting the connector.
- (4) Re-install the new LED lamp. (Fig.7-3)

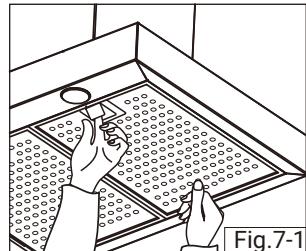


Fig.7-1

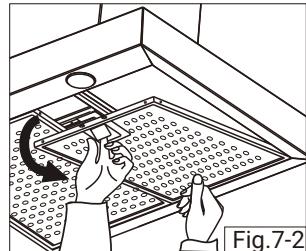


Fig.7-2


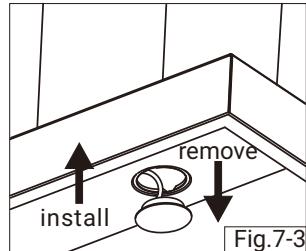


Fig.7-3

## 8 Trouble Shooting

1. Be remained to immediately cut off power supply when troubles occur, and contact qualified technician.
2. Disconnect the power before repairing.

Status	Cause and Method of Repairing
Power supply cord is damaged.	<ul style="list-style-type: none"><li>▲ Power supply cord specification: VDE H05VV-F 0.75mm<sup>2</sup> x3C(Green/yellow earthing wire).</li><li>▲ Plug specification:250V/13A 3-rectangular-pin fused plug.</li></ul>
The lamp works but the motor does not run.	<ul style="list-style-type: none"><li>A. The PCB should be replaced if it burnt.</li><li>B. The motor stops rotating after a shot time and there is a burning odor. The motor may have been burnt. Replaced with a new motor.</li></ul>
Appliance vibration.	<ul style="list-style-type: none"><li>A. Check if the motor is firmly screwed.</li><li>B. If the motor has been tightened, it will be caused by the damaged fan bland. The unstable rotation will cause vibration; replace with a new one.</li></ul>
Inadequate suction.	<ul style="list-style-type: none"><li>A. The distance between range hood and cooking surface is far.</li><li>B. Too many door or windows around the hood causing convection.</li><li>C. If the hood is installed in front of window, it is desirable to install a piece of plywood below back side of the hood so as to cover the window.</li><li>D. Please refer to the installation Guidelines and Notice Before Use.</li></ul>
Appliance installed not horizontally.	<ul style="list-style-type: none"><li>A. If appliance is inclined to lateral side, adjust hangers of both sides for leveling.</li><li>B. If appliance is inclined forward, screw further to the wall, or check if screws are firmly fitted to hangers.</li></ul>

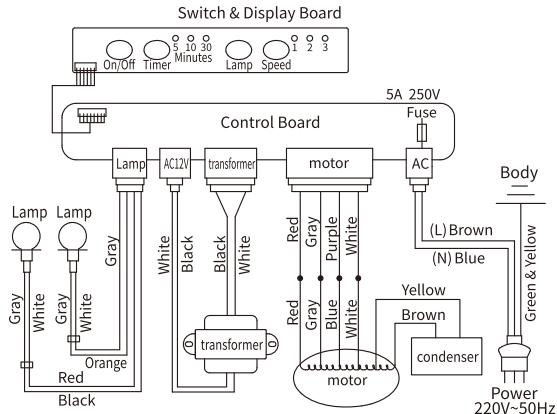

Model	TRHT711DXB	TRHT901DXB
Net weight (kg)	12.5	13.5
Dimensions (mm) (W x H x D)	710 X 512 X 55	900 X 512 X 55
Range hood with telescopic cover height (mm)	655 - 1177	
Rated Voltage and Frequency	AC 220-240V / 50Hz	
Diameter of outlet (mm)	150	
Rated Lamp power (W)	2 x 1W LED Lamp	
Motor speed (RPM)	2250   1700   950	
Air flow rate (m <sup>3</sup> /min)	13   9.5   5.3	
Rated power input (W)	300	



202511