


SIMPA


座枱煮食爐
HOTPLATE

型號 RVH1S
Model RVH2S

使用說明書
Operating Instructions

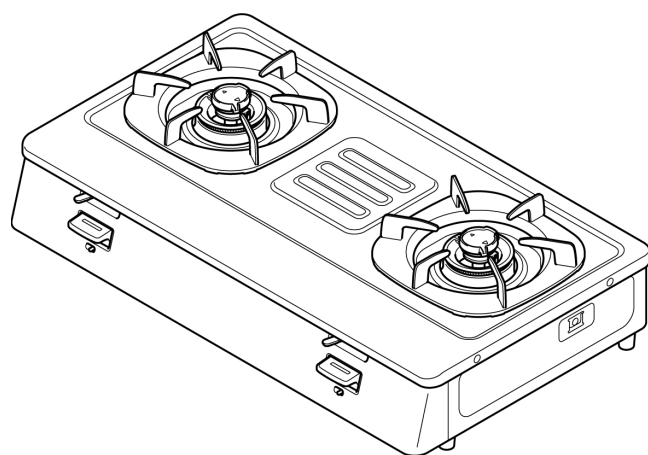

RVH2S

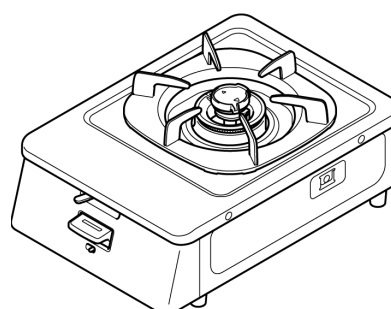

RVH1S

香港煤氣適用
For Hong Kong Town Gas

重要安全指示	第 1 頁
產品介紹	第 3 頁
安裝指示	第 4 頁
操作指示	第 5 頁
保養	第 6 頁
故障處理方法	第 7 頁
規格	第 8 頁

注意!

根據香港氣體安全條例，任何氣體裝置工程，包括爐具和接駁喉管的安裝，必須由註冊氣體裝置技工執行，而該技工已於相關的氣體工程類別註冊及受聘於註冊氣體工程承辦商。

重要安全指示

感謝閣下選用簡柏產品！以下指示對氣體煮食爐的安全操作十分重要，請詳細閱讀，如有查詢和服務要求，請聯絡煤氣公司 24 小時客戶服務熱線 2880 6988。

安裝

1. 使用認可印有機電工程署批准標記 (例如: 機電工程署批准 EMSD APPROVAL GTXXXX) 的氣體接駁喉管連接爐具或使用機電工程署接納的其他恰當方法。
2. 爐具周圍和下方不可放置可燃物品，如紙張、塑膠等，與可燃物料距離須保留 150 毫米以上。
3. 爐具必須安裝在空氣流通之房間內。

使用

1. 當懷疑洩漏氣體時，將窗戶打開，以及關閉煤氣錶閥。切勿操作任何電器或電掣開關。切勿在現場使用任何電話。在現場以外的地方，致電煤氣公司緊急事故熱線 2880 6999。
2. 請參照說明書內指引正確使用爐具。
3. 爐具只供家用，切勿用於商業用途。
4. 除煮食外，切勿使用爐具作其他用途，例如烘乾衣物。
5. 使用爐具前，請開啟窗戶及排氣系統。
6. 不可讓兒童使用爐具。
7. 切勿讓爐具在無人看管下運作。
8. 切勿在爐頭加上錫紙碟，這會引致燃燒問題。
9. 使用前，確保爐頭蓋、爐碟和爐架擺放正確，沒有傾斜。
10. 切勿放置超過 10 公斤的重量在爐架上。
11. 爐架很重，切勿掉下。
12. 請確保使用時火焰平均。
13. 注意爐面、爐頭及爐架的高溫。
14. 切勿使用直徑超過 300 毫米的平底煮食器皿，避免溫度過高而造成燙傷及影響爐具的使用壽命。
15. 使用細小器皿時，請將火力調低，避免火焰超出煮食器皿底部。
16. 請確保器皿穩定地放在爐架上，如器皿容易滑動，必須緊握它。
17. 燒開水或煮湯時，注入的水量連湯料不可超過器皿容量 3 分之 2，溢出液體會影響燃燒和損壞爐具。
18. 烹調時，請儘量蓋上鍋具。而鍋具的手柄亦應轉向適當位置，避免受熱或碰撞。
19. 請勿在爐具附近使用噴霧產品。
20. 使用後，應將所有開關按鈕設於關閉位置。
21. 經常清潔爐頭蓋以保持爐頭火孔暢通，如滾瀉食物及汁液，應在爐具冷卻後儘快作出妥善清潔。
22. 如爐具出現異常聲響，應先關火。在爐具冷卻後，檢查及放好爐頭蓋。若問題持續，聯絡煤氣公司進行檢查。

保養

1. 定期檢查氣體喉管狀況，確保沒有紐結或裂縫，若發現損壞，請聯絡煤氣公司更換喉管。
2. 讓爐具完全冷卻後，才可進行清潔。
3. 清潔爐具時，應穿上保護手套，避免接觸爐具內部，防止割傷。
4. 清洗爐頭蓋後，用乾布將爐頭蓋完全抹乾，爐頭火孔不可留有水份，以免影響燃燒。
5. 使用前和使用後，注意爐頭的狀況和清潔。以下不正常狀況會產生燃燒不良，進而引致爐具損壞。請確保採取相應措施，糾正有關問題。


不正常情況	處理措施
爐頭蓋變形	聯絡煤氣公司更換零件。
爐頭蓋傾斜	將爐頭蓋重新放好，不可傾斜。
爐頭火孔被水堵塞	用布將爐頭蓋抹乾後，重新放好。
爐頭火孔被污積堵塞	用溫和洗滌劑和刷子清潔爐頭蓋。用布將爐頭蓋抹乾後，重新放好。

產品介紹

這爐具是專為香港各式煮食需要而設計，配備優質不鏽鋼面板，機身纖巧，其品質、安全性和效能都表現卓越，而且可靠耐用，操作簡單，清理容易。

產品備有熄火安全裝置和防高溫保護裝置，如爐火意外熄滅或因爐頭阻塞而引致不正常燃燒，會自動關閉氣體，確保安全。

部件名稱

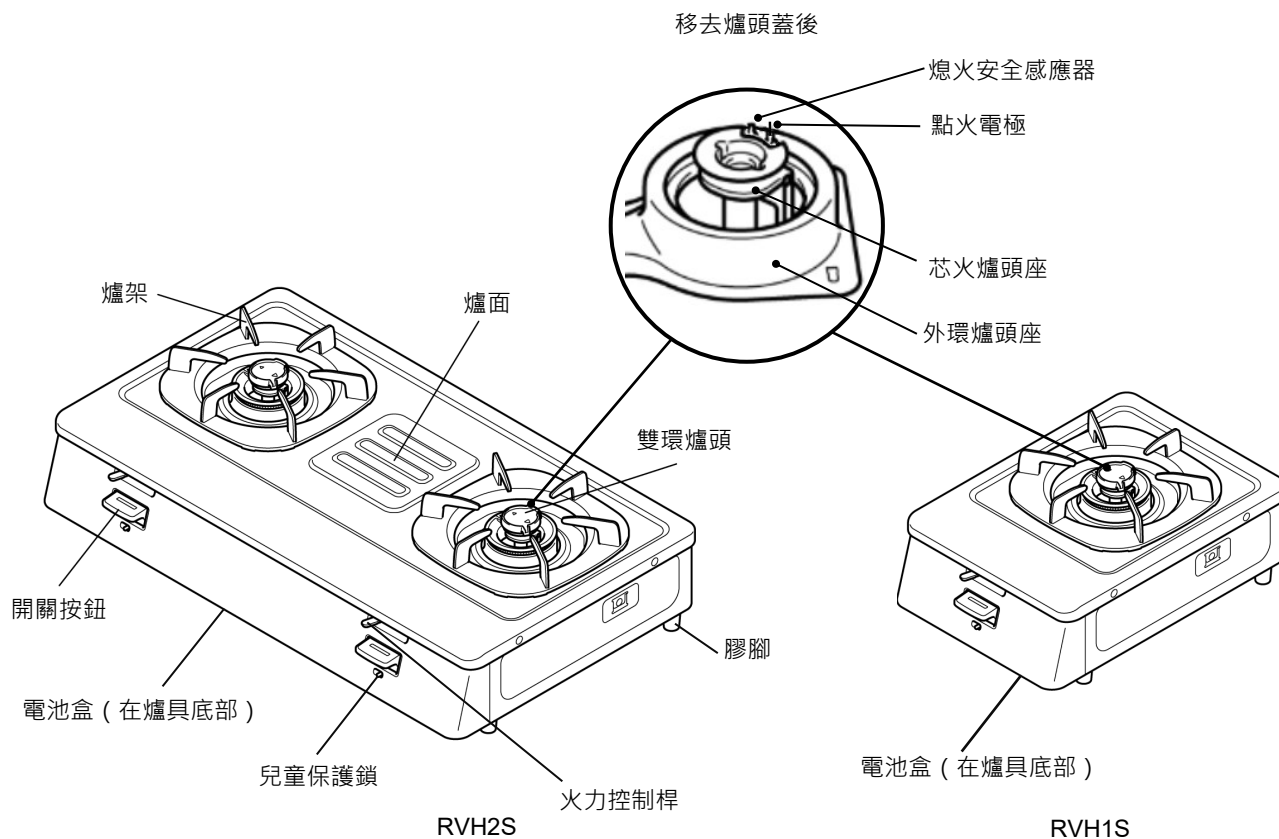


特點包括:

- * 強勁雙環爐頭、獨立主火，滿足各式煮食需要
- * 按鈕式火花點火，推桿火力控制，操作簡單靈活
- * 銅合金製爐頭蓋，表面加上耐高溫塗層，槽式火孔，堅固耐用，清理容易
- * 熄火安全裝置和防高溫保護裝置，確保安全


安裝指示

- * 爐具須放置在穩固之平面上。
- * 以批准的氣體軟喉接駁煮食爐。
- * 氣體接駁軟喉可置於爐底下，但必須平放貼灶台，避免翹起觸及爐頭底部。
- * 使用前確定正確擺放爐架、爐頭蓋和爐碟。

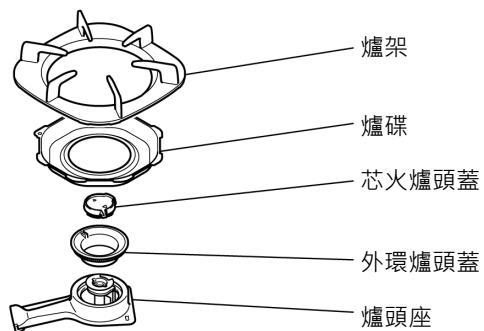


1. 爐架

爐架底定位針插入爐面通孔。

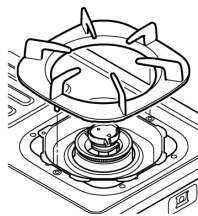


2. 爐頭蓋

不正確擺放會導致不良燃燒和爐頭蓋變形。

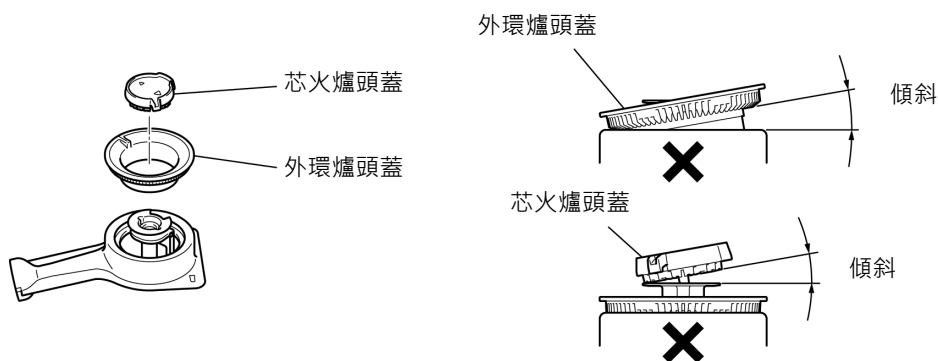

3. 爐碟

擺放爐碟時，不可傾斜。

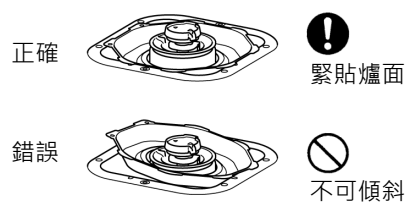

操作指示

1. 點火

完全按下按鈕，火花會點著爐火。

保持按著按鈕數秒，然後鬆開，爐火會維持。

若爐火不能維持，按一下按鈕返回熄火位置，然後重新點火。



2. 火力調節

火力強弱可用火力控制桿加以調節。

調節芯火，將火力控制桿在①和②之間移動。


調節外環火，將火力控制桿在②和③之間移動。

當火力控制桿經過②位置時，有個卡位。

當火力控制桿由①推向②，芯火由最小至最大，外環火是熄滅。

當火力控制桿由③推向②，芯火最大，外環火由最大至最小。

請慢慢推火力控制桿。

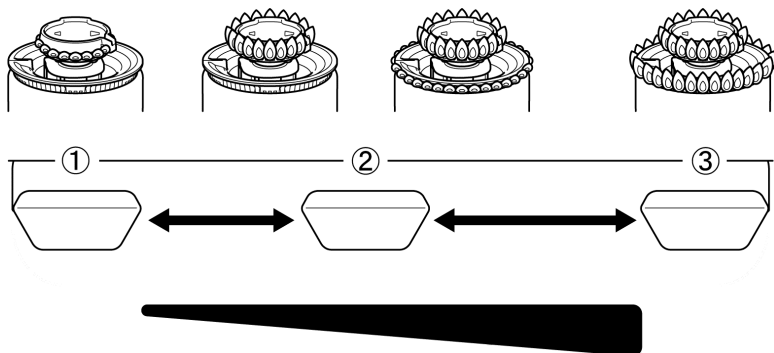

3. 熄火

按一下按鈕，火焰便熄滅。

按鈕會回到關的位置。



4. 爐火意外熄滅

如熄火意外熄滅，按一下按鈕，將它返回關閉位置。確保爐頭是清潔後才重新點火。

如爐頭火孔被堵塞，待爐頭冷卻後，進行清理，抹乾後，重新點火。

5. 兒童保護鎖

兒童保護鎖位於爐頭的開關按鈕下方。把兒童保護鎖控制桿推向右邊時，開關按鈕便不能按下。

若要按下按鈕打火，請把兒童保護鎖控制桿推回左邊。

6. 更換電池



如電火花打火轉慢

(每秒只有一兩下時)，

應更換電池。

電池盒在爐底。

注意電池的電極方向。

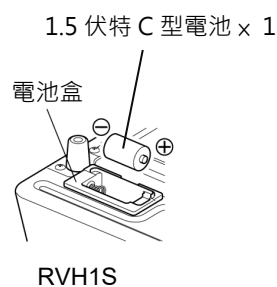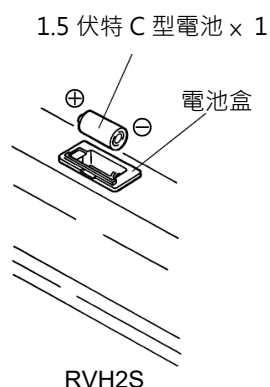

注意：待爐具完全冷卻後，才可進行任何保養及清潔。清潔時，亦應配戴手套保護雙手。

為妥善保養爐具，遵照以下指示定期清潔爐具：

- 請勿使用蒸氣清潔爐具；
- 使用適當非研磨及非腐蝕性的清潔劑清潔金屬及搪瓷部份，避免使用含氯清潔劑（如漂白劑）；
- 避免酸性或鹼性物質（如醋、鹽水、檸檬汁）殘留在爐具；
- 煮食時如有液體溢出，應待爐具冷卻後儘快清理；
- 定期使用暖水及清潔劑清洗爐頭蓋，將污漬去除，並保持爐頭火孔暢通；
- 清潔後須完全抹乾爐頭蓋，並確定爐頭火孔未被堵塞；
- 將爐頭蓋正確放回爐頭座，不可傾斜或反轉；
- 定期檢查熄火安全感應器和點火電極，如有污物黏附，用軟刷將污物去除。

故障處理方法

有些故障是可以由使用者處理，但如採取以下補救措施後仍然無效，請致電煤氣公司客戶服務熱線 2880 6988。

故障	原因	處理方法
1. 沒有點火	點火電極濕了。	以乾布抹乾點火電極。
	點火電極有污穢。	清理點火電極。
	電池已耗盡。	更換電池。
	電池電極擺放錯誤。	重新放好電池。
2. 沒有火焰	仍未開啟煤氣錶閥及 / 或爐具供氣閥。	完全開啟煤氣錶閥及 / 或爐具供氣閥。
	錫紙阻塞爐頭。	拿去錫紙。
3. 不能保持爐火	未按盡開關按鈕。	按盡開關按鈕，並保持按下數秒。
	熄火安全感應器有污穢	清理熄火安全感應器
4. 使用中熄火	用小火時被風吹熄。	等待 1 分鐘，重新點火。
	煮食溢出物阻塞爐頭，引致不正常燃燒，啟動了防高溫保護裝置。	待爐頭冷卻後，清潔和抹乾爐頭，然後重新點火。
5. 黃火	爐頭有污穢。	以暖水和清潔劑清洗爐頭蓋，將它抹乾和放好後，重新點火。
6. 火焰不穩定	爐頭蓋擺放不正確。	冷卻後，重新放好爐頭蓋，再點火。
7. 使用中出現異常聲音	爐頭蓋擺放不正確。	將爐具熄火，待爐具冷卻後，重新放好爐頭蓋，重新點火。
8. 關火時出現響聲	殘留在爐頭內氣體瞬間燃燒。	正常現象。

規格

型號			RVH1S	RVH2S
氣體種類			香港煤氣	香港煤氣
爐頭數目			1	2
額定熱負荷 (千瓦)	總		5.5	10.9
	左爐頭		-	5.5
	右爐頭		-	5.5
供氣壓力 (千帕)			1.5	1.5
氣體接頭			1/2 吋 英制陽螺紋	1/2 吋 英制陽螺紋
機身尺寸 (毫米)	高	至爐面	138	138
		至爐架	176	176
	寬		282	702
	深	爐身	412	412
		至氣體接頭	446	446
	重量 (千克)			3.9
點火裝置			電子點火器	電子點火器
熄火安全裝置			熱電偶式	熱電偶式
防高溫保護裝置			雙金屬溫度開關	雙金屬溫度開關
電力供應			1.5 伏特 C 型電池 (1 枚)	1.5 伏特 C 型電池 (1 枚)

Important Safety Instructions.....	P. 11
Product Description	P. 13
Installation Instructions	P. 14
Operating Instructions	P. 15
Maintenance.....	P. 16
Troubleshooting.....	P. 17
Specifications	P. 18

Attention!

According to the Gas Safety Ordinance of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors.

Important Safety Instructions

Thank you for choosing SIMPA products! The following instructions are very important to safety operation of gas hotplate. Please read through them carefully. Please contact Towngas 24-hour Customer Service Hotline on 2880 6988 for enquiry and services.

Installation

1. Use approved gas tubing bearing EMSD approval marking (such as: 機電工程署批准 EMSD APPROVAL GTXXXX) for connection to appliance or other appropriate methods accepted by EMSD.
2. Do not put any combustible materials, e.g. paper and plastic near or under appliance. The appliance should be installed with a distance more than 150mm distance away from combustible materials.
3. Install the appliance in a well-ventilated room.

Operation

1. In case of suspected gas leak, open windows and shut off gas meter valve. Do not operate any electric appliances or switches. Do not use any phones on site. Contact Towngas Emergency Hotline on 2880 6999 with a phone outside the premises.
2. Please use the appliance properly according to the operating instructions.
3. This appliance is designed for domestic use only. Do not use it for commercial purposes.
4. Do not use the appliance for any purposes other than cooking, e.g. drying clothes.
5. Open windows and turn on ventilation system before operating the appliance.
6. Do not allow kids to use appliance.
7. Do not leave operating appliance unattended.
8. Do not add aluminum discs to burners. This will incur combustion problem.
9. Before use, ensure the burner caps, drip pans and pan supports are in correct position and are not tilted.
10. Do not put weight exceeding 10kg on pan support.
11. Pan support is heavy. Do not drop it.
12. Make sure that flame condition is uniform during operation.
13. Heed high temperature of top plate, burner and pan support.
14. Do not use flat bottom pot of diameter larger than 300mm to avoid the risk of scald by high temperature and reduction of service life of appliance.
15. When using small utensil, reduce flame power that flame does not escape from utensil bottom.
16. Ensure stability of utensil resting on pan support. Hold utensil firmly if it slips easily.
17. Do not fill water including soup ingredients over two-thirds of utensil volume when boiling water or soup. Spilled liquid of boiling will affect combustion and damage the appliance.
18. Always use pots with covers and make sure that the handles of the pots are correctly positioned to avoid heating and collision of handles.
19. Do not use sprays near the appliance.
20. ON / OFF buttons should be pressed to off position after use.
21. Clean burner caps regularly to ensure smooth passage of burner flame holes. In case of spillage of food or liquid, clean appliance properly once it cools down.
22. If abnormal noise is observed, turn off flame. Check and place burner caps correctly after appliance cools down. Contact Towngas Company for inspection if problem persists.

Important Safety Instructions

Maintenance

1. Check condition of gas hose regularly. Ensure that it is free from kink or crack. Contact Towngas Company to replace it if damage is found.
2. Allow the appliance to cool down completely before cleaning.
3. Wear gloves to protect the hands when cleaning the appliance. Avoid to touch interior of appliance to prevent cut injury.
4. Dry burner caps completely with dry cloth after washing. Burner flame holes must be free from water lest combustion is affected.
5. Before and after use, notice the condition and cleanliness of burner. The following abnormal conditions will incur abnormal combustion and thus damage of the appliance. Ensure undertaking measures to rectify the problem accordingly.

Abnormal Condition	Handling Measure
Burner caps are deformed.	Contact Towngas Company to replace the parts.
Burner caps are tilted.	Place burner caps properly. Burner caps must not be tilted.
Burner flame holes are blocked by water.	Dry burner caps with cloth and place them properly.
Burner flame holes are blocked by dirt.	Clean burner caps with mild detergent and brush. Dry burner caps with cloth and place them properly.


Product Description

This appliance is designed to meet versatile cooking needs in Hong Kong. The slim body is fitted with quality stainless steel top plate. It performs exceedingly in quality, safety and performance and is reliable, durable, simple to use and easy to clean.

It is equipped with flame failure safety and overheat appliance protection device. In cases of unexpected flame extinguishment or abnormal combustion due to burner blockage, gas is shut off automatically to ensure safety.

Component Name

After Removal of Burner Caps

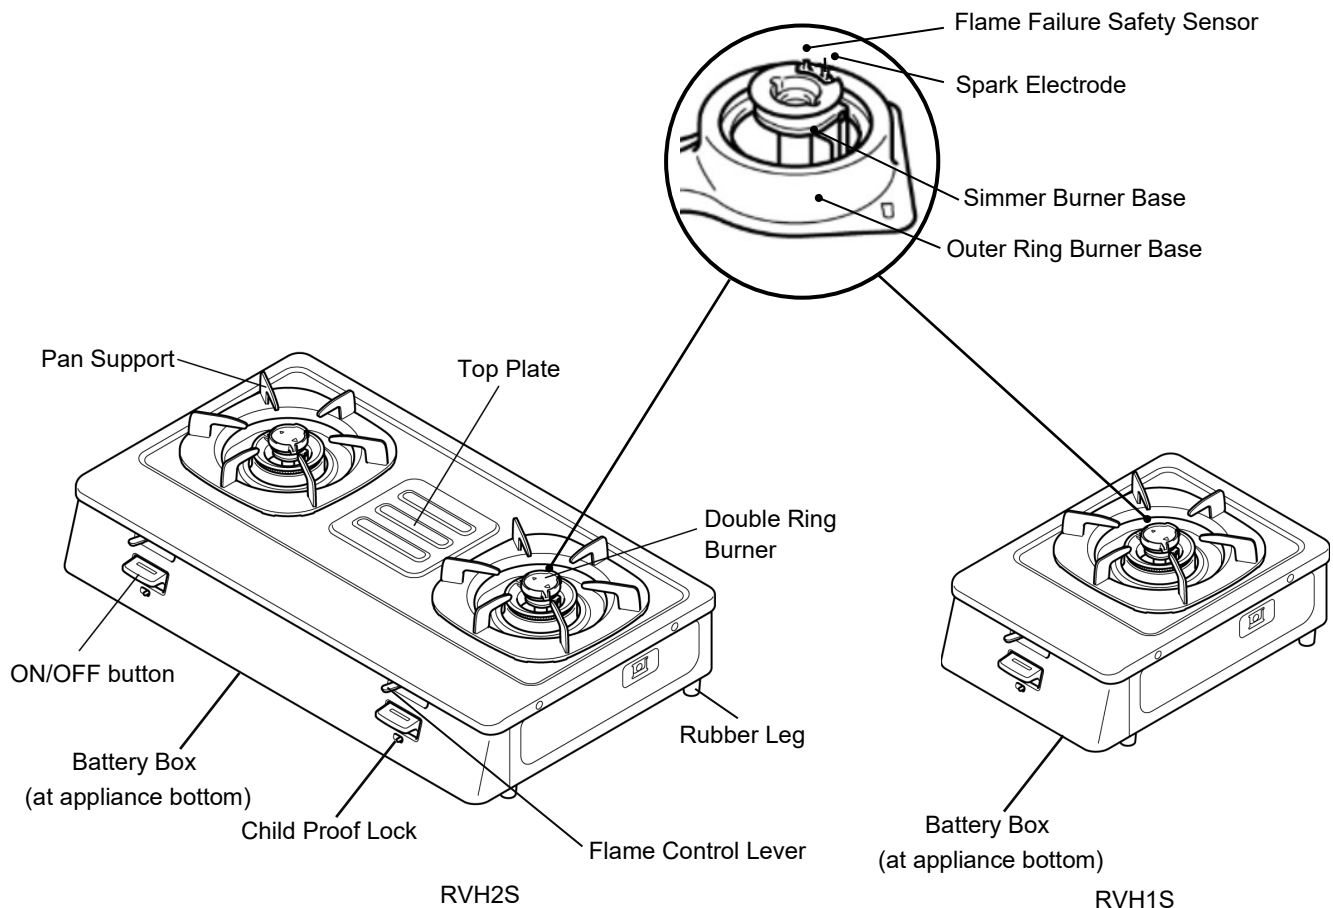


Features include:


- * Powerful double ring burner with independent simmer for versatile cooking needs
- * Push-button spark ignition and lever flame control for easy and flexible operation
- * Brass burner caps with thermal resistant coating and slot type flame holes for durability and easy cleaning
- * Flame failure safety device and overheat protection device for safety

Installation Instructions


- * Place the hotplate on a stable and level surface.
- * Connect the hotplate with approved flexible gas hose.
- * Flexible gas hose can be placed under appliance, however it must be placed horizontally and close to cooking bench in order to avoid touching burner base part.
- * Place pan supports, burner caps and drip pans correctly before use.

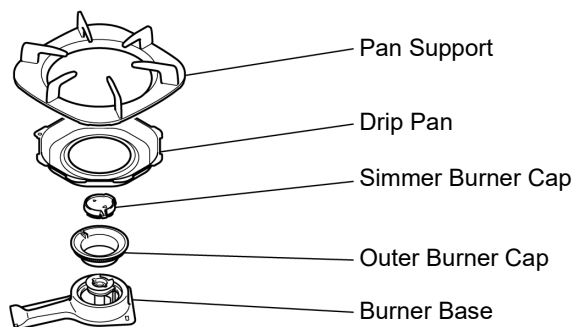


1. Pan Support
Fit pan support bottom guide pins into top plate holes.

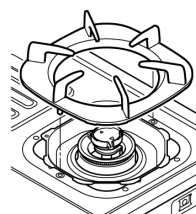

2. Burner Cap
Improper placement will cause poor combustion and burner cap deformation.

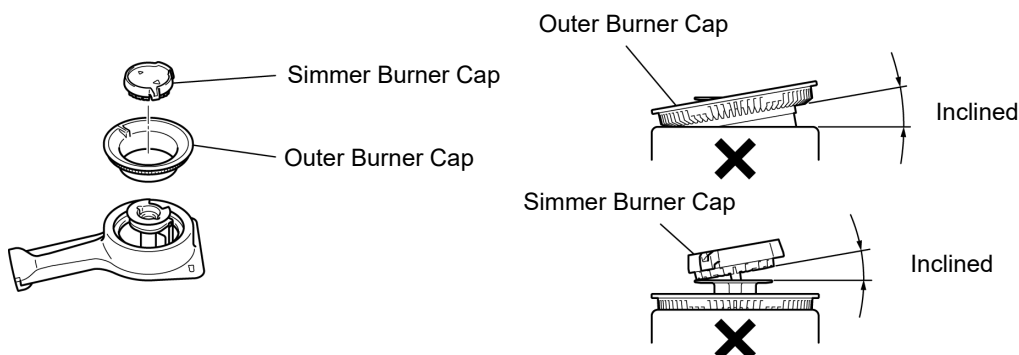


3. Drip Pan
Place drip pan so that it does not tilt.

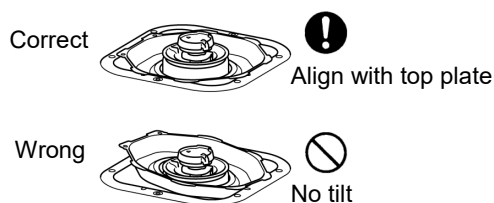

Operating Instructions

1. Ignition

Press ON/OFF button fully. Spark will ignite burner. Keep pressing the button several seconds and then release it. If flame does not persist, press button once to turn off, and then repeat ignition procedure.

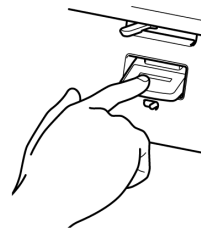

2. Flame Adjustment

Flame power is adjusted by flame control lever.

To adjust simmer, slide the flame control lever between ① and ②.



To adjust outer flame, slide the flame control lever between ② and ③.

There is a click when the lever is moved across position ②.

When lever is moved from ① to ②, the simmer is from minimum to maximum and the outer flame is off.

When lever is moved from ③ to ②, the simmer is at maximum and the outer flame is from maximum to minimum.

Please slide flame control lever slowly.

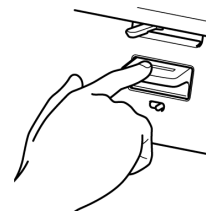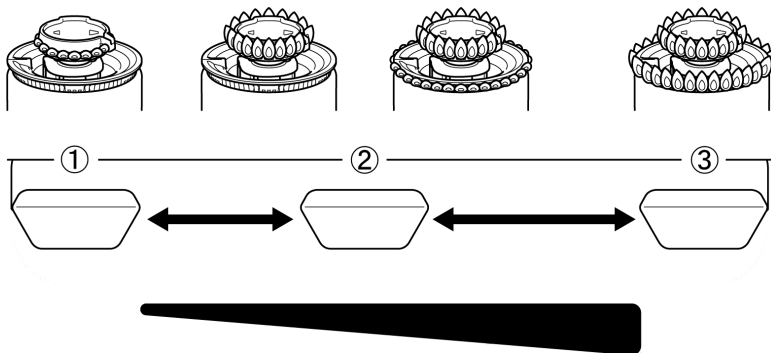

3. Turn Off

Press ON/OFF button once and then release it. Button returns to OFF position.

4. Accidental Flame Off



If the flame is off unexpectedly, press button once to return to OFF position. Ensure cleanliness of burner before ignite burner again. If flame holes of burner are blocked, allow burner to cool down and clean it. Wipe it dry before ignite burner again.

5. Child Proof Lock

The child proof lock is located under the ON/OFF button of each burner. The ON/OFF button cannot be pushed down when the child proof lock control lever slides to right hand side. Please slide back the control lever to left hand side for ignition.

6. Change Battery

Change battery when sparking becomes slow (1 to 2 sparks per second). Battery box is located at bottom. Note the polarity of battery.

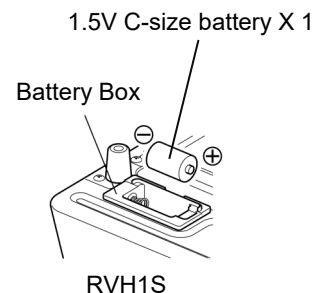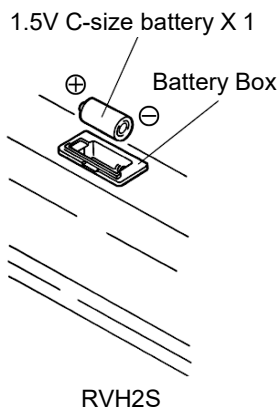

RVH2S

RVH1S

Maintenance

Attention: Allow the appliance to cool down before performing any maintenance and cleaning. Wear gloves to protect the hands while cleaning.

To maintain the appliance properly, follow the following instructions to clean it regularly:

- Do not use steam cleaners for cleaning;
- The metal and enameled parts must be cleaned with suitable non-abrasive and non-corrosive detergents. Avoid using chlorine-based detergents (e.g. bleach);
- Avoid leaving acidic or alkaline substances on the appliance (e.g. vinegar, brine, lemon juice);
- Clean and tidy up the appliance after spillage of liquid once it cools down;
- The burner caps must be washed regularly with warm water and detergent. Remove any grime and keep the flame holes of burners away from blockage;
- Dry the burner caps completely after wash and ensure that all flame holes of burner are not clogged;
- Replace burner caps on burner bases correctly. Ensure that they are not tilted or reversed;
- Regularly check the flame failure safety sensors and spark electrodes. In case of sticking with stains, clean them with soft brush.

Troubleshooting

Some malfunctions can be handled by user. But if the following remedial actions are not effective, please call Towngas Customer Service Hotline at 2880 6988.

Fault	Cause	Remedy
1. No ignition	Spark electrode is wet.	Dry the spark electrode with dry cloth.
	Spark electrode has dirt.	Clean the spark electrode.
	Battery is consumed.	Change battery.
	Battery polarity is wrongly placed.	Place battery correctly.
2. No flame	Gas meter valve and / or appliance gas supply valve is turned off.	Open gas meter valve and/or appliance gas supply valve completely.
	Burner is blocked by aluminum foil.	Remove aluminum foil.
3. Flame cannot be held	Not fully press ON / OFF button.	Fully press ON / OFF button, and hold it for several seconds.
	Flame failure safety sensor has dirt.	Clean flame failure safety sensor.
4. Flame off when using	Small flame is blown off by wind.	Wait for 1 minute, restart ignition.
	Cooking spillage blocks burner and incurs abnormal combustion that activates overheat protection device.	Allow burner to cool down, clean and dry it, restart ignition.
5. Yellow flame	Burner has dirt.	Wash burner caps in warm water with detergent. Wipe them dry and replace them properly. Restart ignition .
6. Unstable flame	Incorrect placement of burner caps.	After cooling, replace burner caps properly, then restart ignition.
7. Abnormal noise when using	Incorrect placement of burner caps.	Turn off flame. Replace burner caps correctly after appliance cools down and restart ignition.
8. Pop sound when turning off flame	Instant combustion of gas remained in burner.	Normal phenomenon.

Specifications

Model			RVH1S	RVH2S
Gas Type			Hong Kong Town Gas	Hong Kong Town Gas
Number of Burners			1	2
Rated Heat Input (kW)	Total		5.5	10.9
	Left Burner		-	5.5
	Right Burner		-	5.5
Gas Pressure (kPa)			1.5	1.5
Gas Inlet Connection			1/2 inch B.S.P (Male)	1/2 inch B.S.P (Male)
Overall Dimensions (mm)	Height	To top plate	138	138
		To pan support	176	176
	Width		282	702
	Depth	Body	412	412
		Including gas connection	446	446
	Weight (kg)			3.9
Ignition Device			Electronic ignitor	Electronic ignitor
Flame Failure Safety Device			Thermoelectric type	Thermoelectric type
Overheat Protection Device			Bimetal thermal switch	Bimetal thermal switch
Power Supply			1.5V C-size battery (1 pc)	1.5V C-size battery (1 pc)



香港中華煤氣有限公司
The Hong Kong and China Gas Company Limited

JK0069-047X01(00)
202210 ©